

## ONVIF Camera Setup

ONVIF Camera setting options may vary slightly; therefore there is no way for us to provide you with exact step by step instructions. This is simply a guide/checklist you can choose to go through to insure our Fike Video Analytics<sup>®</sup> Server can communicate with your ONVIF camera.

### First:

1. Make sure your camera's IP address is compatible with your network. If it is not, change it.
2. Using your ONVIF camera manual, make sure your camera is setup for ONVIF.
3. Connect camera to the network and see if you are able to discover the camera using the Fike Video Analytics video management software. If you can discover the camera and add it to the video management software, you're done. If you cannot discover the camera please use the checklist below to troubleshoot.

### Troubleshooting:

1. Enter the camera's default IP Address into a web browser to access camera's settings
2. You may need to update camera firmware software. Determine what version is loaded onto the camera. Then go to ONVIF's website, <http://www.onvif.org/ConformantProducts>. Go to 'Find A Product' Click on the camera's manufacturer and find your model camera. It will show you what minimum software version is required for ONVIF.
3. You can choose to add/change passwords for cameras and if allowed set it up with Administrator rights. It is ideal to have all the cameras on your network setup with the same login username/password e.g. (admin/axonx) so you only need to enter it once into the video management software. If every camera is setup with a different login, you will need to enter every camera's login username/password in the video management software in order to add them to the system.
4. Make sure the time zone on the camera matches the same time zone on the NVR or Synchronize the camera with computer (NVR) time. Mismatched date time settings may result in authentication errors.
5. Make sure all relevant ONVIF options in camera configuration as described in camera manufacturer's manuals are turned on
6. Change IP Address to desired new address (dhcp or static)
7. Restart camera to except the new IP address

For further assistance, please call Fike Video Analytics Corporation technical support at (844-345-3843).

This page intentionally left blank.