

SRD RELOAD KIT

After activation the Fike Slow Rate Discharge (SRD) container can be refurbished using the Fike reload parts as detailed below.

 
Refurbishing the container must only be performed by a Fike service technician or trained site personnel, using original Fike parts only!

The reload kit SRD consists of following parts (refer to sketch)

- ① Suppressant powder → shipped in a white plastic bucket
- ② Initiator boss
- ③ O-ring initiator boss
- ④ O-ring + bursting disc → 2 until 6 are shipped in a card board box
- ⑤ Bursting disc assembly
- ⑥ Nozzle plug assembly

The initiator in safety enclosure

The Valve Actuator Assembly (GCA) will be shipped in a separate wooden box according to ADR and IATA regulations for 1.4S products (unless not required by local, national authorities).

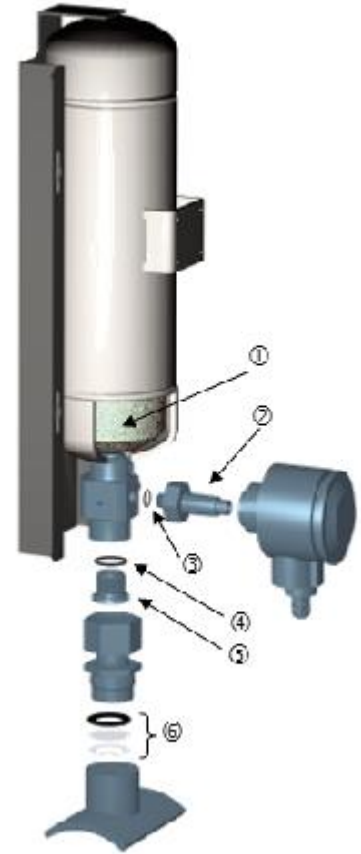

Notes

Two O-rings will be supplied for item 4. Only one of them will be used depending on the O-ring groove on your SRD container.