

DATA SHEET

EM-BI-II EXPLOSION VENT BURST INDICATOR

DESCRIPTION

The Fike EM-BI-II Explosion Vent Burst Indicators have been developed to detect the opening of explosion vents and can initiate a process shutdown. This will reduce the effects of the ensuing explosion and may avoid further propagation of flames or burning particles to other parts of the process. The EM-BI-II Indicator can be installed externally on most Fike explosion vents using a simple mounting bracket (included in kit). The EM-BI-II Explosion Vent Burst Indicator will instantaneously detect the movement of the explosion vent when opening via a flexible Stainless Steel sensor. This movement will initiate the electrical changeover of a contact (see installation sketch below).







APPROVALS:

- CE
- ATEX

FEATURES AND BENEFITS

- Rigid enclosure with shock proof thermoplastic construction
- Corrosion resistant / weatherproof design
- Easy installation and replacement; no requirement for local junction box, directly wired
- 1 normally closed contact (NC) and 1 normally open contact (NO) rated 6A / 250VAC;
 0.25A / 230VDC
- Reusable after an explosion; dependent upon severity
- IP67
- ATEX approved

www.Fike.com Form No. X.2.61.01-3, August, 2016



SPECIFICATIONS

Туре	EM-BI-II (P/N 29914700-S)	
Materials	Enclosure Glass-fibre reinforced Shock-proof thermoplastic Self-extinguishing UL 94-V0	
Ambient Temperature	-20°C to +65°C	
Suitable for Explosion Vent Models	CV / HI-CV / CV-S / HI-CV-S / CV-CF / HI-CV-CF / CV-I ¹ / CV-S-I ¹ / Sani-V / Sani-V-S / EleGuard ²	
Supply and Signal Circuit	Voltage Ui	250VAC
	Current li	6A
	le / Ue	6A / 250VAC 0.25A / 230VDC
Electrical Connection	Contact Configuration	1 NC and 1 NO
	Contact Material	Silver
	Gland	M20 x 1.5
	Terminals	M3 Screw Clamps
	Cores	Max. 1.5 mm²
Cable	The electrical junction box is provided with a cable gland P_{G} 13.5	
Approvals	CE DMT 01 ATEX E118 Ex II 2G Ex de IIC T6 Ex II 2D ex tD A21 IP67 T80°C	


⁽¹⁾ Temperature max. 80°C.

⁽²⁾ With special support.



MOUNTING / POSITIONING OF FIKE EXPLOSION VENT BURST INDICATOR

For rectangular explosion vents

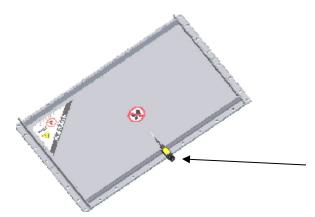


Install EM-BI-II burst indicator at NON-OPENING SIDE

For circular explosion vents



Install EM-BI-II burst indicator at NON-OPENING SIDE

Components and accessories

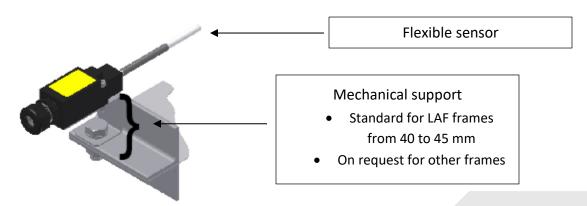

www.Fike.com

Form No X.2.61.01-3, August, 2016