



<http://www.fike.co.uk/resource-downloads/twinflex/>

### General Description

The Twinflex Hipoint unit allows for audible indication when the system enters an alarm condition. This device is compatible with the Twinflex 2-wire range of Fire Alarm equipment and comprises a 2-wire zone-powered sounder. This device may be installed on the same zone as the Multipoint detector/sounder and associated Twinflex devices.

### Before Installation

The Sounder must be installed in compliance with the control panel installation manual. The installation must also meet the requirements of any local authority.

### Spacing

Fike recommends spacing of sounders in accordance with any local authority.

### Device Installation


Fix the back box in a suitable position using at least two screw holes/slots, remembering to allow enough cable length for installation. All wiring must be installed in compliance with the recommendations laid out by any local authority as well as any special recommendations documented in the control panel installation manual.

### Connections


The cabling used should be of a 2-core 1.5mm<sup>2</sup> screened, fire resistant type (e.g. FP200 or equivalent), and is to be wired in the form of a screened 2-core radial circuit (with no spurs) from the control panel, terminating at the last ("End of Line") device.

No screen connection is allowed for within the device. Incoming and outgoing cable screens must therefore be connected through using a suitable connector. It is important to maintain the screen continuity in order to protect against data corruption from interference.


Once all testing has been carried out on the cabling and continuity & insulation has been proven, the Hipoint front may be fitted. The Hipoint front is fitted by locating the rubber seal in the groove on the back box and then pushing the front unit gently home. The four fixing screws may then be tightened as required.

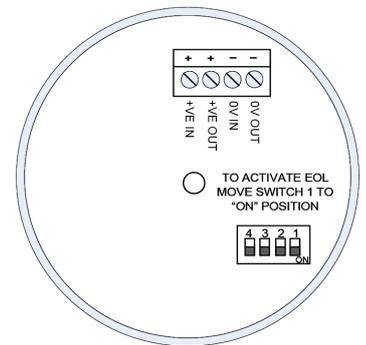

**Remember that the device at the end of the line must have its EOL signal activated using the relevant DIL switch. Do not use a resistor or capacitor (or another manufacturer's End of Line device) as the end of line, as this may prevent correct operation of the zone.**

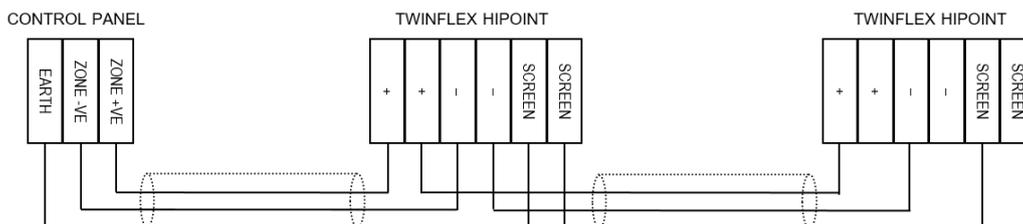

Twinflex Hipoints can be mixed on the same zone as other types of Twinflex device (eg. Twinflex Multipoint Detectors). The above diagram shows how to make the zone positive, zone negative and screen connections between the control panel and Twinflex Hipoints. Refer to the instruction leaflets supplied with other Twinflex devices for their equivalent wiring/terminal labelling details.

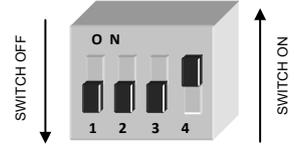

Please note that the cable screens should only be connected to each other (and not to the building earth) at the Hipoints. The cable screen is connected to earth at the panel end only, via the zone “SCRN” terminal (or EARTH terminal on the Twinflex V3 2/4/8 Zone panels).

		DIL SWITCH SETTINGS			
		1	2	3	4
End of line	Enabled	ON			
	Disabled	OFF			
Sound Levels	High		ON		
	Low		OFF		
Sound Patterns	Sound OFF			ON	ON
	Dual Tone UK Evacuate – 800 & 970 Hz			ON	OFF
	Slow Whoop Up - 500 to 1200 Hz sweep up			OFF	OFF
	Dual Tone French Warble – 440 & 550 HZ			OFF	ON

## Technical Data

<b>Dimensions</b>	Width x.....	123mm	
	Height.....	130mm	
	Depth.....	101mm	
<b>Operating Temperature</b>	.....	-10°C to +50°C	
<b>Voltage Ranges</b>	DC Output from Mains Powered Panel.....	25.5 to 35V DC	
	DC Output from Battery Powered Panel.....	20 to 26V DC	
<b>Operating Current (Typical)</b>	Quiescent.....	185 uA	
	End of line ON if applicable..... (in addition to Quiescent)	175 uA	
	Alarm Sounding - Sounder High.....	14.5 mA	
	Alarm Sounding - Sounder Low.....	12.6 mA	
<b>Loading Units</b>		<b>V3 Panel</b>	<b>Pro/Pro<sup>2</sup> Panel</b>
	Max Loading Units per zone.....	27 SLU	160 DLU
	Sounder High.....	2.5 SLU	14.5 DLU
	Sounder Low.....	2.0 SLU	13.0 DLU
	Sounder High.....	90+ dB(A)	
	Sounder Low.....	65+ dB(A)	
<b>Flammability</b>	.....	UL94-V2	
<b>IP Rating</b>	.....	IP 55*	
<b>Part Code</b>	.....	302 0004	

\* Not EN54-3 compliant

## Technical Support

**Contact your supplier for technical support on this product.**

Due to the complexity and inherent importance of a life risk type system training on this equipment is essential, and commissioning should only be carried out by competent persons. Fike cannot guarantee the operation of any equipment unless all documented instructions are complied with, without variation.

Fike's policy is one of continual improvement and the right to change a specification at any time without notice is reserved. Whilst every care has been taken to ensure that the contents of this document are correct at time of publication, Fike shall be under no liability whatsoever in respect of such contents. E&OE



Fike Safety Technology Ltd  
 Unit 31, Springvale Industrial Estate  
 Cwmbran  
 NP44 5BD  
 Tel: 01633 865 558 | Email: [fstinfo@fike.com](mailto:fstinfo@fike.com)

 2831	
<b>Fike Safety Technology Ltd</b> <b>Unit 31, Springvale Ind. Est.</b> <b>Torfaen, NP44 5BD</b> <b>11</b> <b>DoP-302-0004</b>	
EN54-3: 2001 +A1: 2002 +A2: 2006 Sounder Technical Data: See 26-0747 <b>302-0004</b> <b>Intended for use in the fire detection and fire alarm</b> <b>Systems in and around buildings</b>	
Essential characteristics	Performance
Nominal activation conditions/Sensitivity, response delay (response time) and performance under fire conditions	Pass
Operational reliability	Pass
Tolerance to supply voltage	Pass
Durability of operational reliability and response delay, Temperature resistance	Pass
Durability of operational reliability, Vibration resistance	Pass
Durability of operational reliability, Humidity resistance	Pass
Durability of operational reliability, Corrosion resistance	Pass
Durability of operational reliability, Electrical stability	Pass
Performance under fire conditions	Pass
Durability of operational reliability, Resistance to ingress	Pass