

# Remote Display Enclosure Installation Instructions









### **DESCRIPTION**

The Remote Display Enclosure (P/N 10-2794-X) is made of 18 gauge steel with a baked on enamel finish (red or black) and weighs approximately 14 lbs. (6.4 kg) without electronics installed. The enclosure is designed so that it can be surface or flush mounted to the wall. Numerous conduit knockouts are provided on all four sides of the enclosure to facilitate easy wiring access into the enclosure. The conduit knockouts allow connection of either ½" or ¾" conduit.

The enclosure's exterior door is hinged on the left side of the back-box and can be removed during installation. The door is equipped with a key-lock to prevent unauthorized access to system components. The enclosure is also equipped with an internal dead-front door that is designed to isolate the operator from the internal electronics and wiring, yet allows access to the paging controls and microphone. The dead-front door is hinged to allow access to the internal electronics and wiring for servicing purposes.


The enclosure is designed to house the following electronic components, which are shipped separately and must be installed in the field.

- A. 14-Button Remote Display, P/N 10-2646
- B. Smoke Control Switch Card, P/N 10-2658
- C. Input/Output Switch Card, P/N 10-2659
- D. 20 Zone Annunciator, P/N 10-2660
- E. City Tie Disconnect, P/N 10-2721-X
- F. Single Card Cover Plate, P/N 10-2697-X

See Exhibit 2 for component layout within the enclosure.

### SUPPLIED MOUNTING HARDWARE

The following mounting hardware is supplied with the enclosure for installation of electronic components:

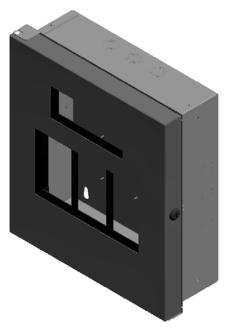

**Exhibit 1: Remote Display Enclosure** (shown without electronic components)

### MOUNTING LOCATION

The following guidelines shall be adhered to when selecting the mounting location for the remote audio enclosure:

- 1. Mount the enclosure on a surface that is vibration free, clean, and dry.
- Mount the enclosure in an area that is free from sources of electromagnetic interference and radio frequency interference; as these are types of problems that could adversely effect the successful operation and useful life of the electronic equipment housed in the enclosure.
- 3. Mount the enclosure in an environment with a nominal room temperature of 15°-27°C (60° 80°F), with a relative humidity of 85 percent.
- 4. Allow sufficient clearance around enclosure to allow door to swing freely.
- 5. Mount enclosure at a height that allows easy access to system electronic components for operation, maintenance and service.

## **INSTALLATION**

- Determine the quantity and size of conduit to be attached to the enclosure and remove appropriate knockouts. Do not use conduit knockouts located in the bottom of the enclosure if installing batteries.
  - Note: All wiring connections within the remote display enclosure are power-limited. No wiring segregation per NEC Article 760 is required.
- 2. Mount the enclosure at the selected location. See Exhibit 3 for enclosure dimensions. Both the outer and inner (dead-front) doors can be removed to make installation of the back box easier. Remove the outer door by unscrewing the two hinge screws. Remove the inner door by simply lifting it off its hinge pins.

## **Surface Mounting**

Utilize the four tear-drop openings in the back of the back box to secure it to the mounting surface with suitable anchors.


### Flush Mounting

Cut an opening in the wall to fit the back box dimensions and secure the box in place utilizing the through holes provided on the sides of the back box.

## **∆**CAUTION


The enclosure is NOT fire rated. Do not mount on or in a fire rated wall unless wall is properly framed to maintain specified fire rating.

- Reinstall the inner and outer doors and connect the door grounding wires using hardware provided, as shown in Exhibit 4. Adjust routing of grounding wire if necessary to allow full movement of both the inner and outer doors.
- 4. After enclosure is cleaned and free from all construction dust; install electronic components into the enclosure using the installation instructions supplied with each component.

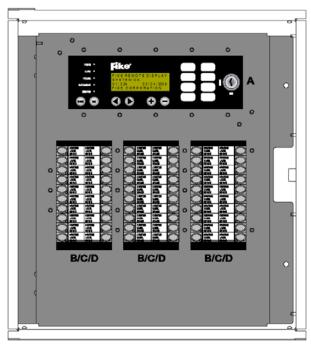


**Exhibit 2: Enclosure Layout** (shown with dead-front door closed)

Note: Components shown in Exhibit 2 are mounted to the enclosure's dead-front door panel.

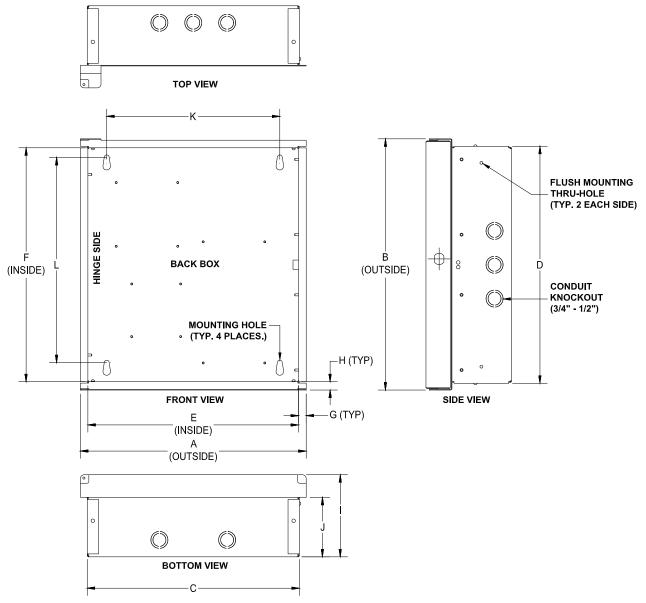

**Exhibit 3: Enclosure Dimensions** 

Enclosure Dimensions inches (cm)			
Α	15.00 (38.1)	J	3.95 (10.0)
В	16.70 (42.4)	K	11.50 (29.2)
С	14.09 (35.8)	L	13.65 (34.7)
D	15.75 (40.0)		
Ε	14.00 (35.6)		
F	15.55 (39.5)		
G	0.50 (1.27)		
Н	0.55 (1.40)		
	5.45 (13.8)		

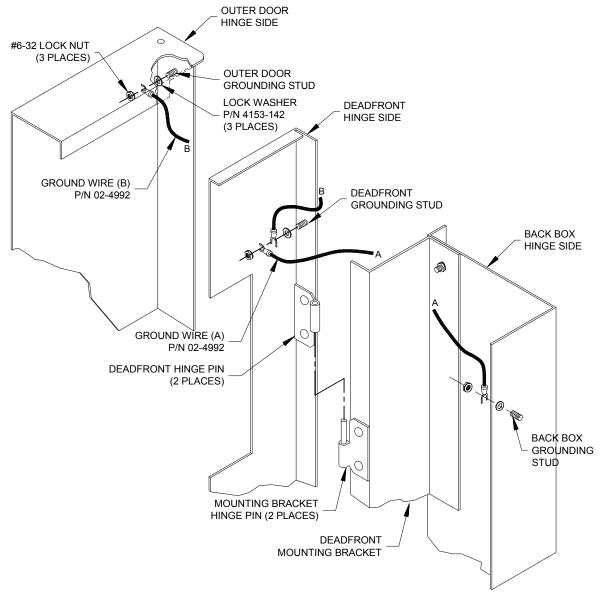

**Exhibit 4: Ground Wire Installation**