

## FIK-M501M Monitor Module

### SPECIFICATIONS

Nominal Operating Voltage:	15-32 VDC
Average Operating Current:	375µA Maximum (group poll); 350µA (direct poll); 600µA Maximum Communicating, IDC Shorted)
EOL Resistance:	47K Ohms
Maximum SLC Wiring Resistance:	40 Ohms
Max. IDC Wiring Resistance:	1,500 Ohms
Maximum IDC Voltage:	11 Volts
Maximum IDC Current:	450µA
Temperature Range:	32°F to 120°F (0°C to 49°C)
Humidity:	10% to 93% Non-condensing
Dimensions:	1.3" H x 2.75" W x 0.5" D
Wire length:	6" minimum

For system/product documentation including installation, operation, and maintenance, scan QR code or enter URL provided.



<http://www.fike.com/06-912>

### BEFORE INSTALLING

This information is included as a quick reference installation guide. Refer to the control panel installation manual for detailed system information. If the modules will be installed in an existing operational system, inform the operator and local authority that the system will be temporarily out of service. Disconnect power to the control panel before installing the modules.

NOTICE: This manual should be left with the owner/user of this equipment.

### GENERAL DESCRIPTION

The FIK-M501M monitor module can be installed in a single gang junction box directly behind the monitored unit. Its small size and light weight allow it to be installed without rigid mounting. (See Figure 1.) The FIK-M501M is intended for use in intelligent, two-wire systems where the individual address of each module is selected using rotary switches. It provides a Class B initiating device circuit for normally open contact fire alarm and security devices.

### COMPATIBILITY REQUIREMENTS

To ensure proper operation, this module shall be connected to a compatible Fike system control panel (list available from Fike).


### MOUNTING AND WIRING

NOTE: This module is intended to be wired and mounted without rigid connections inside a standard electrical box. All wiring must conform to applicable local codes, ordinances and regulations.

1. Connect the red (+) and black (-) wires to the positive and negative loop power leads of the signaling line circuit (SLC).
2. Connect the violet (+) and yellow (-) wires to a two-wire, normally open initiating loop.
3. Install the specified EOL resistor value to terminate the initiating loop.
4. Set the address on the module per job drawings.
5. Install the module in the desired mounting location.


NOTE: All references to power limited represent "Power Limited (Class 2)".

FIGURE 1.

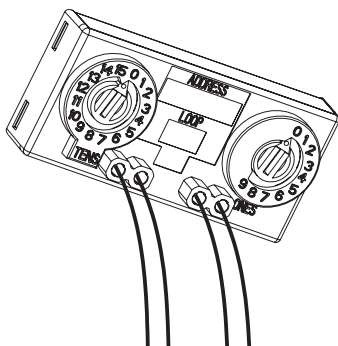

C1063-00

FIGURE 2. TYPICAL CLASS B INITIATING DEVICE CIRCUIT CONFIGURATION

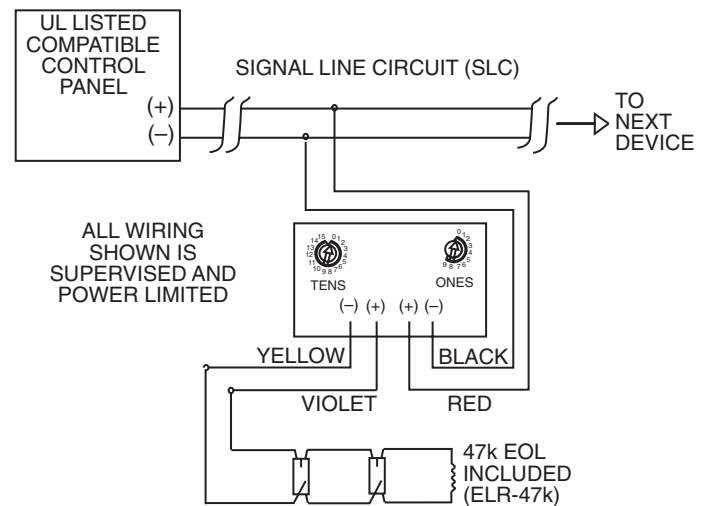

C0614-02

### DEVICE AND SYSTEM SECURITY

Before installing this product ensure that the tamper seal on the packaging is present and unbroken and the product has not been tampered with since leaving the factory. Do not install this product if there are any indications of tampering. If there are any signs of tampering the product should be returned to the point of purchase.

It is the responsibility of the system owner to ensure that all system components, i.e. devices, panels, wiring etc., are adequately protected to avoid tampering of the system that could result in information disclosure, spoofing, and integrity violation.