

Operation and Maintenance Manual



10-064, CyberCat 1016

10-066, CyberCat 254

Addressable Fire Alarm Control System



P/N 06-326-2
(Rev. 7 / October, 2016)

Fike®

SOLUTIONS

- / Fire Protection
- / Explosion Protection
- / Overpressure Protection
- / Pressure Activation

DEVELOPED BY	<p>Fike 704 SW 10th Street P.O. Box 610 Blue Springs, Missouri 64013 U.S.A. Phone: (800) 979-FIKE (3453) (816) 229-3405 Fax: (816) 229-0314</p>
COPYRIGHT NOTICE	<p>Copyright © 2016. All rights reserved.</p> <p>Fike copyrights this manual and products it describes. You may not reproduce, transmit, transcribe, or any part of this manual without express, written permission from Fike.</p> <p>This manual contains proprietary information intended for distribution to authorized persons or companies for the sole purpose of conducting business with Fike. If you distribute any information contained in this manual to unauthorized persons, you have violated all distributor agreements and we may take legal action.</p>
TRADEMARKS	<p>Fike® is a registered trademark of Fike.</p> <p>CyberCat® is a registered trademark of Fike.</p> <p>All other trademarks, trade names or company names referenced herein are the property of their respective owners.</p>
DISCLAIMER	<p>This document is only intended to be a guideline and is not applicable to all situations. Information subject to full disclaimer at www.fike.com/disclaimer.</p>
QUALITY	<p>Fike has maintained ISO 9001 certification since 1996. Prior to shipment, we thoroughly test our products and review our documentation to assure the highest quality in all respects.</p>
WARRANTY	<p>Fike provides a one-year limited manufacturer's warranty on this product. All warranty returns must be returned from an authorized Fike Distributor. Contact Fike's Marketing department for further warranty information.</p> <p>Fike maintains a repair department that is available to repair and return existing electronic components or exchange/purchase previously repaired inventory component (advance replacement). All returns must be approved prior to return. A Material Return Authorization (MRA) number must be indicated on the box of the item being returned. Contact the appropriate Regional Sales Manager for further information regarding product return procedures.</p>
LIMITATIONS OF LIABILITY	<p>Installation in accordance with this manual, applicable codes, and the instructions of the Authority Having Jurisdiction is mandatory. Fike cannot be held liable for any incidental or consequential damages arising from the loss of property or other damages or losses resulting from the use or misuse of Fike products beyond the cost of repair or replacement of any defective components. Fike reserves the right to make product improvements and change product specifications at any time.</p> <p>While every precaution has been taken during the preparation of this manual to ensure the accuracy of its content, Fike assumes no responsibility for errors or omissions.</p>

REVISION HISTORY

Document Title: CyberCat Addressable Fire Alarm System Operation and Maintenance Manual

Document Reorder Number: 06-326-2

Revision	Section	Date	Reason for Change
0	All Sections	01/2011	Separated manual into separate Installation, Operation and Programming Manuals
1	Section 1.4 and 1.5	06/2011	Changed CyberCat manual P/N from 06-326-1 to 06-326 and added peripheral bus programming feature to Exhibit 1-4.
2	All Sections	12/2011	Added MNS features
3	Section 1, 3, 5, Appendix A	04/2012	Added FFAST detector and Voice Priorities
4	Sections 1, 3, 6, and Appendix A	08/2013	Added programming features for AHU restart, audio sync, and MNS activation via SLC input modules.
5	All Sections	08/2014	Added FFAST XT aspirating smoke detector
6	All Sections	09/2015	Clarifications and General Updates
7	All Sections	10/2016	Added VESDA Modbus HLI and new FFAST detectors; Firmware V7.20

TABLE OF CONTENTS

SECTION	DESCRIPTION	PAGE
1.0	Introduction	1-1
1.1	About This Manual	1-1
1.2	Product Support	1-1
1.3	Safety Information	1-1
1.4	Related Documentation	1-1
1.5	Understanding CyberCat	1-2
1.5.1	System Controller.....	1-2
1.5.2	Intelligent Addressable Devices.....	1-2
1.5.3	Peripheral Devices.....	1-2
1.5.4	Emergency Communication System.....	1-3
1.6	UL (90.23) Operational Limitations	1-4
2.0	User Interface	2-1
2.1	CyberCat Main Display	2-1
2.1.1	System Status LEDs	2-2
2.1.2	History Navigation Buttons.....	2-3
2.1.3	Control Buttons	2-3
2.1.4	Navigation and Function Buttons	2-4
2.1.5	LCD Display	2-5
2.1.5.1	System Normal Display.....	2-5
2.1.5.2	System Event Display	2-6
2.1.5.3	Top Level Menu	2-7
2.2	Password Protection	2-8
2.2.1	Logging onto the System	2-9
2.2.2	Changing the System Administrator Password	2-9
3.0	System Operation	3-1
3.1	General Operation.....	3-1
3.1.1	AC Trouble Delay	3-1
3.1.2	Daylight Savings	3-1
3.1.3	Silence Inhibit.....	3-1
3.1.4	Silence Reminder.....	3-1
3.1.5	State Counters	3-2
3.1.6	Network Operation	3-2
3.1.6.1	IP Network.....	3-2
3.1.7	Positive Alarm Sequence.....	3-3
3.1.8	Smoke Control Operation	3-3
3.1.9	Emergency Communication System.....	3-3
3.1.9.1	Voice System Priorities	3-4
3.2	Panel Menu Structure	3-5
3.3	Panel Operation by Event	3-5
3.3.1	Power-Up Reset.....	3-5
3.3.2	Normal State	3-6
3.3.3	Alarm/Waterflow State	3-7
3.3.4	Alarm Verification	3-8
3.3.5	Summing Alarm State	3-9
3.3.6	Trouble State.....	3-10
3.3.7	Supervisory State.....	3-11
3.3.8	Pre-Alarm State.....	3-12
3.3.9	Process State.....	3-13
3.3.10	Zone Disable State.....	3-14
3.3.11	Drill State.....	3-15
3.3.12	Walk-Test Operation	3-16

SECTION	DESCRIPTION	PAGE
3.3.13	Fan Restart Operation	3-17
3.3.13.1	CRM4 Fan Restart Operation.....	3-17
3.3.13.2	Addressable Relay Fan Restart Operation.....	3-18
3.3.13.2.1	AHU Fire Key.....	3-18
3.4	Intelligent Detector Features	3-19
3.4.1	Alarm Verification	3-19
3.4.2	Pre-Alarm.....	3-19
3.4.3	Acclimate	3-20
3.4.4	Drift Compensation.....	3-20
3.4.5	Day/Night/Holiday Settings.....	3-20
3.4.6	Flame Enhance	3-20
3.4.7	Summing.....	3-21
3.4.8	Smolder	3-21
3.4.9	Walk-Test.....	3-21
4.0	System History	4-1
4.1	Overview.....	4-1
4.2	Viewing History.....	4-1
4.2.1	Alarm History	4-3
4.2.2	Supervisory History	4-3
4.2.3	Trouble History	4-4
4.2.4	Events History	4-4
4.2.5	Zone History	4-5
4.2.6	Erase History	4-5
4.2.7	Viewing Additional Event Information.....	4-6
5.0	System Diagnostics	5-1
5.1	Overview.....	5-1
5.2	Diagnosing Problems	5-1
5.3	Removing or Replacing Panel Components	5-1
5.4	Diagnostic Menu 1	5-2
5.4.1	Device Diagnostic.....	5-2
5.4.1.1	Device Type, Location and LED Diagnostics	5-3
5.4.1.2	Device Serial Number Diagnostic.....	5-4
5.4.2	Value 1 Diagnostic.....	5-5
5.4.3	Value 2 Diagnostic.....	5-6
5.4.4	LED Test.....	5-7
5.4.5	CRC (Cyclic Redundancy Count).....	5-7
5.5	Diagnostic Menu 2	5-7
5.5.1	Keypad Diagnostics.....	5-8
5.5.2	VESDA 1 Diagnostics.....	5-8
5.5.3	VESDA 2 Diagnostics.....	5-9
5.5.4	Peripheral Diagnostics.....	5-10
5.5.4.1	Fire-Phone Diagnostics	5-11
5.5.5	VESDAnet Communications.....	5-12
5.6	Diagnostic Menu 3	5-13
5.6.1	Network Diagnostic 1.....	5-13
5.6.2	Network Diagnostic 2.....	5-14
5.6.3	Network Diagnostic 3.....	5-15
5.6.4	Network Reset	5-15
5.6.5	History Diagnostics.....	5-16
5.6.6	Board Communication Diagnostics	5-17

SECTION	DESCRIPTION	PAGE
5.7	Diagnostic Menu 4	5-17
5.7.1	Amplifier Status	5-18
5.7.2	Peripheral Supervision Data	5-19
5.7.3	Voice Zones	5-22
5.7.3.1	Voice Zones Status	5-22
5.7.3.2	Voice Zones Priorities	5-23
5.7.4	Peripheral Firmware Version	5-24
5.8	Diagnostic Menu 5	5-25
5.8.1	Page Status	5-25
5.8.2	Audio Priority Status	5-26
5.8.3	Play Message ID Status	5-27
5.8.4	FAAST Detector Status	5-28
5.9	Voltages	5-29
6.0	System Maintenance	6-1
6.1	Overview	6-1
6.2	Routine Maintenance	6-1
6.3	Fuse Replacement	6-2
6.4	Panel Maintenance Menus	6-3
6.4.1	Maintenance Menu 1	6-3
6.4.1.1	Device Read	6-3
6.4.1.2	Device Address	6-4
6.4.1.3	Device Replace	6-5
6.4.1.4	Walk-Test	6-7
A.	Panel Walk-Test	6-8
B.	IR Tool Walk-Test	6-9
6.4.1.5	Buzzer	6-9
6.4.2	Maintenance Menu 2	6-10
6.4.2.1	Mass Notification System Reset	6-10
6.4.2.2	Mass Notification System Silence	6-11
6.4.2.3	Switch Operation	6-11
6.4.2.4	Device Configuration Read	6-12
6.4.2.5	FAAST	6-13
6.4.2.6	AHU On	6-13
Appendix A		
A.1	CyberCat Menu Structure (V7.00)	A-1

LIST OF EXHIBITS

EXHIBIT	DESCRIPTION	PAGE
1-1	Related Documentation	1-1
1-2 thru 1-44	Programming Features	1-4 thru 1-46
2-1	CyberCat Main Display	2-1
2-2	Status LEDs	2-2
2-3	Status LED Descriptions	2-2
2-4	System Normal Display	2-5
2-5	System Event Display	2-6
2-6	Panel-Loop-Address Display	2-6
2-7	Expanded Custom Message Display	2-6
2-8	Top Level Menu	2-7
2-9	Password Access Levels	2-8
2-10	Password Entry Screen	2-9
2-11	Password Entry Screen	2-9
3-1	Record New Device Display	3-5
3-2	Power-Up Reset Display	3-6
3-3	System Normal Display	3-6
3-4	Alarm Display	3-7
3-5	Alarm Verification Display	3-8
3-6	Summing Alarm Display	3-9
3-7	Trouble Display	3-10
3-8	Supervisory Display	3-11
3-9	Pre-Alarm Display	3-12
3-10	Process Display	3-13
3-11	Zone Disable Display	3-14
3-12	Drill Display	3-15
3-13	Walk-Test Display	3-16
3-14	Automatic Fan Restart Display	3-17
3-15	Manual Fan Restart Display	3-18
3-16	Detector Programming Features	3-19
4-1	Current Events Screen	4-1
4-2	Old Events Screen	4-1
4-3	Top Level Menu	4-2
4-4	History Menu	4-2
4-5	Alarm History Screen	4-3
4-6	Supervisory History Screen	4-3
4-7	Trouble History Screen	4-4
4-8	Events History Screen	4-4
4-9	3,200 Events History Screen	4-4
4-10	Zone History Screen	4-5
4-11	Erase History Screen	4-5
4-12	Erase History Status	4-5
4-13	Additional Information Screen	4-6
4-14	Custom Message Screen	4-6
5-1	Diagnostic Menu 1	5-2
5-2	Device Diagnostic Menu	5-2
5-3	Device Type Diagnostic Screen	5-3
5-4	Device S/N Diagnostic Screen	5-4
5-5	Value 1 Diagnostic Screen	5-5
5-6	Value 2 Diagnostic Screen	5-6
5-7	LED Test Screen	5-7
5-8	CRC Diagnostic Screen	5-7
5-9	Diagnostic Menu 2	5-7

EXHIBIT	DESCRIPTION	PAGE
5-10	Keypad Diagnostics Screen.....	5-8
5-11	VESDA 1 Diagnostics Screen.....	5-8
5-12	VESDA 2 Diagnostics Screen.....	5-9
5-13	Peripheral Diagnostics Screen.....	5-10
5-14	Fire-Phone Diagnostics Screen	5-11
5-15	System Sensor Loop Diagnostics Screen	5-11
5-16	Auxiliary Switch Cards Diagnostics Screen	5-12
5-17	VESDAnet Communication Screen	5-12
5-18	Diagnostic Menu 3	5-13
5-19	Network Diagnostics 1 Screen.....	5-13
5-20	Network Diagnostics 2 Screen.....	5-14
5-21	Network Diagnostics 3 Screen.....	5-15
5-22	Network Reset Screen	5-15
5-23	History Diagnostics Screen.....	5-16
5-24	Board Comm Diagnostic Screen.....	5-17
5-25	Diagnostic Menu 4	5-17
5-26	Amplifier Operation Status Screen.....	5-18
5-27	Peripheral Supervision Data Screen.....	5-19
5-28	Voice Zones Screen.....	5-22
5-29	Voice Zones Status Screen	5-23
5-30	Voice Zones Priorities Screen.....	5-23
5-31	Firmware Version Screen	5-24
5-32	Diagnostic Menu 5	5-25
5-33	Page Status Screen	5-25
5-34	Audio Priority Status Screen	5-26
5-35	Play Message ID Status Screen	5-27
5-36	FAAST Detector Selection Screen.....	5-28
5-37	FAAST Detector Status Screen	5-28
5-38	Control Board Test Points.....	5-29
6-1	Controller Fuse Locations	6-2
6-2	SPS Fuse Locations.....	6-2
6-3	Maintenance Menu.....	6-3
6-4	Device Read Screen	6-3
6-5	Device Address Screen	6-4
6-6	Device Address Process Screen	6-4
6-7	Device Address/New Device Screen	6-5
6-8	Device Address/Change Screen.....	6-5
6-9	Device Replace Menu.....	6-5
6-10	Retrieving Configuration Screen	6-6
6-11	Device Replace Screen	6-6
6-12	Device Configuration Screen	6-6
6-13	Device Replace Success Screen.....	6-6
6-14	Walk-Test Mode Screen	6-7
6-15	Walk-Test Mode Screen	6-7
6-16	Buzzer Screen.....	6-9
6-17	Maintenance Menu 2	6-10
6-18	MNS Reset Screen	6-10
6-19	MNS Silence Screen.....	6-11
6-20	Switch Timeout Screen	6-11
6-21	Configuration Read Screen.....	6-12
6-22	System Normal Screen with Configuration Read Active Screen	6-12
6-23	FAAST Screen	6-13
6-24	AHU On Screen	6-13

1.1 ABOUT THIS MANUAL


The purpose of this manual is to enable persons responsible for the CyberCat system to operate, test and perform maintenance of the system. It provides a detailed description of how the system operates in response to different system events and recommended steps for resolution response to each event. Each individual who will be required to interface with the panel during a system event should thoroughly read and understand the instructions contained within this manual.

1.2 PRODUCT SUPPORT


If you have a question or encounter a problem not covered in this manual, you should first try to contact the distributor that installed the protection system. Fike has a worldwide distribution network. Each distributor is trained to properly sell, install, and service Fike equipment. Look on the inside of the door, left side, there should be a sticker with an indication of the distributor who sold the system. If you cannot locate the distributor, please call Fike Customer Service for locating your nearest distributor, or go to our web-site at www.fike.com. If you are unable to contact your installing distributor or you simply do not know who installed the system you can contact Fike Product Support at (800) 979-FIKE (3453) Option 21, Monday through Friday, 8:00 AM to 4:30 PM CST.

1.3 SAFETY INFORMATION

Important safety admonishments are used throughout this manual to warn of possible hazards to persons or equipment.

 **WARNING**

Warnings are used to indicate the presence of a hazard which will or may cause personal injury or death, or loss of service if safety instructions are not followed or if the hazard is not avoided.

 **Caution**

Cautions are used to indicate the presence of a hazard which will or may cause damage to the equipment if safety instructions are not followed or if the hazard is not avoided.

Notes: Notes indicate the message is important, but is not of a Warning or Caution category. These notes can be of great benefit to the user and should be read.

1.4 RELATED DOCUMENTATION

To obtain a complete understanding of the specific features of the CyberCat or to become familiar with related functions in general, refer to the documentation listed below. Please reference the most current version or the version noted on the label located on the product.

Exhibit 1-1: Related Documentation

Document Title	Part Number
CyberCat Addressable Fire Alarm Control System Installation Manual	06-326
CyberCat Addressable Fire Alarm Control System Programming Manual	06-539

1.5 UNDERSTANDING CYBERCAT

Many Fire Alarm systems today use relatively simple input and output devices that are connected to a central controller. The central controller typically polls the input devices, either one at a time or in groups, and the individual devices respond with some value. The controller then determines any action needed using the preprogrammed logic that links the inputs with the appropriate output response.

Unlike the systems described above, the CyberCat is a peer-to-peer system. It utilizes intelligent detectors and output devices that not only include all necessary processing for decision making, but can also include the control logic for system operation. The logic parameters, along with other device parameters are downloaded to the devices during system configuration into nonvolatile memory. When an input device determines that action should be taken using its downloaded parameters, it transmits a message onto the system's signaling line circuit (SLC). Output devices receive this message and use their downloaded parameters to determine if they should take action. This direct communication between devices reduces response time and reduces the amount of processing that must be performed by the CyberCat controller.

1.5.1 SYSTEM CONTROLLER

Even though the command and control processing for the system is not performed by the CyberCat controller, it is still an integral part of the system. Its primary function is to act as the communication hub for the devices connected to the systems signaling line circuits (SLC). This provides a path that allows each device to transmit and receive device status information with one another and the controller. The controller is also responsible for providing the user interface, performing system timing, delivery of power to field devices, storing system history events, supervising SLC devices, storing device custom messages, communicating system events to peripheral devices and providing the system programming interface point.

1.5.2 INTELLIGENT ADDRESSABLE DEVICES

The CyberCat system's input and output devices are intelligent and maintain their own operating configuration. The devices are connected to the CyberCat controller's signaling line circuits (SLC) and use the SLCs to transmit and receive status information with one another and the control panel. Each SLC can contain up to 254 devices in any combination. Each device must be assigned a unique address (1-254) for proper supervision by the controller. When shipped from Fike, each device is addressed as Loop 0, Address 0. The device address must be changed (programmed) into the device during system installation using the IR Tool (P/N 55-051) or Hand-Held Programmer (P/N 10-2648). The panel can also auto-address a new device (default loop 0, address 0) when wired to the loop and the Auto Address function is turned ON. It will recognize the new device by recording a DEVICE NOT IN CONFIG trouble and automatically address it to the first available empty address on the loop (if one exists).

1.5.3 PERIPHERAL DEVICES

The CyberCat system's RS485 peripheral bus provides an interface point that allows you to connect up to 31 optional peripheral devices to the system. These devices are used provide remote annunciation and control of system events and to expand the system operational capabilities. In a network system, the peripheral bus allows all panels to report to a single graphic panel for annunciation purposes. The peripheral bus transmits both zone and panel status information. The same information is transmitted out the panels RS232 bus as well.

1.5.4 EMERGENCY COMMUNICATION SYSTEM

Fike's Emergency Communication System (ECS) is a combination system that consists of a variety of components that have been designed to be seamlessly integrated into the CyberCat system in order to provide the following ECS functions: In-Building Fire Emergency Voice/Alarm Communications (EVACS); In-Building Mass Notification (MNS); Two-Way Emergency Communication; and Wide-Area Mass Notification system interface. The primary ECS system components include the FCC Digital Paging Assembly, audio amplifiers, and Local Operating Consoles (LOC) described below.

FIRE COMMAND CENTER (FCC) DIGITAL PAGING ASSEMBLY

The FCC Digital Paging Assembly (P/N 10-2751) is the primary audio component of the fire command center. It provides the primary connection point for the systems audio network riser, paging microphone, and fire-fighters telephone. The assembly includes the FCC digital paging card (P/N 10-2727), FCC paging control card (P/N 10-2741), and FCC microphone housing (P/N 10-2757). A digital audio network riser (Class A), originating from the Digital Paging Assembly, connects all system amplifiers and local operating consoles together. This allows live audio messages (Pages) to be broadcast over the audio network to the system amplifiers. The page can originate from the fire command center paging microphone or from any local operating console microphone.

AMPLIFIERS

The Amplifier Assembly (P/N 10-2773) is designed to feed a single audio zone and provides an integral 24 Vdc visual notification appliance circuit. The amplifier card is capable of providing up to 50 watts of audio output power to connected voice evacuation speakers. The amplifier card provides four Class B audio output circuits that are compatible with 25 or 70 Vrms speakers. An optional Class A card (P/N 10-2746) can be installed where redundant speaker circuit wiring is required. Each amplifier card can store up to 16 digitally recorded voice messages, each of which may be up to 30 seconds long. User-defined custom messages can be recorded and downloaded to non-volatile memory on the amplifier using the control panel's programming software (C-Linx). The amplifier card connects to the digital audio network riser allowing distribution of live audio messages (Pages).

LOCAL OPERATING CONSOLES

The Local Operating Consoles (P/N 10-2800 and 10-2801) provides remote paging and voice control capabilities from a location other than the fire command center (i.e., nurse stations, guard stations, etc.). The assembly includes the LOC digital paging card (P/N 10-2816), LOC paging control card (P/N 10-2798), and LOC microphone housing (P/N 10-2813). The digital paging card connects to the digital audio network riser which allows live audio messages (Pages) to be initiated from the LOC microphone.

Refer to Section 3.1.9 for further details.

1.6 UL (90.23) OPERATIONAL LIMITATIONS

The following tables identify the configurable features that can be changed by using the panel's programming software C-Linx. The table also identifies features that are available, but are not permitted to be used per the CyberCat system's UL listing.

Exhibit 1-2: Programming Features

NOTICE TO USERS, INSTALLERS, AUTHORITIES HAVING JURISDICTION, AND OTHER INVOLVED PARTIES					
This product incorporates field-programmable software. In order for the product to comply with the requirements in the Standard for Control Units and Accessories for Fire Alarm Systems, UL 864, certain programming features or options must be limited to specific values or not used at all as indicated below.					
Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Main Board Configuration Options					
MISC.	<i>Miscellaneous Options</i>				
	AC Trouble Delay	Y	0-30 hours, Default 2 hours	1–3	
	Voice Panel Priorities				
	• Alarm	Y	1-251[Default 4]		4
	• Test Alarm	Y	2-252[Default 5]		4
	• Supervisory	Y	3-253[Default 6]		4
	• Process	Y	4-254 [Default 7]		4
	Voice City	Y	Standard / Boston / Chicago / New York	Standard	5
	Voice States on Loop	Y	Enabled / Disabled		6
	Fan Restart	Y	Automatic /Manual		
	Drill/Silence/Acknowledge	N	Enabled / Disabled	Enabled	1,2
	Auto Message	Y	Enabled / Disabled		
	Walktest	Y	Enabled / Disabled		
	<i>Supervision Options</i>				
	Transformer	Y	120VAC / 240VAC		
	Loop Style (SLC)	Y	4, 6, or 7 (Class B, A or X)		
	Ground Fault Level 1	N	Enabled / Disabled	Enabled	2
	Ground Fault Level 2	N	Enabled / Disabled	Enabled	2
	Main Battery	Y	Supervised / Unsupervised	Supervised	
	Auxiliary Battery	Y	Supervised / Unsupervised	Supervised	3
	Auxiliary Loop Module Present	Y	Enabled/ Disabled		3
	Auxiliary Power Module Present	Y	Enabled / Disabled		3
	Eclipse Device Error is Trouble	Y	Enabled / Disabled	Enabled	7
	AHU Fire Dept Key Required for AHU Restart	Y	Enabled / Disabled		
	First Event Latched on LCD	Y	Enabled / Disabled	Enabled	8
	Battery Cutoff	Y	Loop # and Address # (L: 1-4 Address: 0-254)		

Notes:

1. City of Chicago does not allow use of Drill, Silence and Acknowledge switches.
2. Can only be changed with Factory Level password.
3. Not used on the CyberCat 254 panel.
4. Voice Panel Priorities allows the user to program a priority scheme for Fire events and MNS events. 0 is used for systems where priority is not required (0 = None; 1 = Highest and 254 = Lowest).
5. Locality setting is configured for operation of local jurisdiction requirements for Boston, Chicago and New York only. Outside of these jurisdictions, the setting should be set to Standard.
6. Alert, Evac, Page and MNS Active manual activation events are broadcast to the SLC's to activate or de-activate outputs connected to the SLC.
7. If device on SLC has an internal error the panel produces a trouble state (Yes) and does not just log the event into its history buffer (No). (i.e. Checksum Error)
8. LCD display to latch on initial Trouble or Supervisory events (YES) or LCD to display current Trouble or Supervisory event (NO)

Exhibit 1-3: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
MISC.	<i>Silence Options</i>				
	Unsilence Time	Y	1-24 hours		
	Silence Reminder	Y	Enabled / Disabled		
	Silence Inhibit	Y	Enabled / Disabled		
	Positive Alarm Sequence	Y	Enabled / Disabled		
	Silence Mode	Y	UL / ULC	UL only	1,5
	Auto Alarm Silence Time	N	1 – 4 (Hr)		5
Time Functions	<i>Alarm Sensitivity Changes</i>				
	Daytime Sensitivities (start/stop)	Y	12:00 AM – 12:00 AM		
	Sensitivity Changes	Y	Enabled / Disabled		
	Days that use daytime sensitivity	Y	Sunday – Saturday		
	Use Daylight Savings Time	Y	Enabled / Disabled		
	<i>Holiday Schedule</i>				
	Night time sensitivity	Y	20 days total (mm/dd/yyyy)		4
	<i>DACT Auto Test</i>				
	DACT Auto test start hour	Y	0 – 23 (2 default)		
	DACT Auto test period (hrs.)	Y	0 – 24 (0, 6, 12, 24 hrs.)		
NAC	P10 and P11 (Main board NACs)				
	NAC Selection	Y	NAC 1 / NAC 2		
	Sync Protocol	Y	NO / Gentex / System Sensor		2,3
	State (Activation)	Y	Alarm / Pre-Alarm 1 / Pre-Alarm 2 / Supervisory / Trouble / Process		
	Silenceable	Y	Silenceable / Non Silenceable		
	Zone Assignment	Y	1 – 254		
	Circuit	Y	Enabled / Disabled		
	Drill	Y	Enabled / Disabled		
	Walktest	Y	Enabled / Disabled		
	Non-Silence for Waterflow Activation	Y	Enabled / Disabled		
	Panel Sync Protocol	Y	Gentex / System Sensor / Gentex – Visual Silence / System Sensor – Visual Silence		

Notes:

1. An audible signal that has been silenced at the protected premises shall automatically resound and remain energized until silenced and retransmitted the signal to any supervising station to which the original signal was transmitted, as applicable, at least once every 24 hours until the condition is corrected and the product is restored to the normal supervisory condition.
2. If synchronization is selected, both NAC circuits will use the same sync protocol.
3. Refer to Fike document 06-186 for compatible sync protocol.
4. Allows the installer to assign the night time sensitivity obscuration level to devices during scheduled holidays. No other functions are affected or disabled.
5. When Silence Mode is set to ULC, a timer can be set to automatically silence the panel upon expiration of the timer. Panel is not ULC listed.

Exhibit 1-4: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Relays	<i>P2 Main Board Relays</i>				
	Relay Selection	Y	R1 / R2		1
	State (Activation)	Y	Alarm / Pre-Alarm 1 / Pre-Alarm 2 / Supervisory / Trouble / Process / Zone Disable		
	Silenceable	Y	Non-Silenceable / Silenceable		
	Zone Assignment	Y	1 – 254		
	Relay	Y	Enabled / Disabled		
	Drill Operation	Y	Enabled / Disabled		
Relays	<i>P12 (optional card position)</i>				
	Relay Selection	Y	A / B / C / D		
	Module	Y	No Module Installed / CRM4 / CRPM (Opt 1) / CRPM (Opt 2) / Fire Communicator		
	State	Y	Alarm / Pre-Alarm 1 / Pre-Alarm 2 / Supervisory / Trouble / Process / Zone Disable		2
	Restart Delay	Y	0 , 40 – 250 (sec)		2
	Silenceable	Y	Non-Silenceable / Silenceable		2
	Zone Assignment	Y	1 – 254		2
	Relay	Y	Enabled / Disabled		2
	Drill	Y	Enabled / Disabled		2
	<i>P13 (optional card position)</i>				
	Relay Selection	Y	A / B / C / D		
	Module	Y	No Module Installed / CRM4 / CRPM (Opt 1) / CRPM (Opt 2) / Network Interface Card		
	State	Y	Alarm / Pre-Alarm 1 / Pre-Alarm 2 / Supervisory / Trouble / Process / Zone Disable		2
	Restart Delay	Y	0 , 40 – 250 (sec)		2
	Silenceable	Y	Non-Silenceable / Silenceable		2
	Zone Assignment	Y	1 – 254		2
	Relay	Y	Enabled / Disabled		2
	Drill	Y	Enabled / Disabled		2

Notes:

1. Allows on board relays to be configured from the default setting of Alarm for R1 and Supervisory for R2 to the states listed in State (Activation).
2. Configuration option available only when CRM4 module is selected.

Exhibit 1-5: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Zones	Zones	Y	1 – 254		
	Type	Y	Alarm Zone		
	Custom Message	Y	20 character user defined		
	Voice EVAC Mapping	Y	Zones 1 - 254		
	Voice Alert Mapping	Y	Zones 1 - 254		
	Zone Enabled	Y	Enabled / Disabled		
	Zone Chimes...				
	Zone Number	Y	1 - 254		
	Chime Code	Y	0-0-0-0 (1-9)		
Peripherals	Peripherals List	Y	2 -32		
	Custom Message	Y	20 character user defined (PERIPHERAL ID 02)		1
	Zone Assignment	Y	0 - 254		1
	Supervision	Y	Unsupervised / Supervised		1
	Voice	Y	No Voice / EVAX / Fike		
	Status	Y	STD / EXP		2
	History Transmit	Y	Compact / Verbose		3
	History Packing	Y	Unpacked / Packed		4
	History Message	Y	STD / EXP		5
	Dual Channel Voice	Y	Enabled / Disabled		
VESDA	Protocol	Y	Modbus / Open HLI		
	VEA Template	Y	0 - 19		6
	Pipe	Y	1 - 40		6
	Zone	Y	0 - 253		6

Notes:

1. Peripheral device must be added to the Peripherals list before these configuration options are available.
2. This command contains status for Alarm, Supervisory, Trouble and all other states. Peripheral devices that have firmware version before 3.00 should set this variable to STD, which is the original CyberCat format. The ESP selection refers to an "Expanded" format. Peripheral devices with 3.00 firmware or newer will use this command. The EXP setting speeds up operation of the peripheral bus.
3. If set to COMPACT, a message filter within the panel is used to prevent transmission of certain history record events, including the NEW DEVICE history messages. This is done so that the peripherals do not display messages that are not required. If set to VERBOSE, all history messages are transmitted.
4. HISTORY PACKING refers to how many history records are transmitted back-to-back with minimum time in between. If set to UNPACKED, history records are sent one at a time. If set to PACKED, up to 50 history records are sent back-to-back. This will speed up transmission of large amounts of history data.
5. HISTORY MESSAGE refers to what kind of data is packed into the history command. If set to STD (standard), data is packed as with previous versions. If set to EXP (expanded), both lines 1 and 2 of the history data as shown on the LCD of the panel is packed into the history command.
6. VESDA VEA detectors can have multiple sampling pipes ranging from 40 to 120 and each pipe (sector) can be assigned to a different panel zone number for annunciation purposes. C-Linx enables you to create up to 19 pipe templates with each template consisting of 40 pipes. The templates allow you to map each of the 40 pipes to a panel zone. The template(s) can then be assigned to one or more VEA detectors.

Exhibit 1-6: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Network	<i>Network Settings</i>				
	Network Address (Panel ID)	Y	1 - 128		
	Network Module Type	Y	None / First / Middle / Last		1
	Network Panel Message	Y	20 character user defined (CUSTOM MSG PANEL 001) where ZZZ = zone number		
	Network Switch Operation	Y	Global / Local		2
	Network Switch IDs	Y	1 – 128		9
	Network Zones	Y	1 – 254		3
	Panel Supervision	Y	1 – 128		4
	Wiring Style	Y	Style 4 / Style 7		
	History Repeats	Y	No Repeats / 1 Repeat / 2 Repeat		10
	<i>Ethernet Settings</i>				
	Source IP Address	Y	000.000.000.000 User Defined		5
	Destination IP Address	Y	000.000.000.000 User Defined		6
	Supervision IP Address	Y	000.000.000.000 User Defined		7
	Panel IP Supervision	Y	000.000.000.000		4
	History Transmits	Y	1 – 10		11
	Supervision Timeout	Y	1 – 59 (Sec., Min., Hour) 4 min. default		
	IP Time	Y	IP Time Disabled Accept IP Time Send IP Time		8

Notes:

1. Defines the location of the panel with respect to others on the network.
2. Defines if the respective panel will react to Reset, Silence, Acknowledge, and Drill commands received from other networked panels.
3. Defines which network zones will participate in the local panel zone(s).
4. Defines which network panel(s) the selected panel should supervise.
5. Defines the unique Internet Protocol (IP) address for the selected panel.
6. Defines the unique Internet Protocol (IP) address for the panel that is to receive history events from the selected panel.
7. Defines the unique Internet Protocol (IP) address for the panel that is to supervision responses from the selected panel.
8. Used to synchronize panel time over the network.
9. Selects which network panels the panel will receive switch commands from.
10. Sets the number of times history records are transmitted across the network.
11. Sets the number of times history records are transmitted across the Ethernet connection (Fike recommends a setting of 2).

Exhibit 1-7: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Defaults (Photo Detector)	<i>Common</i>				
	Loop Number of Device	Y	1 - 4		1
	Address of Device	Y	1 – 254		
	Custom Message	Y	60 character user defined (1-001 PHOTO DETECT Loop 1 - Address 001)		
		Y	Default / User Defined		
	Zone Assignments	Y	0 – 253		2
	Alarm Verification	Y	Time: 0 – 60 seconds		
		Y	Enabled / Disabled		
	<i>Sensitivity</i>				
	Pre-Alarm 1 & 2 Levels	Y	Enabled / Disabled		
		Y	0.5%/ft. – 4.0%/ft. (0.1%/ft. increments)		3
	Alarm Levels	Y	Acclimate: 1.3%/ft. – 3.6%/ft. (High 2.0% - Low 2.5%)		4
		Y	Day/Night: 1.3%/ft. – 3.6%/ft. (Day 3.6% - Night 3.6%)		
		Y	Alarm / Supervisory / Supervisory NL		
	Drift Compensation (Warning/Trouble)	Y	50 – 100% Warning 80%/Trouble 100%		5
	Walktest	Y	Walktest at Alarm Level / Walktest with IR / Walktest at 1.3%		
	<i>Device Summing</i>				
	Broadcast Thresholds for Summing (%OBS)	N	Enabled / Disabled (8 levels 0.5%/ft. – 4.0%/ft. in 0.1%/ft. increments)		
	Summing Activation Level (%OBS)	N	1.0 – 10%/ft. (0.5%/ft. increments)		
	Summing Broadcast State	No	Disabled / Alarm / Summing Alarm / Supervisory Latching / Supervisory Non-Latching / Pre-Alarm 1 / Pre-Alarm 2		
	Summing Addresses	No	1 – 8 (Device addresses to participate in summing group)		

Notes:

1. CyberCat 254 has only one (1) addressable loop. CyberCat 1016 can have up to four (4) addressable loops.
2. Can be assigned to 4 discrete zones, 2 zone ranges or 1 range and 2 discrete zones.
3. Pre-Alarm 2 setting must always be set equal or higher than Pre-Alarm 1 setting.
4. High setting must be equal or lower obscuration setting than Low setting.
5. Can be set in 1% increments. Trouble must be higher % than Warning.

Exhibit 1-8: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Defaults (Photo Detector)	<i>Remote Annunciator</i>				
	Annunciator Type	Y	None / Remote LED – Follows Red / Remote LED – Follows Green / Remote LED – Follows Amber / Remote LED – Independent / Sounder Base / Relay Base		1,2
	Silenceable	Y	Silenceable / Non-Silence		2
	Positive Alarm Sequence (PAS)	Y	Disabled / Enabled		2
	Output Settings – Priority Row	Y	1 – 8		1
	Activation State	Y	No State / Alarm / Summing Alarm / Test Alarm / Alarm Verification ON / Pre-Alarm 1 / Pre-Alarm 2 / Supervisory / Trouble / Open Circuit Trouble / Short Circuit Trouble / Low Power Trouble / Maintenance Trouble / Process / Zone Disable Switch / Voice Alert / Voice Evacuate / Voice Page / Voice Play Message ID		
	Action Type	Y	No Action / Activate on Any of 3 zones / Activate on All of 3 zones / Activate on Specific Device / Activate on multiple priority rows active		
	Output Pattern	Y	OFF / ON Continuous / Slow / Fast / Temporal / Walktest / Alert / Action		
	State Counter	Y	1 – 16		

Notes:

1. If annunciator type is set to Independent Operation, Sounder Base, or Relay Base an 8-row priority table will be displayed. Table values are set using the Output Settings fields.
2. If annunciator type is set to Sounder Base, Silence and Positive Alarm Sequence (PAS) options will be displayed.

Exhibit 1-9: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Defaults (Photo/Heat Detector)	<i>Common</i>				
	Loop Number of Device	Y	1 - 4		1
	Address of Device	Y	1 – 254		
	Custom Message	Y	60 character user defined (1-001 PHO/HT DETECT Loop 1 - Address 001)		
		Y	Default / User Defined		
	Zone Assignments	Y	0 – 253		2
	Alarm Verification	Y	Time: 0 – 60 seconds		
		Y	Enabled / Disabled		
	<i>Sensitivity</i>				
	Pre-Alarm 1 & 2 Levels	Y	Enabled / Disabled		
		Y	0.5%/ft. – 4.0%/ft. (0.1%/ft. increments)		3
	Alarm Levels	Y	Acclimate: 1.3%/ft. – 3.6%/ft. (High 2.0% - Low 2.5%)		4
		Y	Day/Night: 1.3%/ft. – 3.6%/ft. (Day 3.6% - Night 3.6%)		
		Y	Alarm / Supervisory / Supervisory NL		
	Flame Enhance	N	ON / OFF		6
	Drift Compensation (Warning/Trouble)	Y	50 – 100% Warning 80%/Trouble 100%		5
	Walktest	Y	Walktest at Alarm Level / Walktest with IR / Walktest at 1.3%		
	<i>Device Summing</i>				
	Broadcast Thresholds for Summing (%OBS)	N	Enabled / Disabled (8 levels 0.5%/ft. – 4.0%/ft. in 0.1%/ft. increments)		
	Summing Activation Level (%OBS)	N	1.0 – 10%/ft. (0.5%/ft. increments)		
	Summing Broadcast State	N	Disabled / Alarm / Summing Alarm / Supervisory Latching / Supervisory Non-Latching / Pre-Alarm 1 / Pre-Alarm 2		
	Summing Addresses	N	1 – 8 (Device addresses to participate in summing group)		
	<i>Remote Annunciator (See Exhibit 1-8 for programming features)</i>				

Notes:

1. CyberCat 254 has only one (1) addressable loop. CyberCat 1016 can have up to four (4) addressable loops.
2. Can be assigned to 4 discrete zones, 2 zone ranges or 1 range and 2 discrete zones.
3. Pre-Alarm 2 setting must always be set equal or higher than Pre-Alarm 1 setting.
4. High setting must be equal or lower obscuration setting than Low setting.
5. Can be set in 1% increments. Trouble must be higher % than Warning.
6. Refer to Section 3.4.6 for description of Flame Enhance operation.

Exhibit 1-10: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Defaults (Photo/Duct Detector)	<i>Common</i>				
	Loop Number of Device	Y	1 - 4		1
	Address of Device	Y	1 – 254		
	Custom Message	Y	60 character user defined (1-001 DUCT DETECT Loop 1 - Address 001)		
		Y	Default / User Defined		
	Zone Assignments	Y	0 – 253		2
	Alarm Verification	Y	Time: 0 – 60 seconds		
		Y	Enabled / Disabled		
	<i>Sensitivity</i>				
	Pre-Alarm 1 & 2 Levels	Y	Enabled / Disabled		
		Y	0.6%/ft. – 4.0%/ft. (0.1%/ft. increments)		3
	Alarm Levels	Y	Acclimate: 0.8%/ft. – 3.4%/ft. (High 2.0% - Low 2.5%)		4
		Y	Day/Night: 0.8%/ft. – 3.4%/ft. (Day 1.5% - Night 3.4%)		
		Y	Alarm / Supervisory / Supervisory NL		
	Drift Compensation (Warning/Trouble)	Y	50 – 100% Warning 80%/Trouble 100%		5
	Walktest	Y	Walktest at Alarm Level / Walktest with IR / Walktest at 1.3%		
	<i>Device Summing</i>				
	Broadcast Thresholds for Summing (%OBS)	N	Enabled / Disabled (8 levels 0.5%/ft. – 4.0%/ft. in 0.1%/ft. increments)		
	Summing Activation Level (%OBS)	N	1.0 – 10%/ft. (0.5%/ft. increments)		
	Summing Broadcast State	N	Disabled / Alarm / Summing Alarm / Supervisory Latching / Supervisory Non-Latching / Pre-Alarm 1 / Pre-Alarm 2		
	Summing Addresses	N	1 – 8 (Device addresses to participate in summing group)		
	<i>Remote Annunciator (See Exhibit 1-8 for programming features)</i>				

Notes:

1. CyberCat 254 has only one (1) addressable loop. CyberCat 1016 can have up to four (4) addressable loops.
2. Can be assigned to 4 discrete zones, 2 zone ranges or 1 range and 2 discrete zones.
3. Pre-Alarm 2 setting must always be set equal or higher than Pre-Alarm 1 setting.
4. High setting must be equal or lower obscuration setting than Low setting.
5. Can be set in 1% increments. Trouble must be higher % than Warning.

Exhibit 1-11: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Defaults (Heat Detector)	<i>Common</i>				
	Loop Number of Device	Y	1 - 4		1
	Address of Device	Y	1 – 254		
	Custom Message	Y	60 character user defined (1-001 HEAT DETECT Loop 1 - Address 001)		
		Y	Default / User Defined		
	Zone Assignments	Y	0 – 253		2
	Alarm Verification	Y	Time: 0 – 60 seconds		
		Y	Enabled / Disabled		
	<i>Sensitivity</i>				
	Pre-Alarm 1 & 2 Levels	Y	Enabled / Disabled		
		Y	70°F - 190°F (5°F increments)		3
	Alarm Levels (Day/Night)	Y	Fixed Temp: 135°F - 190°F (5°F increments)		4
		Y	Rate of Rise: 135°F - 174°F (5°F increments)		4
	Walktest	Y	Walktest at 135°F / Walktest with IR		
	<i>Remote Annunciator (See Exhibit 1-8 for programming features)</i>				

Notes:

1. CyberCat 254 has only one (1) addressable loop. CyberCat 1016 can have up to four (4) addressable loops.
2. Can be assigned to 4 discrete zones, 2 zone ranges or 1 range and 2 discrete zones.
3. Pre-Alarm 2 setting must always be set equal or higher than Pre-Alarm 1 setting.
4. Rate of Rise temperature range is 135°F - 174°F. Fixed temperature range is 135°F - 190°F.

Exhibit 1-12: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Defaults (Ion Detector)	<i>Common</i>				
	Loop Number of Device	Y	1 - 4		1
	Address of Device	Y	1 – 254		
	Custom Message	Y	60 character user defined (1-001 ION DETECT Loop 1 - Address 001)		
		Y	Default/ User Defined		
	Zone Assignments	Y	0 – 253		2
	Alarm Verification	Y	Time: 0 – 60 seconds		
		Y	Enabled / Disabled		
	<i>Sensitivity</i>				
	Pre-Alarm 1 & 2 Levels	Y	Enabled / Disabled		
		Y	100 – 40 Microns (5 Micron increments)		3
	Alarm Levels	Y	Acclimate: 80 – 50 Microns (5 Micron increments)		4
		Y	Day/Night: 80 – 50 Microns (5 Micron increments)		
		Y	Alarm / Supervisory / Supervisory NL		
		N	Smolder Enhance Off / Smolder Enhance On		
	Drift Compensation	Y	50 – 100% Warning 80%/Trouble 100%		5
	Walktest	Y	Walktest at Alarm Level / Walktest with IR / Walktest at 1.3%		
	<i>Device Summing</i>				
	Broadcast Thresholds for Summing (%OBS)	N	Enabled / Disabled (8 levels 0.5%/ft. – 4.0%/ft. in 0.1%/ft. increments)		
	Summing Activation Level (%OBS)	N	1.0 – 10%/ft. (0.5%/ft. increments)		
	Summing Broadcast State	N	Disabled / Alarm/Summing Alarm / Supervisory Latching / Supervisory Non-Latching / Pre-Alarm 1 / Pre-Alarm 2		
	Summing Addresses	N	1 – 8 (Device addresses to participate in summing group)		
	<i>Remote Annunciator (See Exhibit 1-8 for programming features)</i>				

Notes:

1. CyberCat 254 has only one (1) addressable loop. CyberCat 1016 can have up to four (4) addressable loops.
2. Can be assigned to 4 discrete zones, 2 zone ranges or 1 range and 2 discrete zones.
3. Pre-Alarm 2 setting must always be set equal or higher than Pre-Alarm 1 setting.
4. High setting must be equal or lower obscuration setting than Low setting.
5. Can be set in 1% increments. Trouble must be higher % than Warning.

Exhibit 1-13: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Defaults (Monitor Module)	Loop Number of Device	Y	1 - 4		1
	Address of Device	Y	1 – 254		
	Custom Message	Y	60 character user defined (1-001 INPUT MANALRM Loop 1 - Address 001)		
		Y	Default / User Defined		
	Zone Assignments	Y	0 – 253		2,10
	Input Function Type	Y	No Input Function / Manual Alarm / Detection / Waterflow / Pre-Alarm 1 / Pre-Alarm 2 / Supervisory / Trouble / Process / PAS Inhibit / Reset / Silence / Acknowledge / Drill / Zone Disable / Fan Restart / Smoke Control Confirmation / Manual Alarm Stage 2 / AHU Fire Dept Key / Voice Alert / Voice Evacuation / Voice Play Message ID / MNS Play Message ID		
		Y	Verify Time: 0 – 255 seconds		3
		Y	Latching / Non-Latching		4
		Y	Normally Open / Normally Closed		5
		Y	Class B Contact / Class A Latching		
		Y	No Short Detection / Short Detection		
	Voice/MNS Priority	Y	1 - 255		6, 7
	Msg 1 ID	Y	0 - 16		8
	Msg 2 ID	Y	0 - 16		8
	MNS Timeout	Y	0 - 250		9

Notes:

1. CyberCat 254 has only one (1) addressable loop. CyberCat 1016 can have up to four (4) addressable loops.
2. Can be assigned to 4 discrete zones, 2 zone ranges or 1 range and 2 discrete zones.
3. If monitor module function type is set to Detection, Waterflow or Supervisory, an alarm verification time can be set.
4. Either = PA1, PA2, Supervisory, Trouble, Process, PAS Inhibit; Non-Latch = Reset, Silence, Acknowledge, Zone Disable, Fan Restart; Latching = ManAlarm, Detection, Waterflow, Drill.
5. NO Contacts = Detection, Manual Alarm, Reset, Supervisory; NO/NC Contacts = Process, Waterflow, PA1, PA2, Trouble, Drill, Silence, Acknowledge, Zone Disable, PAS Inhibit, Fan Restart.
6. Priority field becomes available only when Input Function is set to a Voice or MNS function.
7. Priority setting cannot be set the same as the panel priority settings for Alarm, Test Alarm, Supervisory, and Process.
8. Message ID field becomes available only when Input Function is set to Voice or MNS Play Message ID.
9. MNS Timeout field becomes available only when input Function is set to MNS Play Message ID.
10. If input function type is set to "Zone Disable", can be assigned to zone 254 "All Zones".

Exhibit 1-14: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Defaults (Mini Monitor Module)	Loop Number of Device	Y	1 - 4		1
	Address of Device	Y	1 – 254		
	Custom Message	Y	60 character user defined (1-001 MINI MANALRM Loop 1 - Address 001)		
	Custom Message	Y	Default / User Defined		
	Zone Assignments	Y	0 – 253		2,10
	Input Function Type	Y	No Input Function / Manual Alarm / Detection / Waterflow / Pre-Alarm 1 / Pre-Alarm 2 / Supervisory / Trouble / Process / PAS Inhibit / Reset / Silence / Acknowledge / Drill / Zone Disable / Fan Restart / Smoke Control Confirmation / Manual Alarm Stage 2 / AHU Fire Dept Key / Voice Alert / Voice Evacuation / Voice Play Message ID / MNS Play Message ID		
		Y	Verify Time: 0 – 255 seconds		3
		Y	Latching / Non-Latching		4
		Y	Normally Open / Normally Closed		5
		Y	No Short Detection / Short Detection		
	Voice/MNS Priority	Y	1 - 255		6, 7
	Msg 1 ID	Y	0 - 16		8
	Msg 2 ID	Y	0 - 16		8
	MNS Timeout	Y	0 - 250		9
Defaults (Pull Station Module)	Loop Number of Device	Y	1 - 4		1
	Address of Device	Y	1 – 254		
	Custom Message	Y	60 character user defined (1-001 PULL STATION Loop 1 - Address 001)		
	Custom Message	Y	Default/ User Defined		
	Zone Assignments	Y	0 – 253		2
	Input Function	Y	No Input Function / Manual Alarm		

Notes:

1. CyberCat 254 has only one (1) addressable loop. CyberCat 1016 can have up to four (4) addressable loops.
2. Can be assigned to 4 discrete zones, 2 zone ranges or 1 range and 2 discrete zones.
3. If monitor module function type is set to Detection, Waterflow or Supervisory, an alarm verification time can be set.
4. Either = PA1, PA2, Supervisory, Trouble, Process, PAS Inhibit; Non-Latch = Reset, Silence, Acknowledge, Zone Disable, Fan Restart; Latching = ManAlarm, Detection, Waterflow, Drill.
5. NO Contacts = Detection, Manual Alarm, Reset, Supervisory; NO/NC Contacts = Process, Waterflow, PA1, PA2, Trouble, Drill, Silence, Acknowledge, Zone Disable, PAS Inhibit, Fan Restart.
6. Priority field becomes available only when Input Function is set to a Voice or MNS function.
7. Priority setting cannot be set the same as the panel priority settings for Alarm, Test Alarm, Supervisory, and Process.
8. Message ID field becomes available only when Input Function is set to Voice or MNS Play Message ID.
9. MNS Timeout field becomes available only when input Function is set to MNS Play Message ID.
10. If input function type is set to "Zone Disable", can be assigned to zone 254 "All Zones".

Exhibit 1-15: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Defaults (Supervised Control Module)	<i>Common</i>				
	Loop Number of Device	Y	1 - 4		1
	Address of Device	Y	1 – 254		
	Output	Y	Enabled/Disabled		
	Custom Message	Y	60 character user defined (1-001 OUTPUT MODULE Loop 1 - Address 001)		
	Custom Message	Y	Default/ User Defined		
	Zone Assignments (device troubles)	Y	0 – 253		2
	Defaults for Pre-Action	Y	Yes/ No		3
	Defaults for 2 Stage Alarm	N	Yes/ No		4
	Drill Output Pattern	Y	Drill Disabled / On Continuous / Slow / Fast / Temporal		
	Output Silenceable	Y	Silenceable /Non-Silenceable		
	Positive Alarm Sequencing (PAS)	Y	Disabled / Enabled		
	Power Supply Monitor	Y	Enabled / Disabled		
	<i>Output Control</i>				
	Output Settings Priority Row	Y	1 - 32		
	Activation State	Y	Alarm / Summing Alarm / Test Alarm / Alarm Verification ON / Pre-Alarm 1 / Pre-Alarm 2 / Supervisory / Trouble / Open Circuit Trouble / Short Circuit Trouble / Low Power Trouble / Maintenance Trouble / Process / Zone Disable Switch / Voice Alert / Voice Evacuate / Voice Page / Voice Play Message ID / MNS Message Active		
	Action Type	Y	No Action / Activate on Any of 3 zones / Activate on All of 3 zones / Activate on Specific Device / Activate on multiple priority rows active		
	Output Pattern	Y	OFF / ON Continuous / Slow / Fast / Temporal / Walktest / Times / Custom Defined		
	Output Pattern Set	Y	1 - 3		
	State Counter	Y	1 – 16		
	Zone Assignments (activation)	Y	1 - 255		5

Notes:

1. CyberCat 254 has only one (1) addressable loop. CyberCat 1016 can have up to four (4) addressable loops.
2. Can be assigned to 4 discrete zones, 2 zone ranges or 1 range and 2 discrete zones.
3. Modifies control module configuration for use with Pre-Action solenoid.
4. If selected, the control module configuration will be modified for 2-Stage Alarm Operation (City of Chicago).
5. Can be assigned to any 3 zones, 254 any zone, or 255 any zone (non-disable).

Exhibit 1-16: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Defaults (Relay Module)	<i>Common</i>				
	Loop Number of Device	Y	1 - 4		1
	Address of Device	Y	1 – 254		
	Output	Y	Enabled/Disabled		
	Custom Message	Y	60 character user defined (1-001 RELAY MODULE Loop 1 - Address 001)		
		Y	Default/ User Defined		
	Zone Assignments (device troubles)	Y	0 – 253		2
	AHU Shutdown Relay	Y	Enabled / Disabled		7
	Restart Delay	Y	0 – 255 seconds		5
	Misc. Options (feedback relay monitoring)	Y	Not Monitored / Monitored by dry contact / Independent dry contact		6
	Positive Alarm Sequencing (PAS)	Y	Enabled / Disabled		6
	<i>Output Control (Note 7)</i>				
	Output Settings Priority Row	Y	1 - 32		
	Activation State	Y	Alarm / Summing Alarm / Test Alarm / Alarm Verification ON / Pre-Alarm 1 / Pre-Alarm 2 / Supervisory / Trouble / Open Circuit Trouble / Short Circuit Trouble / Low Power Trouble / Maintenance Trouble / Process / Zone Disable Switch / Voice Alert / Voice Evacuate / Voice Page / Voice Play Message ID / MNS Message Active		
	Action Type	Y	No Action / Activate on Any of 3 zones / Activate on All of 3 zones / Activate on Specific Device / Activate on multiple priority rows active		
	Relay State	Y	ON / OFF / Timed / Time Delay		
	Timeout	Y	0, 5 – 80 minutes (5 min increments)		3
	State Counter	Y	1 – 16		
	Output	Y	Silenceable/ Non-Silenceable		8
	Drill	Y	Enabled / Disabled		
	Zone Assignments (activation)	Y	1 - 255		4

Notes:

1. CyberCat 254 has only one (1) addressable loop. CyberCat 1016 can have up to four (4) addressable loops.
2. Can be assigned to 4 discrete zones.
3. Timeout delay becomes active if relay state is set to 'Time Delay'.
4. Can be assigned to any 3 zones, 254 any zone, or 255 any zone (non-disable).
5. Restart delay becomes active if relay is configured for AHU shutdown operation.
6. These options are not available if relay is configured for AHU shutdown operation.
7. Output control is disabled if relay is set for AHU Shutdown operation.
8. Silence option becomes active if relay state is set to "ON".

Exhibit 1-17: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Defaults (FAAST Detector)	<i>Common</i>				
	Loop Number of Device	Y	1 - 4		1
	Address of Device	Y	1 – 254		
	Custom Message	Y	60 character user defined (1-001 FAAST DETECT Loop 1 - Address 001)		
		Y	Default/ User Defined		
	Zone Assignments	Y	0 – 253		2
	Walktest	Y	Enabled / Disabled		
		Y	0.1% - 0.99645% ft. (slider)		
	<i>States</i>				
	State Assignments				
	Fire 2 / Fire 1 / Action 2 / Action 1 / Alert	Y	Disabled / Alarm / PreAlarm 2 / PreAlarm 1 / Supervisory / Process		3
		Y	Latching / Non-Latching		4
	Fire 1 or Fire 2 Alarm is Broadcast when Isolated	Y	Enabled / Disabled		
	<i>Alarm Verification Timers</i>				
	Fire 2 / Fire 1 / Action 2 / Action 1 / Alert	Y	No Timer / Timer 1 / Timer 2 / Timer 3		5
	Verification Timer Values				
	Timer 1 / Timer 2 / Timer 3	Y	0 – 255 (seconds)		
	<i>Acclimate</i>				
	Acclimate	Y	Enabled / Disabled		
	Acclimate High Range	Y	Range 1-H (0.00046%ft – 0.04980%ft) Range 2-M (0.05%ft – 0.09982%ft) Range 3-M (0.1%ft – 0.99645%ft) Range 4-L (1%ft – 2.5%ft)		6

Notes:

1. CyberCat 254 has only one (1) addressable loop. CyberCat 1016 can have up to four (4) addressable loops.
2. Can be assigned to 4 discrete zones, 2 zone ranges or 1 range and 2 discrete zones.
3. Each detection level on the FAAST detector can be mapped to a panel state (user defined).
4. Each detection level can be configured as a latching or non-latching event. **Must be latching if configured for Alarm.**
5. Each detection level can be configured to initiate one of three Alarm Verification timers.
6. Allows you to set the high sensitivity level for the selected acclimate range.

Exhibit 1-18: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Defaults (FAAST Detector)	<i>Day Sensitivity Levels</i>				
	Fire 1 / Fire 2 / Action 2 / Action 1 / Alert	Y	Range 1-H (0.00046%ft – 0.04980%ft) Range 2-M (0.05%ft – 0.09982%ft) Range 3-M (0.1%ft – 0.99645%ft) Range 4-L (1%ft – 3.98818%ft)		
	Copy from Night Sensitivity	Y	Yes / No		
	<i>Night Sensitivity</i>				
	Fire 1 / Fire 2 / Action 2 / Action 1 / Alert	Y	Range 1-H (0.00046%ft – 0.04980%ft) Range 2-M (0.05%ft – 0.09982%ft) Range 3-M (0.1%ft – 0.99645%ft) Range 4-L (1%ft – 3.98818%ft)		
	Copy from Day Sensitivity	Y	Yes / No		
	<i>Miscellaneous</i>				
	Particulate Level Display	Y	Fire 2 / Fire 1 / Action 2 / Action 1 / Alert		
	Air Flow Trouble Boundary	Y	0 – 100 (% off normal) (20% default)		
	Air Flow Trouble Timer	Y	No Timer / Timer 1 / Timer 2 / Timer 3		
	<i>Security</i>				
	Passcode	Y	0 – 9999 (1111 default)		
	Test Button/Functions Locked	Y	Enabled / Disabled		
	Isolate Button/LCD Settings Locked	Y	Enabled / Disabled		
	Configuration Locked	Y	Enabled / Disabled		
	Can be Disabled	Y	Enabled / Disabled		
	<i>Reference Detector</i>				
	Analog Broadcast Increasing Step	Y	0 - 255		1
	Analog Broadcast Decreasing Step	Y	0 - 255		1
	Reference Detector Address	Y	0 – 254 (0 = disable)		2
	<i>Relays</i>				
	Configuration (Relays 1 – 5)	Y	Latching: Yes / No		
		Y	Fire 2 / Fire 1 / Action 2 / Action 1 / Alert		
	Configuration (Relay 6)	Y	Latching: Yes / No		
		Y	High Airflow / Low Airflow / Disable / Filter Minor / Filter Urgent / Sensor / Config / Aspirator / Time / Filter Door / Low Voltage / Comm		

Notes:

- Set to 255 to disable Analog Broadcast.
- Reference detector cannot use Acclimate feature.

Exhibit 1-19: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Defaults (FAAST Detector)	<i>FAAST XT</i>				
	Enable Channels	Y	1 - 4		
	Fan Speed	Y	Slow / Medium / Fast		
	Alarm Sounder	Y	Off / Pulsed / Continuous		
	Fault Sounder	Y	Off / Pulsed / Continuous		
Defaults (Dual Monitor Module)	Loop Number of Device	Y	1 - 4		1
	Address of Device	Y	1 – 254		
	Custom Message	Y	60 character user defined (1-001 INPUT ALM/SUP Loop 1 - Address 001)		
		Y	Default / User Defined		
	Zone Assignments	Y	0 – 253		2
	Input 1 Function	Y	No Input Function / Manual Alarm / Detection/ Waterflow / Pre-Alarm 1 / Pre-Alarm 2 / Supervisory / Trouble / Process / PAS Inhibit / Reset / Silence / Acknowledge / Drill / Fan Restart		
		Y	Latching / Non-Latching		3
		Y	Normally Open / Normally Closed		4
		Y	Short Detection On / Short Detection Off		
		Y	No Input Function / Pre-Alarm 1 / Pre-Alarm 2 / Supervisory / Trouble / Process / AHU FD Key		
	Input 2 Function	Y	Latching / Non-Latching		3
		Y	Normally Open / Normally Closed		4
		Y	Short Detection On / Short Detection Off		

Notes:

1. CyberCat 254 has only one (1) addressable loop. CyberCat 1016 can have up to four (4) addressable loops.
2. Can be assigned to 4 discrete zones, 2 zone ranges or 1 range and 2 discrete zones.
3. Either = PA1, PA2, Supervisory, Trouble, Process, PAS Inhibit; Non-Latch = Reset, Silence, Acknowledge, Zone Disable, Fan Restart; Latching = ManAlarm, Detection, Waterflow, Drill.
4. NO Contacts = Detection, Manual Alarm, Reset, Supervisory; NO/NC Contacts = Process, Waterflow, PA1, PA2, Trouble, Drill, Silence, Acknowledge, Zone Disable, PAS Inhibit, Fan Restart.

Exhibit 1-20: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Defaults (Conv. Zone Monitor Module)	Loop Number of Device	Y	1 - 4		1
	Address of Device	Y	1 – 254		
	Custom Message	Y	60 character user defined (1-001 CONV ZONE MOD Loop 1 - Address 001)		
	Custom Message	Y	Default / User Defined		
	Zone Assignments	Y	0 – 253		2
	Input Function	Y	No Input Function / Detection / Pre-Alarm 1 / Pre-Alarm 2 / Supervisory		
	Wire Class	Y	Class B / Class A		
	IDC Power Off Time (seconds)	Y	4 – 64 (8 sec. default)(4 sec increments)		
	Alarm Verification	Y	Disabled / Enabled		
		Y	Time: 0 – 60 seconds		
Defaults (Update Device Checksum)	Recalculate addressable device Configuration Checksums?	Y	Yes / No		
Defaults (Reset Default Config.)	Reset All Default Device Configurations?	Y	Yes / No		
Defaults (Custom Messages)	Panel LCD Custom Message Line 2 Logo	Y	20 character user defined (Fike Corporation)		
	Addressable Devices (Restores all device custom messages to default)	Y	Yes / No		
	Peripheral Devices (Restores all device custom messages to default)	Y	Yes / No		
	Air Sampling Devices (Restores all device custom messages to default)	Y	Yes / No		
Defaults (Password)	Used to assign a unique Level 2 password (8 available)	Y	A – H (4 digit user defined)		

Notes:

1. CyberCat 254 has only one (1) addressable loop. CyberCat 1016 can have up to four (4) addressable loops.
2. Can be assigned to 4 discrete zones, 2 zone ranges or 1 range and 2 discrete zones.

Exhibit 1-21: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Peripheral Device Configuration Options					
Remote Display 14 Key	Address	Y	2 - 32		
	Custom Message	Y	20 character user defined (Fike Remote Display)		
	Corporate Logo	Y	20 character user defined (Fike Corporation)		
	Buzzer Operation	Y	Enabled / Disabled		
	Network History Display	Y	Show All History / Filter History by Zone		
	Countdown Display	Y	Show Countdown Display / Show Release Imminent		
	Countdown Filter	Y	Show All Zone Countdowns / Filter Countdown by Zone / Do not show Countdowns		
	Programmable Key Functions (1 – 8)	Y	NO Function / Reset / Silence / Acknowledge / Drill / Process / Walktest / IR Tool / Step Alarm / Step Supervisory / Step Trouble / Step All / Fan Restart / Zone Disable		1
	Zone Assignment	Y	0 – 255		1
Remote Display 2 and 10 Key	Address	Y	2 - 32		
	Custom Message	Y	20 character user defined (Fike Remote Display)		
	Corporate Logo	Y	20 character user defined (Fike Corporation)		
	Buzzer Operation	Y	Enabled / Disabled		
	Network History Display	Y	Show All History / Filter History by Zone		
	Countdown Display	Y	Show Countdown Display / Show Release Imminent		
	Countdown Filter	Y	Show All Zone Countdowns / Filter Countdown by Zone / Do not show Countdowns		

Notes:

1. Process and Zone Disable will require a zone number be assigned (1 – 253).

Exhibit 1-22: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Graphic Annunciator (256 LED)	Address	Y	2 - 32		
	LED Number	Y	3 - 256		
	LED Function	Y	No Function Assigned / Device Activation / Device Trouble / Device Activation or Trouble / Device Pre-Alarm / Device Activation or Pre-Alarm / Zone State Activation / Switch 1 Feedback / Switch 2 Feedback / Switch 3 Feedback / Switch 4 Feedback / Panel Silenced / Panel Drill / Panel Walk Test / Sounder / Network Device Activation / Network Device Trouble / Network Device Activation or Trouble / Network Device Pre-Alarm / Network Device Activation or Pre-Alarm		
	Device (selection)	Y	(PNL) 1 – 128: (Loop) 1 – 4, (Add) 1 – 254		1
	Activation State	Y	Alarm / Pre-alarm / Process / Trouble / Supervisory / Zone Disable / Pre-Discharge / Release		2
	Zone Assignments	Y	1 - 254		2
	Network Device (selection)	Y	(PNL) 1 – 128: (Loop) 1 – 4, (Add) 1 – 254		3
	<i>LED Illumination Pattern</i>				
	Active State	Y	Off / Continuous / Slow Blink / Fast Blink		
	Inactive State	Y	Off / Continuous / Slow Blink / Fast Blink		
	Silenced State	Y	Off / Continuous / Slow Blink / Fast Blink		
	Acknowledged State	Y	Off / Continuous / Slow Blink / Fast Blink		
	Piezo	Y	Enabled / Disabled		

Notes:

1. Configuration options become available if LED Function is set to 'Device'.
2. Configuration options become available if LED Function is set to 'Zone State Activation'.
3. Configuration options become available if LED Function is set to 'Network Device'.

Exhibit 1-23: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Zone Annunciator (20 LED)	Address	Y	2 - 32		
	LED Number	Y	1 - 20		
	LED Function	Y	No Function Assigned / Zone State Activation / Panel Silenced / Panel Drill / Panel Walk Test / Communication OK / Power OK		
	Activation State	Y	Alarm / Pre-Alarm / Process / Trouble / Supervisory / Zone Disable / Pre-Discharge / Release		1
	Zone Assignments	Y	1 – 254		1
	<i>LED Illumination Pattern</i>				
	Active State	Y	Off / Continuous / Slow Blink / Fast Blink		
	Inactive State	Y	Off / Continuous / Slow Blink / Fast Blink		
	Silenced State	Y	Off / Continuous / Slow Blink / Fast Blink		
	Acknowledged State	Y	Off / Continuous / Slow Blink / Fast Blink		
Multi Interface Module	Address	Y	2 - 32		
	Interface Type	Y	Cheetah Gateway / Serial Printer / Parallel Printer / Computer		2
Ethernet Port	Address	Y	2 - 32		
DACT	Address	Y	2 – 32		
	Mounting	Y	Internal / External		

Notes:

- Configuration options become available if LED Function is set to 'Zone State Activation'.
- Configuring the MIM for Cheetah Gateway operation is no longer available after Firmware Version 7.0. Gateway programming has been left in C-Linx for compatibility with panels with older firmware.

Exhibit 1-24: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
LED Annunciator 20-Zone	Address	Y	2 - 32		
	LED Function (1-40)	Y	No Function Assigned / On – Device Activation / On - Device Trouble / On – Device Active or Trb / On – Device PreAlarm / On – Device Active or PreAlm / On – Zone Process / On – Zone Trouble / On – Zone Supervisory / On – Zone Abort / On – Zone Disabled / On – Zone PreAlarm / On – Zone Alarm / On – Zone PredischARGE / On – Zone Release / On – Zone Test Alarm / On – Zone Action / On – Panel Silence / On – Panel Drill / On – Panel Walktest / On – Panel Comm OK / On – Panel Power OK / On – Panel Buzzer Active / On – Any Network Device Active / On – Any Network Device Trouble / On – Any Network Device PreAlm / On – All Network Device Active / Off – Any Network Device Active / Off – All Network Device Active / On – Any LED Active / On – All LED Active / Off – Any LED Active / Off – All LED Active / On – Alarm Silence / On – Supervisory Silence / On – Trouble Silence / On – Alarm Silence Inhibit / On – Device Active or PreAlm(StdY) / On – Alarm Signal Cancel / On – Battery Trouble		
	LED Assignment	Y	Device / Zone / Panel / Net Device / LED		1

Notes:

- LED assignment options are tied to the specific LED function selected.

Exhibit 1-25: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
LED Annunciator 20-Zone	<i>Assignment by Device</i>				
	Select Devices	Y	1 - 254		
	Selection Options	Y	Select / Clear		
		Y	All Addresses / Even Addresses / Odd Addresses / All Photo Sensors / All Photo/Heat Sensors / All Photo/Duct Sensors / All Ion Sensors / All Heat Sensors / All Monitor Modules / All Dual Monitor Modules / All Mini Monitor Modules / All Pull Station Modules / All Conventional Zone / All Control Modules / All Relay Modules / All Releasing Modules / All FFAST Sensors		
		Y	On Loop 1 - 4		
		Y	Between 1 - 254		
		Y	And 1 - 254		
		Y	Select All / Clear All / Invert All		
	<i>Assignment by Zone</i>				
	Select Zones	Y	1 - 254		
	Selection Options	Y	Select / Clear		
		Y	All Zones / Even Zones / Odd Zones		
		Y	Between 1 - 254		
		Y	And 1 - 254		
		Y	Any Zone (check box)		
		Y	Select All / Clear All / Invert All		
	<i>Assignment by Network Device</i>				
	Select Network Devices	Y	1 – 254 (Example: 002: 1-001)		
	Selection Options	Y	Select / Clear		
		Y	All Addresses / Even Addresses / Odd Addresses / All Photo Sensors / All Photo/Heat Sensors / All Photo/Duct Sensors / All Ion Sensors / All Heat Sensors / All Monitor Modules / All Dual Monitor Modules / All Mini Monitor Modules / All Pull Station Modules / All Conventional Zone / All Control Modules / All Relay Modules / All Releasing Modules / All FFAST Sensors		
		Y	On Panel 1 – 128		
		Y	On Loop 1 - 4		
		Y	Between 1 - 254		
		Y	And 1 - 254		
			Select All / Clear All / Invert All		

Exhibit 1-26: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
LED Annunciator 20-Zone	<i>Assignment by LED</i>				
	Select LED Assignments	Y	1 - 40		
Relay Controller	Peripheral Address	Y	2 - 32		
	Local Buzzer	Y	Enabled / Disabled		
	<i>Relay Group Configuration (1 – 6)</i>				
	Relay	Y	1 - 4		
	Function	Y	No Function Assigned / On – Device Activation / On – Device Trouble / On – Device PreAlarm / On – Zone Process / On – Zone Trouble / On – Zone Supervisory / On – Zone Abort / On – Zone Disabled / On – Zone PreAlarm / On – Zone Alarm / On – Zone PreDischarge / On – Zone Release / On – Zone Test Alarm / On – Zone Action / On – Any Network Device / On – Any Network Device Trouble / On – Any Network Device PreAlm / Off – Any Network Device / Off – All Network Device		1
	<i>Assignment by Device</i>				
	Select Devices	Y	1 – 254		
	Selection Options	Y	Select / Clear		
		Y	All Addresses / Even Addresses / Odd Addresses / All Photo Sensors / All Photo/Heat Sensors / All Photo/Duct Sensors / All Ion Sensors / All Heat Sensors / All Monitor Modules / All Dual Monitor Modules / All Mini Monitor Modules / All Pull Station Modules / All Conventional Zone / All Control Modules / All Relay Modules / All Releasing Modules / All FFAST Sensors		
		Y	On Loop: 1 – 4		
		Y	Between: 1 – 254		
		Y	And: 1 – 254		
		Y	Select All / Clear All / Invert All		

Exhibit 1-27: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Relay Controller	<i>Assignment by Zone</i>				
	Select Zones	Y	1 – 254		
	Selection Options	Y	Select / Clear		
		Y	All Zones / Even Zones / Odd Zones		
		Y	Between: 1 – 254		
		Y	And: 1 – 254		
		Y	Any Zone (check box)		
		Y	Select All / Clear All / Invert All		
	<i>Assignment by Network Device</i>				
	Select Devices	Y	1 – 254		
	Select Options	Y	All Addresses / Even Addresses / Odd Addresses / All Photo Sensors / All Photo/Heat Sensors / All Photo/Duct Sensors / All Ion Sensors / All Heat Sensors / All Monitor Modules / All Dual Monitor Modules / All Mini Monitor Modules / All Pull Station Modules / All Conventional Zone / All Control Modules / All Relay Modules / All Releasing Modules / All FFAST Sensors		
		Y	On Panel: 1 – 128		
		Y	On Loop: 1 – 4		
		Y	Between: 1 – 254		
		Y	And: 1 – 254		
		Y	Select All / Clear All / Invert All		
Class A Card	Peripheral Address	Y	2 - 32		

Exhibit 1-28: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Smoke Control Card 6-Zone	<i>Smoke Group Configuration</i>				
	Group	Y	1 - 6		
	Smoke Group Configuration	Y	On / Off / Auto		
	Switch Function	Y	No Function Assigned / Smoke Control		
	Relay Actions Settings	Y	None / On / Auto / Off		1,2
	Action Start	Y	Action starts with confirmation address OR delay timer / Action starts with confirmation address AND delay timer		
	Confirmation Address	Y	Loop: 0 – 4		
			Address: 0 - 254		
	Relay Address	Y	Panel: 0 - 128		
			Loop: 0 - 4		
	Delay (relay activation)	Y	Address: 0 - 254		
			0 – 255 seconds		
	Delay Timer Start	Y	Delay timer starts immediately / Delay timer starts after confirmation address activates		
	LED Configuration	Y	On / Off / Auto / Fault		

Notes:

1. On and Off overrides up to 25 addressable relays on the panel's SLCs.
2. Auto returns up to 25 addressable relays back to automatic configured state.

Exhibit 1-29: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Smoke Control Card 6-Zone	Smoke Group Configuration - Continued				
	LED Function	Y	No Function Assigned / On – All Network Device / Auto LED Function / Fault LED Function / On – Device Activation / On – Device Trouble / On Device Active or Trb / On – Device PreAlm / On – Device Active or PreAlm / On – Zone Process / On – Zone Trouble / On – Zone Supervisory / On – Zone Abort / On – Zone Disabled / On – Zone PreAlm / On – Zone Alarm / On – Zone PreDischarge / On – Zone Release / On – Zone Test Alarm / On – Zone Action / On – Panel Silence / On - Panel Drill / On – Panel Walktest / On – Panel Comm OK / On – Panel Power OK / On – Panel Buzzer Active / On - Any Network Device / On – Any Network Device Trouble / On – Any Network Device PreAlm / On – Any LED Active / On – All LED Active / Off – All LED Active / Off – Any Network Device / Off – All Network Device		
	Timer	Y	0 – 255 seconds		
	Device Assignments (max. 50 device addresses)	Y	Panel: 0 - 128		
			Loop: 0 - 4		
			Address: 0 - 254		
	Self-Test	Y	Disabled / Enabled		
	Time for Weekly Self-Test	Y	Day: Sunday – Saturday (Wednesday)		
			Time: 6:00 AM (24 hr.)		
	Miscellaneous				
	Peripheral Address	Y	2 - 32		

Exhibit 1-30: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Smoke Control Graphic Card 6-Zone	<i>Smoke Group Configuration</i>				
	Group	Y	1 - 6		
	Switch Group Configuration	Y	On / Off / Auto		
	Switch Function	Y	No Function Assigned / Smoke Control		
	Select Relay Actions (when switch is pressed)	Y	None / On / Auto / Off		1,2
	Action Start	Y	Action starts with confirmation address OR delay timer / Action starts with confirmation address AND delay timer		
	Confirmation Address	Y	Loop: 0 - 4 Address: 0 - 254		
	Relay Address	Y	Panel: 0 - 128 Loop: 0 - 4 Address: 0 - 254		
	Delay (relay activation)	Y	0 - 255 seconds		
	Delay Timer Start	Y	Delay timer starts immediately / Delay timer starts after confirmation address activates		
	LED Configuration	Y	On / Off / Auto / Fault		

Notes:

1. On and Off overrides up to 25 addressable relays on the panel's SLCs.
2. Auto returns up to 25 addressable relays back to automatic configured state.

Exhibit 1-31: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Smoke Control Graphic Card 6-Zone	<i>Smoke Group Configuration - Continued</i>				
	LED Function	Y	No Function Assigned / On – All Network Device / Auto LED Function / Fault LED Function / On – Device Activation / On – Device Trouble / On Device Active or Trb / On – Device PreAlm / On – Device Active or PreAlm / On – Zone Process / On – Zone Trouble / On – Zone Supervisory / On – Zone Abort / On – Zone Disabled / On – Zone PreAlm / On – Zone Alarm / On – Zone PreDischarge / On – Zone Release / On – Zone Test Alarm / On – Zone Action / On – Panel Silence / On - Panel Drill / On – Panel Walktest / On – Panel Comm OK / On – Panel Power OK / On – Panel Buzzer Active / On - Any Network Device / On – Any Network Device Trouble / On – Any Network Device PreAlm / On – Any LED Active / On – All LED Active / Off – All LED Active / Off – Any Network Device / Off – All Network Device		
	Timer	Y	0 – 255 seconds		
	Device Assignments (max. 50 device addresses)	Y	Panel: 0 - 128		
			Loop: 0 - 4		
			Address: 0 - 254		
	Self-Test	Y	Disabled / Enabled		
	Time for Weekly Self-Test	Y	Day: Sunday – Saturday (Wednesday)		
			Time: 6:00 AM (24 hr.)		

Exhibit 1-32: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Smoke Control Graphic Card 6-Zone	<i>Miscellaneous</i>				
	Peripheral Address	Y	2 – 32		
	Local Buzzer	Y	Enabled / Disabled		
	Graphic Switch Configuration (CFG1 and CFG2)	Y	No Function Assigned / Reset / Silence / Acknowledge / Drill / LED Test		
	Graphic LED Configuration (CFG1 thru CFG3)	Y	No Function Assigned / Panel Silence / Panel Drill / Panel Walktest / Panel Comm OK / Panel Power OK		
Voice EVAC Switch Card	Peripheral Address	Y	2 - 32		
	Priority Level	Y	0 – 254 Default 1		
	Copy EVAC Zones to Alert and Page	Y	Yes / No		
	<i>Voice Evac Switch Groups 1 - 6</i>				
	EVAC Switch	Y	Enabled / Disabled		
	EVAC Zone Assignments	Y	1 – 254		
	ALERT Switch	Y	Enabled / Disabled		
	ALERT Zone Assignments	Y	1 – 254		
	PAGE Switch	Y	Enabled / Disabled		
	PAGE Zone Assignments	Y	1 – 254		
Fire Phone Card	Peripheral Address	Y	2 - 32		
	SLC Wiring Class	Y	Class A / Class B		
	Device Address	Y	1 – 99		1

Notes:

1. Select only the fire-phone module addresses that are connected to the fire-phone riser.

Exhibit 1-33: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Voice EVAC Amplifier	<i>Common</i>				
	Application Type	Y	Single Channel / Dual Channel / Page Only		1
	<i>Miscellaneous</i>				
	Peripheral Address	Y	2 - 32		
	Locality	Y	Standard / Boston / Chicago / NYC	Standard	2
	Record and Repeat Tones	Y	Play Tones / No Tones	Play Tones	3
	Periodic Tones For Fire Page When Not Speaking	Y	Play Tones / No Tones		6
	Periodic Tones For MNS Page When Not Speaking	N	Play Tones / No Tones	Play Tones	7
	Speaker Voltage Output	Y	25 VAC / 70.7 VAC		
	Power Input	Y	120 VAC / 240 VAC		
	Audio Bus	Y	Enabled / Disabled		
	Local Microphone	Y	Enabled / Disabled		
	Battery Charger	Y	Enabled / Disabled		
	Local Piezo	Y	Enabled / Disabled		
	<i>NAC</i>				
	State	Y	Alarm / Pre Alarm 2 / Pre Alarm 1 / Supervisory / Trouble / Process		
	Synchronization	Y	None / Gentex / System Sensor		
	Zones	Y	1 – 254		4
	Silenceable	Y	Silence / Non-Silence		
	Drill	Y	Enabled / Disabled		
	Walk Test	Y	Enabled / Disabled		
	Active During Fire Playback	Y	Enabled / Disabled		5
	Active During Fire Page	Y	Enabled / Disabled		5
	Active During MNS Playback	Y	Enabled / Disabled		5
	Active During MNS Page	Y	Enabled / Disabled		5
	NAC Delay Timeout	Y	0 – 250 seconds		
	Strobe OFF after Silence	Y	Enabled / Disabled		
	<i>Contact Monitor</i>				
	Contact	Y	Disabled / Enabled		
	Message 1	Y	Select ID number (1 – 16)		
	Message 2	Y	Select ID number (1 – 16)		

Notes:

- Select the type of application that the amplifier is being utilized as.
- Locality setting is configured for operation of local jurisdiction requirements for only Boston, Chicago and New York. Outside of these jurisdiction then the setting should be set to Standard
- Allows the selection to play MNS tone and Fire tones between record and repeat messages.
- Select the zone number(s) that will activate the NAC.
- These need to be enabled when you want the NAC circuit on the Amplifier to activate off of an event.
- Allows the selection to play Fire tones periodically when no live announcement is made during Fire page.
- Allows the selection to play MNS tones periodically when no live announcement is made during MNS page.

Exhibit 1-34: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Voice EVAC Amplifier	<i>Message Assignments – Single Channel</i>				
	State	Y	Drill / Evac / Alert / Alarm / Test Alarm / Supervisory / Process		
	Message 1	Y	Message ID 1 – 16		1
	Message 2	Y	Message ID 1 – 16		1
	Silence	Y	Silenceable / Non-Silence		2
	Speaker Circuit (1 - 4)	Y	Enabled / Disabled		3
	Amplifier Zone Assignment	Y	1 - 254		4
	<i>Message Assignments – Dual Channel</i>				
	State	Y	Drill / Evac / Test Alarm		
	Message 1	Y	Message ID 1 – 16		1
	Message 2	Y	Message ID 1 – 16		1
	Silence	Y	Silenceable / Non-Silence		2
	Speaker Zones (1 - 4)	Y	1 - 254		5
	Amplifier Designation	Y	Evacuation / Alert		6
	<i>Message Assignments – Page Only</i>				
	State	Y	Drill / Test Alarm		
	Message 1	Y	Message ID 1 – 16		1
	Message 2	Y	Message ID 1 – 16		1
	Silence	Y	Silenceable / Non-Silence		2
	Speaker Zones (1 - 4)	Y	1 - 254		5
	<i>Amplifier Synchronization</i>				
	AMP Sync	Y	Enabled / Disabled		
	AMP Operation on Panel Network	Y	Play Cfg Msg ID / Play Tones / Play New Msg ID		7
	New Msg ID	Y	None / 1 - 16		7

Notes:

1. Sets the first and second message that will be played in response to each panel state listed.
2. The Page State cannot be silenced.
3. Select the speaker circuits that will be active on the selected amplifier.
4. Select the zone(s) that each amplifier will serve (1-254).
5. Select the zone(s) that each speaker circuit will serve (1-254).
6. Dual channel operation utilizes two amps interconnected together to form a single amp. One must be configured as the EVAC amp and the other must be configured as the Alert amp.
7. Configuration options become available if 'Amp Sync' is enabled. Allows playback of 'tones' or 'new message' while amps are being synced. Prevents message cutoff during message sync.

Exhibit 1-35: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Digital Paging Module	<i>DPM Settings</i>				
	Peripheral Address	Y	2 - 32		
	Restart Audio on New Activation (for sync)	Y	Enabled / Disabled		
	Restart Audio Time Delay	Y	0 – 50 seconds		
	Audio Bus Fiber	Y	Enabled / Disabled		7
	Contact Monitor Timeout	Y	0 – 250 (min.)	0	1
	Contact Monitor Priority	Y	0 – 254 Default 1		2
	Piezo	Y	Enabled / Disabled		
		Y	Silenceable / Non-Silenceable		
	Fire-Phone Class	Y	Class B / Class A		
	Contact Monitor	Y	Enabled / Disabled		
		Y	Latching / Non-Latching	Latching	
		Y	Normally Open / Normally Closed		
	<i>Switch Configuration (01 – 10)</i>				
	Function	Y	No Function Assigned / Voice Alert / Voice Evacuate / Voice Page / Voice Record Page / Voice Page To Alert / Voice Page To EVAC / Voice Play Message ID / MNS Reset / MNS Silence / MNS Page / MNS Record Page / MNS Play Message ID		
	Settings	Y	Zone Assignments / Zones and Message ID		4, 5
	Priority	Y	0 – 254 Default 1		2, 3
	Switch Timeout	Y	0 – 250 (min.)	0	6

Notes:

- 0 = No Timeout
- 0 = None; 1 = Highest and 254 = Lowest.
- Each switch can be assigned a different priority level.
- Zone Assignments field is available only when switch is set to Voice Alert, Voice EVAC, Voice Page, Voice Record Page, MNS Page, and MNS Record Page.
- Zones and Message ID field is available only when switch is set to Voice Play Message ID or MNS Play Message ID.
- Allowed for MNS switch functions only.
- When 485 to fiber converters are installed anywhere on the Audio Bus this must be selected as YES for Supervision.

Exhibit 1-36: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Remote Microphone	Peripheral Address	Y	2 - 32		
	Restart Audio on New Activation (for sync)	Y	Enabled / Disabled		
	Restart Audio Time Delay	Y	0 – 50 seconds		
	Piezo	Y	Enabled / Disabled		
		Y	Silenceable / Non-Silenceable		
	Audio Bus	Y	Master / Slave		1
	<i>Switch Configuration (01 – 13)</i>				
	Function	Y	No Function Assigned / Voice Alert / Voice Evacuate / Voice Page / Voice Record Page / Voice Page To Alert / Voice Page To EVAC / Voice Play Message ID / MNS Reset / MNS Silence / MNS Page / MNS Record Page / MNS Play Message ID		
	Settings	Y	Zone Assignments / Zones and Message ID		
		Y	Latching / Non-Latching	Latching	3
	Priority	Y	0 – 254 (Default 1)		2
	Switch Timeout	Y	0 – 250 (min.)	0	3

Notes:

1. Master = Audio Adjunct Panel; Slave = Local Operating Console
2. 0 = None; 1 = Highest and 254 = Lowest.
3. This is only allowed on MNS switch functions

Exhibit 1-37: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Switch Card 20-Zone	Peripheral Address	Y	2 - 32		
	<i>Switch Configuration (1 – 20)</i>				
	Function	Y	No Function Assigned / Panel Reset / Panel Silence / Panel Acknowledge / LED Test / Panel Walktest Mode 1 / Panel Walktest Mode 2 / Panel Drill / Zone Process Toggle / Zone Disable Toggle / Smoke Control / Alarm Silence / Supervisory Silence / Trouble Silence / Alarm Signal Cancel / Voice Alert / Voice Evacuate / Voice Page / Voice Record Page / Voice Page to Alert / Voice Page to EVAC / Voice Play Message ID / MNS Silence / MNS Page / MNS Record Page / MNS Play Message ID / AHU Restart		
	Zone	Y	0 – 254		2,3
	Settings	Y	Relay Action Settings / Zone Assignments / Zone and Message ID		4
		Y	Latching / Non-Latching	Latching	5
	Priority	Y	0 – 254 (Default 1)		1
	Switch Timeout	Y	0 – 250 (min.)	0	5
	Message ID1	Y	1 - 16		6
	Message ID2	Y	1 - 16		6

Notes:

- 0 = None; 1 = Highest and 254 = Lowest.
- This field is active for Zone Process and Zone Disable Toggle functions only.
- Selects zone number to be associated with switch activation.
- This field is active only when the function is set for Smoke Control, Voice Alert, Evacuate, Page, Record Page or Voice Play Message ID.
- This is only allowed on MNS switch functions
- This field is used only when the switch function is assigned to Play Message ID.

Exhibit 1-38: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Switch Card 20-Zone	<i>Relay Action Settings (Selection table active for Smoke Control only)</i>				
	Relay Action	Y	None / On / Auto / Off		1,2
	Action Start	Y	Action starts with confirmation address OR delay timer / Action starts with confirmation address AND delay timer		
	Confirmation Address	Y	Panel: 0 - 128		
			Loop: 0 - 4		
			Address: 0 - 254		
	Relay Address	Y	Panel: 0 - 128		
			Loop: 0 - 4		
			Address: 0 - 254		
	Delay Timer	Y	0 – 255 seconds		
	Delay (timer) Start	Y	Delay timer starts immediately / Delay timer starts after confirmation address activates		
	<i>Zone Assignments (Selection table active for Voice Functions only)</i>				
	Select Zones	Y	1 – 254		
	Selection Options	Y	Select / Clear		
		Y	All Zones / Even Zones / Odd Zones		
		Y	Between: 1 – 254		
		Y	And: 1 – 254		
		Y	Any Zone (check box)		
		Y	Select All / Clear All / Invert All		

Notes:

1. On and Off overrides up to 25 addressable relays on the panel's SLCs.
2. Auto returns up to 25 addressable relays back to automatic configured state.

Exhibit 1-39: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Switch Card 20-Zone	<i>LED Configuration (1 – 40)</i>				
	LED Function	Y	No Function Assigned / On – Device Activation / On – Device Trouble / On – Device Active or Trb. / On – Device PreAlarm / On – Device Active or PreAlm / On – Zone Process / On – Zone Trouble / On – Zone Supervisory / On – Zone Abort / On – Zone Disable / On – Zone PreAlarm / On – Zone Alarm / On – Zone PredischARGE / On – Zone Release / One Zone Test Alarm / Zone – Zone Action / On – Panel Silence / On – Panel Drill / On - Panel Walktest / On – Panel Comm OK / On – Panel Power OK / On – Panel Buzzer Active / On – Any Network Device Active / On – Any Network Device Trouble / On – Any Network Device PreAlm / On – All Network Device Active / Off – Any Network Device Active / Off – All Network Device Active / On – Any LED Active / On – All LED Active / Off – Any LED Active / Off – All LED Active / On – Alarm Silence / On – Supervisory Silence / On – Trouble Silence / On - Alarm Silence Inhibit / On – Device Active or Prealm(StdY) / On – Alarm Signal Silence / On – Battery Trouble / On – Voice Alert / On – Voice Evacuate / On – Voice Page / On – Voice Record Page / On – Voice Page to Alert / On – Voice Page to EVAC / On – Voice Play Message ID / On – MNS Silence / On – MNS Page / On – MNS Record Page / On – MNS Play Message ID		1
	Timer	Y	0 – 255 seconds		
	Assignment	Y	Device / Zone / Net Device / LED (corresponds with LED function)		
	Switches	Y	1 - 20		

Notes:

- Switches assigned to panel operation events affect the local panel only, unless other network panels are configured to respond to network events.

Exhibit 1-40: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Switch Card 20-Zone	<i>Assignment by Device</i>				
	Select Devices	Y	1 – 254		
	Selection Options	Y	Select / Clear		
		Y	All Addresses / Even Addresses / Odd Addresses / All Photo Sensors / All Photo/Heat Sensors / All Photo/Duct Sensors / All Ion Sensors / All Heat Sensors / All Monitor Modules / All Dual Monitor Modules / All Mini Monitor Modules / All Pull Station Modules / All Conventional Zone / All Control Modules / All Relay Modules / All Releasing Modules / All FAAST Sensors		
		Y	On Loop: 1 – 4		
		Y	Between: 1 – 254		
		Y	And: 1 – 254		
		Y	Select All / Clear All / Invert All		
	<i>Assignment by Zone</i>				
	Select Zones	Y	1 – 254		
	Selection Options	Y	Select / Clear		
		Y	All Zones / Even Zones / Odd Zones		
		Y	Between: 1 – 254		
		Y	And: 1 – 254		
		Y	Any Zone (check box)		
		Y	Select All / Clear All / Invert All		
	<i>Assignment by Network Device</i>				
	Select Devices	Y	1 – 254		
	Select Options	Y	All Addresses / Even Addresses / Odd Addresses / All Photo Sensors / All Photo/Heat Sensors / All Photo/Duct Sensors / All Ion Sensors / All Heat Sensors / All Monitor Modules / All Dual Monitor Modules / All Mini Monitor Modules / All Pull Station Modules / All Conventional Zone / All Control Modules / All Relay Modules / All Releasing Modules / All FAAST Sensors		
		Y	On Panel: 1 – 128		
		Y	On Loop: 1 – 4		
		Y	Between: 1 – 254		
		Y	And: 1 – 254		
		Y	Select All / Clear All / Invert All		
	<i>Assignment by LED</i>				
	Select LED Assignments	Y	1 - 40		

Exhibit 1-41: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
Air Sampling Detectors Configuration Options					
VESDA Compact	VESDA Zone Number	Y	0 – 246/254		3
	Fire 1 State	Y	Alarm / Supervisory / Trouble		
	Device Enabled	Y	Enabled / Disabled		
	Custom Message	Y	20 Characters user defined (CUSTOM MESSAGE VZ001)		
		Y	Default Custom Message / User Defined Custom Message		
	Zone Assignments	Y	0 – 253		1
	Point ID Information – Loop ID	Y	1 – 4		2
	Point ID Information – Address ID	Y	1 – 254		2
VESDA Laser Focus, Laser Plus, VLI, VEP, VEP1, VEP2 and VEU	VESDA Zone Number	Y	0 – 246/254		3
	Fire 1 State	Y	Alarm / Supervisory / Trouble		
	Device Enabled	Y	Enabled / Disabled		
	Custom Message	Y	20 Characters user defined (CUSTOM MESSAGE VZ001)		
		Y	Default Custom Message / User Defined Custom Message		
	Zone Assignments	Y	0 – 253		1
	Point ID Information – Loop ID	Y	1 – 4		2
	Point ID Information – Address ID	Y	1 – 254		2

Notes:

- Four zones available.
- Point ID used only for reporting device information to DACT and EVAX.
- Modbus HLI = 246 | Open Protocol HLI = 254.

Exhibit 1-42: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
VESDA Scanner	VESDA Zone Number	Y	0 – 246/254		4
	Fire 1 State	Y	Alarm / Supervisory / Trouble		3
	Device Enabled	Y	Enabled / Disabled		
	Custom Message	Y	20 Characters user defined (CUSTOM MESSAGE VZ001)		
		Y	Default Custom Message / User Defined Custom Message		
	Zone Assignments	Y	0 – 253		1
	Sector Zone Number 1-4	Y	1 – 254		
	Sector State	Y	Alarm / Supervisory / Trouble		3
	Point ID Information – Loop ID	Y	1 – 4		2
	Point ID Information – Address ID	Y	1 – 254		2

Notes:

- Four zones available.
- Point ID used only for reporting device information to DACT and EVAX.
- Allowable sector (pipe) state assignment is based on Fire 1 state setting (Alarm = Alarm or Supervisory / Supervisory = Supervisory only).
- Modbus HLI = 246 | Open Protocol HLI = 254.

Exhibit 1-43: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
VESDA VFT-15	VESDA Zone Number	Y	0 – 246/254		4
	Fire 1 State	Y	Alarm / Supervisory / Trouble		3
	Device Enabled	Y	Enabled / Disabled		
	Custom Message	Y	20 Characters user defined (CUSTOM MESSAGE VZ001)		
		Y	Default Custom Message / User Defined Custom Message		
	Zone Assignments	Y	0 – 253		1
	Sector Zone/State Assignments				
	Sector Zone	Y	1 - 254		
	Sector State	Y	Alarm / Supervisory / Trouble		3
	Point ID Information – Loop ID	Y	1 – 4		2
	Point ID Information – Address ID	Y	1 – 254		2

Notes:

- Four zones available.
- Point ID used only for reporting device information to DACT and EVAX.
- Allowable sector (pipe) state assignment is based on Fire 1 state setting (Alarm = Alarm or Supervisory / Supervisory = Supervisory only).
- Modbus HLI = 246 | Open Protocol HLI = 254.

Exhibit 1-44: Programming Features Cont.

Circuit or Component	Program Feature or Option	Permitted in UL 864? (Y/N)	Possible Settings (Defaults shown bold)	Settings permitted in UL 864	Notes
VESDA VEA-40, 60, 80, 100, 120	VESDA Zone Number	Y	0 – 246/254		4
	Fire 1 State	Y	Alarm / Supervisory / Trouble		3
	Device Enabled	Y	Enabled / Disabled		
	Custom Message	Y	20 Characters user defined (CUSTOM MESSAGE VZ001)		
		Y	Default Custom Message / User Defined Custom Message		
	Zone Assignments	Y	0 – 253		1
	Additional VEA Configuration				
	VEA Configuration	Y	VEA-40/60/80/100/120		
	Zone Templates	Y	0 - 19		
	Pipe Activation States				
	Pipe Set	Y	0 - 5		
	Pipe	Y	Alarm / Supervisory / Trouble		3
	Point ID Information – Loop ID	Y	1 – 4		2
	Point ID Information – Address ID	Y	1 – 254		2

Notes:

- Four zones available.
- Point ID used only for reporting device information to DACT and EVAX.
- Allowable sector (pipe) state assignment is based on Fire 1 state setting (Alarm = Alarm or Supervisory / Supervisory = Supervisory only).
- Modbus HLI = 246 | Open Protocol HLI = 254.

2.1 CYBERCAT MAIN DISPLAY

The CyberCat system's main display and control board, as shown in Exhibit 2-1, consists of a 4 x 20 LCD screen, general system status LEDs, and several push-buttons that allow you to navigate through the system menus and issue specific command and control functions.

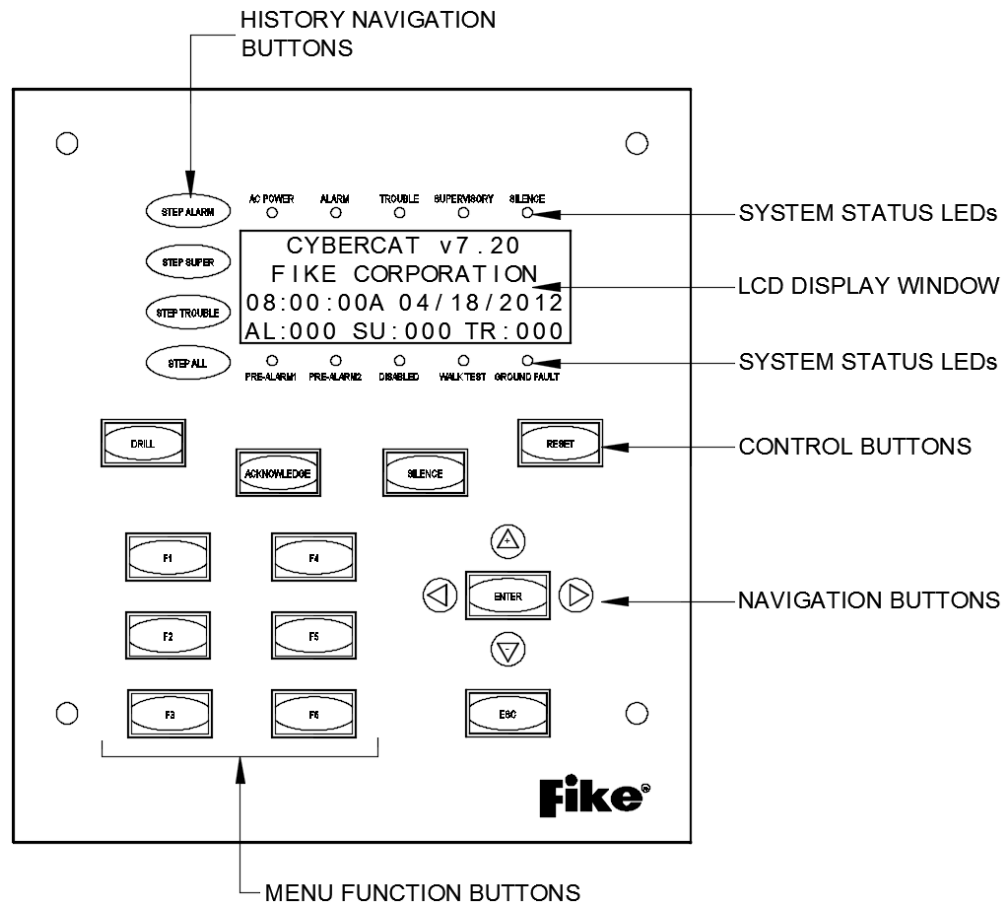


Exhibit 2-1: CyberCat Main Display

Access to almost all of the control and navigation buttons are blocked with the system enclosure door in the closed and locked position. This prevents unauthorized access by individuals who are not properly trained on how to respond to system events and how to operate the system.

A general description of the main display features is provided as follows.

2.1.1 SYSTEM STATUS LEDs



Exhibit 2-2: Status LEDs

Exhibit 2-3: Status LED Descriptions

Indicator	Color	When Active	To Turn Off
AC Power	Green	Illuminates steady when proper primary AC power is applied. Normally ON.	Turns off when AC power is removed or is too low for proper operation.
Alarm	Red	Flashes when the panel enters the Alarm State. Illuminates steady after you Acknowledge or Silence the event.	Clear the Alarm condition and reset the system.
Trouble	Yellow	Flashes when the panel enters the Trouble State or if a zone or device is disabled. Illuminates steady after you Acknowledge or Silence the event.	Clear the Trouble condition. Some trouble events are latching. If latching, the panel must be reset to restore the system to normal.
Supervisory	Yellow	Flashes when the panel enters the Supervisory State or if a zone or device is disabled. Illuminates steady after you Acknowledge or Silence the event.	Clear the Supervisory condition. (Supervisory inputs may be configured as latching or non-latching. If configured for latching, the panel must be reset to restore the system to normal.)
Silence	Yellow	Illuminates steady after you Silence the event, either locally at the main display or remotely at a remote display unit. Silencing the system turns off the panel's integral audible and all notification appliance circuits that are programmed as Silenceable.	Turns off when the panel is reset or another system event occurs. NFPA 72 requires that a silenced panel resound every 24 hours.
Pre-Alarm 1	Red	Flashes when the panel enters the Pre-Alarm 1 State. Illuminates steady after you Acknowledge or Silence the event.	Turns off when the Pre-Alarm 1 goes below the set level or the panel is reset.
Pre-Alarm 2	Red	Flashes when the panel enters the Pre-Alarm 2 State. Illuminates steady after you Acknowledge or Silence the event.	Turns off when the Pre-Alarm 2 goes below the set level or the panel is reset.
Disabled	Yellow	Illuminates steady when any device or zone is disabled. Outputs in the disabled zone will not operate. Panel will also indicate a Supervisory and Trouble event when a zone is disabled.	Turns off when panel is reset or a device or circuit is enabled.
Walk-Test	Yellow	Flashes when the panel is placed into Walk-Test State. Illuminates steady after you Acknowledge or Silence the event.	Turns off if the Walk-Test condition clears or if the panel is reset.
Ground Fault	Yellow	Illuminates steady when a system Ground Fault condition is present on the system.	Turns off when the ground fault is cleared or the panel is reset.

2.1.2 HISTORY NAVIGATION BUTTONS

When an event occurs, the system categorizes the event as an Alarm, Supervisory, or Trouble event and adds it to a corresponding history buffer. The information stored in each history buffer and can be displayed using the history step buttons shown below. Unless the enclosure is ordered with Lexan™ covering the display opening, these buttons are accessible even with the enclosure door closed allowing responding personnel to review system events based on the order of occurrence (Step All) or based on selected event types (Alarm, Supervisory or Trouble).



STEP ALARM

Press this button to step through the current ALARM events stored in the panel's Alarm history buffer (1,600 events).



STEP SUPER

Press this button to step through the current SUPERvisory events stored in the panel's Supervisory history buffer (800 events).



STEP TROUBLE

Press this button to step through the current TROUBLE events stored in the panel's trouble history buffer.



STEP ALL

Press this button to step through all current events (Alarm, Supervisory and Trouble) on the display.

Press the **F5** function button to toggle between current events and the entire 3200 event history display.

2.1.3 CONTROL BUTTONS

The Control buttons on the main display allow you to execute the designated system function by pressing the button. A brief functional description of each button is provided below:



DRILL

Press this button to manually activate all outputs and notification appliance circuits assigned for Drill Function in the configuration. Press **RESET** to clear the Drill activation.



ACKNOWLEDGE

Press this button to Acknowledge an Alarm, Trouble or Supervisory State. Deactivates local piezo without silencing active outputs. Creates 'Acknowledge' event in the history. Pressing Acknowledge ONCE will acknowledge all events currently active on the system. When multiple events are active each event is not required to be individually acknowledged.



SILENCE

Press this button to Silence any notification appliance circuits that are sounding and programmed as silenceable outputs. Also deactivates local piezo. Creates 'Silence Function' event for all loops. Pressing Silence ONCE will silence all events currently active on the system. When multiple events are active each event is not required to be individually silenced.

NFPA requires a panel that has been silenced for 24 hours to resound (which UL requires that it also re-send to the DACT). Some local authorities require this sooner. The CyberCat has a configurable option for resound from 0-24 hours with 24 hours programmed as the default.



RESET

Press this button to Reset the system to Normal. Deactivates control functions, flashes LEDs and momentarily interrupts resettable auxiliary power. Clears any latching event. If events are still present, they will immediately reactivate.

2.1.4 NAVIGATION AND FUNCTION BUTTONS

The navigation buttons on the main display are provided to allow you to easily navigate and change the systems operational parameters. A brief functional description of each button is provided below:



NAVIGATION (+, ►, -, ◄)

The ◄► arrow buttons are used to move about in the configuration displays. The +/- buttons will increment or decrement the value at the cursor when in a configuration display. They can also be used when cycling through the event history. The Step Alarm button only cycles forward in events. These buttons allow you to go forward and backward through the events.




ESCAPE

Press this button to toggle from Off-Normal Event display (if events are present) to System Normal (no events preset) to Top Level Menu. If in a menu, this button EXITS the current menu and returns to the previous menu screen. If in the System Normal Menu, pressing **ESCAPE** takes you back to event #1.



ENTER

Saves and enters any system configuration settings.

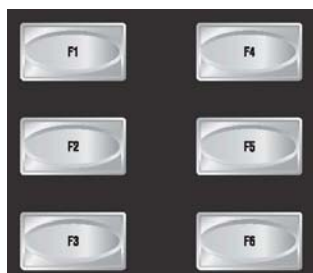

FUNCTION BUTTONS

The function buttons are used to navigate the control panel's menu system during system operation, maintenance and configuration of the system.

2.1.5 LCD DISPLAY

There are three main display screens for the CyberCat system: System Normal (no events present), System Event (if events are present) and Top Level Menu. A brief description of each display is provided as follows.

2.1.5.1 SYSTEM NORMAL DISPLAY

The System Normal display, as shown in Exhibit 2-4, provides an example of the information presented on the main display when the panel is in normal operating condition.

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A			C	Y	B	E	R		C	A	T			v	7	.	X	X		
B			F	I	K	E			C	O	R	P	O	R	A	T	I	O	N	
C	H	H	:	M	M	:	S	S	A		M	M	/	D	D	/	Y	Y	Y	Y
D	A	L	:	0	0	0			S	U	:	0	0	0			T	R	:	0

Exhibit 2-4: System Normal Display

- Row A - Provides a standard system message, including panel name and firmware version.
- Row B – Displays a 20 character custom message that can be customized.
- Row C - Displays the current time and date set for the system.
- Row D – Displays the number of Alarm (AL), Supervisory (SU), and Trouble (TR) events currently present on the system.

Note: When a panel has cleared all local trouble and supervisory events but still has these events to transmit on a networked system, the trouble (or supervisory) counter will alternately showing '000' or '---' at half-second intervals to indicate network transmissions are still occurring for that state.

In Normal state, the control panel does the following functions at normal intervals:

- Supervises all SLC devices, panel circuits for device and circuit integrity
- Transmits system event information to peripheral bus devices

2.1.5.2 SYSTEM EVENT DISPLAY

The System Event display, as shown in Exhibit 2-5, provides an example of the information presented on the main display when an event occurs.

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	A	L	A	R	M	:		D	E	V	I	C	E		T	Y	P	E		
B	C	U	S	T	O	M		M	E	S	S	A	G	E		L	-	A	D	R
C	H	H	:	M	M	:	S	S	A		M	M	/	D	D	/	Y	Y	Y	Y
D	E	V	E	N	T		X	X	X	X		O	F		Y	Y	Y	Y		

Exhibit 2-5: System Event Display

- Row A - Shows the type of event and device type.
- Row B - Displays the custom message (user defined) for the device/circuit that caused the event.

Note: Pressing the **F1** or **F2** buttons while a system event is displayed toggles the display to show more detail related to the event displayed.

Press the **F1** function button to toggle Rows A and B to display the Panel-Loop-Address of event as shown in Exhibit 2-6. Press **F1** again to return to the System Event display.

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	P	N	L	0	0	1		L	O	O	P	1		A	D	D	R	0	0	1
B	C	U	S	T	O	M		M	S	G		P	A	N	E	L	-	0	0	1
C	H	H	:	M	M	:	S	S	A		M	M	/	D	D	/	Y	Y	Y	Y
D	E	V	E	N	T		X	X	X	X		O	F		Y	Y	Y	Y		

Exhibit 2-6: Panel-Loop-Address Display

Press the **F2** function button to toggle Rows C and D to display an extra 40 characters of the device's custom message as shown in Exhibit 2-7. Press **F2** again to return to the System Event display.

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	A	L	A	R	M	:		D	E	V	I	C	E		T	Y	P	E		
B	C	U	S	T	O	M		M	E	S	S	A	G	E		L	-	A	D	R
C	L	O	O	P		1														
D	A	D	D	R	E	S		0	0	1										

Exhibit 2-7: Expanded Custom Message Display

2.1.5.3 TOP LEVEL MENU

The CyberCat is equipped with an extensive menu system that allows you to configure the systems operating parameters, view history events, perform system diagnostics, and view system operating parameters for maintenance purposes. From the System Normal Display, press the **ESCAPE** function button to view the Top Level Menu, as shown in Exhibit 2-8.

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A				T	O	P		L	E	V	E	L		M	E	N	U			
B	F	1	-	C	O	N	F	I	G		F	4	-	P	A	S	S	W	R	D
C	F	2	-	H	I	S	T	R	Y		F	5	-	M	A	I	N	T		
C	F	3	-	D	I	A	G				F	6	-	I	R		C	O	M	M

Exhibit 2-8: Top Level Menu

Most of the CyberCat's menus are password protected to prevent unauthorized access. Limited access to the system's HISTORY (F2), DIAGNOSTICS (F3) and MAINTENANCE (F5) menus is allowed without needing to enter a system password. This allows emergency response and maintenance personnel to respond to system events.

Navigation through the menu system is accomplished using the menu function buttons, the **ESC** button and the **ENTER** button provided on the main display as described in Section 2.1.4. Pressing the corresponding function button will cause the LCD screen to display the selected menu. A brief description of TOP LEVEL MENU choices is described as follows:

F1 - CONFIG

Press the **F1** function button to display the panel's Configuration menu. The configuration menus allow you to change the operating parameters of the CyberCat system. The configuration menus are password protected and require entry of a User Level or higher password to view; or an Administrator Level password to change the configuration parameters.

F2 - HISTRY

Press the **F2** function button to display the panel's History menu. From this screen you can select Alarm, Supervisory, Trouble, Events, Zone, and Erase functions. If selected, the history messages for the specific history buffer are displayed in the sequential order they occurred. Events will be displayed ONLY if there are current events present since reset in that respective state. Other states, such as Drill and Walktest, are available only in the Event History.

F3 - DIAG

Press the **F3** function button to display the panel's Diagnostic menu. The diagnostic menus are designed to assist the service technician in isolating and correcting hardware faults with the system.

F4 - PASSWRD

Press the **F4** function button to display the Password entry screen.

F5 - MAINT

Press the **F5** function button to display the Maintenance menu. The Maintenance menu provides several features that can be used by service personnel to maintain and test the CyberCat system.

F6 - IR COMM

Press the **F6** function button to enable system IR communication with field devices. The IR tool (non-listed) is recommended for use in system set-up and service. It is recommended that the IR communication be enabled only during these times and disabled during normal operation.

2.2 PASSWORD PROTECTION

Access to the CyberCat system's control and function buttons are restricted by the enclosure door. With the door closed and locked, responding personnel can only view system events on the panel display and use the accessible EVENT STEP buttons (if not covered by optional Lexan™) to filter through the systems event history. Opening the enclosure door provides access to the systems Control and Function buttons, which allows greater system operation capabilities. With the enclosure door open, responding personnel have the ability to Silence or Acknowledge system events, initiate Drill commands and Reset the system. In addition, the system operator has limited access to the systems menus and features without needing to enter a system password.

Access to the CyberCat system's menus is password protected to restrict access to those who require it. Each CyberCat allows up to eight (8) User level passwords and a single System Administrator password to be assigned by the system installer. The available security access levels are described as follows.

Password Level	Designation	Privileges
	Default (door panel closed)	<ul style="list-style-type: none"> View system events on LCD display Access to STEP buttons for reviewing system history
1	Customer (door panel open – no password entered)	All default privileges, plus: <ul style="list-style-type: none"> Access to system control switches for executing system Drill, Acknowledge, Silence and Reset History menu (view only) Diagnostic menus (view only) Maintenance menu: Read Device and Device Address (all other menu features are view only) IR Communication (enable/disable)
2	USER (Level 2 password entered – eight available)	All default and Level 1 privileges, plus: <ul style="list-style-type: none"> Configuration menus: Configuration check and set system time and date (all other menu features are view only). Maintenance menu: Device Replace, Walktest, Buzzer Enable/Disable zones Level 2 passwords are assigned during system configuration
3	SYSTEM ADMINISTRATOR (Level 3 password entered)	All default, Level 1 and Level 2 privileges, plus: <ul style="list-style-type: none"> Full access to all system menus Default password is set by the factory prior to shipment. Can be changed in the field.

Exhibit 2-9: Password Access Levels

2.2.1 LOGGING ONTO THE SYSTEM

To log onto the system, press the **F4** function button from the Top Level Menu. The Password screen, as shown in Exhibit 2-10 will be displayed. After entering a successful password, press the **ESCAPE** button to return to the Top Level menu.

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A				E	N	T	E	R		P	A	S	S	W	O	R	D			
B									X	X	X	X								
C				A	C	C	E	S	S	:		D	E	N	I	E	D			
D							C	O	D	E	:	X	X	X	X					

Exhibit 2-10: Password Entry Screen

- Row B - Allows entry of a 4 digit password. Use the ◀▶ navigation buttons to move the cursor to the appropriate field and the +/- buttons (cycles through 0-9) to enter a password.
- Note:** After entry of a Level 3 password, you have the ability to change the default administrator password as detailed in 2.2.2.
- Row C - Displays the access level (Denied, Level 2 (A-H), Sys Admin, Factory) allowed with the password that has been entered.
- Row D - Random 4 digit-code that changes periodically. Used by the factory to gain access to the system if the Administrator password has been forgotten.

2.2.2 CHANGING THE SYSTEM ADMINISTRATOR PASSWORD

After entering a successful Administrator level password you can change the default administrator password by changing the 4-digit number that appears on the far right of Row B, as shown in Exhibit 2-11.

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A				E	N	T	E	R		P	A	S	S	W	O	R	D			
B									P	A	S	S	<	-	-	-	P	A	S	S
C				A	C	C	E	S	S	:		D	E	N	I	E	D			
D							C	O	D	E	:	X	X	X	X					

Exhibit 2-11: Password Entry Screen

- Row B (far right) - Allows entry of a new 4 digit password. Use the ◀▶ navigation buttons to move the cursor under each field and the +/- buttons to enter the new password (cycles through 0-9). After completing the password change, press the **ENTER** button to confirm the change.
- Note:** If the Administrator password is changed and then forgotten, you must contact Fike and provide the 4-digit CODE displayed on Row D of the password entry screen along with a completed password indemnification form.

Reserved for future use.

3.1 GENERAL OPERATION

The CyberCat system operation is based upon a Zone and State Relationship. Each device, input or output must be assigned to at least one Zone and State. A Zone is defined as a specific area of protection or hazard to protect. There are 253 software zones available on the CyberCat. A state is defined as a mode or condition of operation for the fire alarm system. Input devices can be assigned to individual zones or a range of zones (only one zone is typical). Panel events, such as AC Power, Battery, NAC Supervision, or any other main panel initiated troubles, report to Zone 254. Zone 254 and Zone 255 are ANY ZONE selections that CAN NOT be disabled. Output devices may be configured for any zone (Z255) or maximum zones in action table ($3 \times 32 = 96$ different zones).

When an input is activated, it will cause its associated zone(s) to enter an Operational State. Any detection device will cause their associated zone(s) to enter the Alarm State (or Supervisory if programmed). All other input devices must be configured for a specific type of Input State, which will cause its associated zone(s) to enter that Operational State. Output devices are then configured to activate when their associated zone(s) enter into the configured state(s).

Operation Example: When an input device configured for Supervisory Input for Zone 3 is activated, it will cause any output configured for Supervisory Zone 3 to turn ON.

3.1.1 AC TROUBLE DELAY

Central and Remote Supervising Station Systems require the use of a Digital Alarm Communicator Transmitter (DACT), 10-2528 or 10-2254 Reverse Polarity Module. These modules transmit all information from the panel output, to the Supervising Station. Since Loss of AC is non-critical and secondary power is available, Supervising Stations typically need not see immediate AC power low troubles. AC power loss trouble will not immediately be sent to the dialer for AC power low or loss Trouble, if it is the only fault. The communication will wait the programmed amount of time. The CyberCat controller is programmable for a 0-30 hour (in 1 hour increments) AC trouble delay. The piezo and the display of the event do not follow the delay and are immediately annunciated.

3.1.2 DAYLIGHT SAVINGS

The control panel will automatically change the time forward/backward at the appropriate times if daylight savings is selected, YES. The control panel will not change the time if the daylight savings is selected NO. Daylight Saving Time (for the U.S. and its territories) is NOT observed in Hawaii, American Samoa, Guam, Puerto Rico, the Virgin Islands, the Eastern Time Zone portion of the State of Indiana, and by most of Arizona (with the exception of the Navajo Indian Reservation in Arizona).

Control panels with firmware Version 3.00 and higher operate as follows:

Daylight Saving Time will start on the second Sunday in March, and change back to standard time on the first Sunday in November.

Control panels with firmware older than 3.00 operate as follows:

Daylight Saving Time begins for most of the United States at 2 a.m. on the first Sunday of April. Time reverts to standard time at 2 a.m. on the last Sunday of October.

3.1.3 SILENCE INHIBIT

Certain jurisdictions require a silence inhibit timer. This feature requires that the panel not allow silencing for one minute following the first alarm event. If this is configured to be ENABLED, the SILENCE button on the Display (or other Silence input) will not silence the panel for one minute following the receipt of the first alarm event.

3.1.4 SILENCE REMINDER

Certain jurisdictions require a silence reminder. This feature requires that the panel produce a momentary pulse from the panel piezo/buzzer following the silencing of outputs. If this is configured to be ENABLED, the momentary piezo pulse is ½ second long every 14 seconds on a silenced panel.

3.1.5 STATE COUNTERS

The CyberCat can count states to create an activation of an output. The state counters are created from Eclipse addressable devices ONLY (e.g., If zone 1 has several alarms, the output can be programmed to activate upon receipt of 2 alarms total). VESDA does not participate in State Counters.

Note: Do not share zones across the network when state counters are used to activate outputs.

3.1.6 NETWORK OPERATION

Fike's CyberCat 254/1016 and Cheetah Xi control panels can be interfaced together to form a common network of up to 128 panels (network nodes). Each local control panel maintains its own area of protection, while being able to monitor and control other areas (other network nodes). Each panel can receive, display, and log all events distributed across the network. In areas where the entire or portions of the network must be monitored at a central location, each network node(s) can be configured to supervise and display the status of other selected network nodes.

Network events are transmitted across the network by zone and state. Critical events have priority transmission across the network. For example, if multiple supervisory or troubles occur followed by a subsequent alarm, the alarm will be inserted as a priority event for transmission across the network. The event is displayed exactly the same on all network panels (nodes). The first 20 characters of the custom message for the device are transmitted across the network to SUPERVISING controllers only. The peripheral devices do NOT receive custom message information unless the event comes from the panel where the peripheral is connected.

Network nodes can be configured to either share common zone numbers on the network (e.g., Zone 1 spanning multiple panels operates as one zone for all inputs and outputs), or leave the panel zones independent from each other (e.g., Zone 1 on panel 1 is independent from zone 1 on panel 2). If the panel is NOT configured to respond to the zone event that is transmitted, it will respond by logging the event in the panel's history buffer and displaying it on the panels display.

Networked panels will synchronize their time and date to what is stored in the "First" panel. This occurs every 24 hours at 12 am.

Two types of network interface modules are available:

- P/N 10-2482 for connecting panels (nodes) with twisted-pair wire (Refer to Fike Document 06-349, "Network Module" for more details).
- P/N 10-2642 for connecting panels (nodes) with fiber-optic cable (Refer to Fike Document 06-387, "Fiber Optic Network Module" for more details).

Note: The same type of network interface module MUST be used on all panels connected to a common network for communication to occur.

3.1.6.1 IP NETWORK

Fike's Ethernet module (P/N 10-2627) provides a means to connect up to 128 Cheetah Xi and CyberCat control panels (including 50 points) to an existing IP network for centralized monitoring. As events occur on a panel that is connected to an Ethernet network, it will transmit its history messages over the facilities Local Area Network (LAN) or Wide Area Network (WAN) to the supervising (monitoring) panel where the event will be indicated on the panel display. The Ethernet network only allows one way communication between the source panel and the supervising panel; therefore, it CANNOT be used for true panel networking as described in Section 3.1.6 above.

Each panel to be connected to the IP network must have its own Ethernet module and must be configured to transmit its history events to only ONE supervising panel, which can be located either on or off the premises.

Refer to Fike Document 06-388, "Ethernet Module" for more details.

3.1.7 POSITIVE ALARM SEQUENCE

This feature is enabled or disabled for all outputs connected to the panel. When enabled, an Alarm signal from an automatic fire detection device shall be Acknowledged at the main panel display, remote keypad or input module within the set time frame (15-30 seconds) after annunciation of the Alarm event in order to initiate the panel's alarm investigation phase. Annunciation to this point consists of only the CyberCat local piezo sounder and the event message on the main panel display and/or remote display. If the alarm signal is not Acknowledged within 15 seconds, all notification circuits assigned to the same zone as the initiating device will be activated immediately.

During the Alarm investigation phase, trained personnel have up to 180 seconds to evaluate the fire condition and reset the panel. If the panel is not reset during this investigation phase, all notification circuits assigned to the same zone as the initiating device will be activated upon expiration of the 180 second investigation phase. If a second automatic fire detector is actuated during the alarm investigation phase, or any other initiating device (such as manual alarm station) is actuated, all notification circuits assigned to the same zone as the initiating device will be activated immediately.

A means has been provided to bypass this feature without re-configuring the panel. An input module configured with the PAS INHIBIT function will disable this feature temporarily while the module is activated and produce a trouble event. The module must be returned to its normal status to re-enable the positive alarm sequence feature. This will clear the trouble event from the module actuation and restore the system to normal operation.

Note: Device configurations must be sent to all addressable devices if changes are made to the panel's positive alarm sequence operational settings.

Note: When positive alarm sequencing is enabled in the CyberCat panel, then by default, all VESDA detectors will initiate the panel's PAS operation; however, PAS activation is tied solely to the activation of the base detector. Detectors that are capable of supporting detection via multiple sampling tubes/pipes (i.e., VLS, VFT and VEA) will not take the PAS operation into the next state in response to individual tube/pipe activation.

3.1.8 SMOKE CONTROL OPERATION

When used for smoke-control, the CyberCat control panel serves as the single control point for the smoke-control system. It shall coordinate activation of the smoke-control functions from the fire alarm control panel and the Firefighter's Smoke Control Station (FSCS), with the operation of the building HVAC systems and dedicated smoke-control equipment. When the CyberCat control panel is used for Smoke-control, all smoke-control functions shall take precedence over all other panel operations.

The smoke-control functions can be activated automatically or manually. Automatic activation of the smoke-control system shall be initiated in response to signals received from a single smoke detector, heat detector, waterflow switch, or a combination of these devices. Automatic activation shall have the highest priority over all other sources of automatic control within the building. Manual activation and deactivation of the smoke-control system is accomplished via smoke-control override switches. The override switches shall give the responding firefighting personnel total control capabilities over the operation of the smoke-control system(s). Override switches can be incorporated either into the CyberCat control panel or into the associated Firefighter's Smoke Control Station (FSCS). Each switch shall be clearly marked to indicate the smoke-control zone and/or function served. Manual activation and deactivation shall have the highest priority over all other sources of automatic or manual control(s) within the building.

3.1.9 EMERGENCY COMMUNICATION SYSTEM (ECS)

When used for Emergency Communication System (ECS) service, the CyberCat panel serves as the central control point for the system. It will coordinate the activation and operation of both the In-Building Fire Emergency Voice/Alarm Communication System (EVACS) and the In-Building Mass Notification System (MNS), when both are utilized. Activation of ECS for EVAC or MNS operation can be initiated automatically or manually at the fire alarm control panel (FACP), local operating consoles (LOC), or by using SLC input devices configured for ECS operation.

Automatic activation of the ECS system is initiated by the CyberCat based on the panel's standard zone and state relationships. Each amplifier can be programmed to play a single preset audio message through its four speaker circuits based on the active state and zone. For example: When an alarm is detected, the associated zone and state information is transmitted over the RS485 bus to each amplifier.

If the amplifier has been programmed to activate in response to the system event, the audio message assigned to the active state is decompressed and played. Amplifiers not programmed to respond to the event will remain off unless programmed to play either the default ALERT message or an alternate custom message. Each amplifier holds its prerecorded messages and tones in a digital format on the board's internal memory for playback.

Manual activation of the ECS system is accomplished using panel mounted switch cards or SLC input devices (monitor modules) configured to initiate ECS functions. These components can be used to give the responding firefighting personnel total control capabilities over the operation of the ECS system. Switch cards are designed so they can be incorporated either into the CyberCat control panel enclosure or into Local Operating Consoles (LOC) enclosures. LOCs can be strategically located throughout the facility to provide remote control of the ECS system. SLC input devices (monitor modules) provide a means to activate the ECS system using UL 2017 listed contact initiating devices.

Paging Operation - The base emergency communication system provides live paging capabilities that can be initiated either from the Fire Command Center (FCC) using either the integral microphone or firefighter's phone handset, or from a Local Operating Console's (LOC) remote microphone. Page messages can be broadcast live or recorded for continuous playback over the system amplifiers. Live page messages are non-latching. When the page has been completed, the amplifiers will automatically switch back to playing the audio message that was active (if any) prior to the page or will turn off. Optional switch modules may be installed to allow the system operator to select individual areas for selective paging versus the standard page all selection.

Fire-phone Operation - Firefighter's phone capabilities can be added to the emergency communication system (ECS) to provide two-way communications between the fire command center (FCC) telephone handset and the firefighter's telephone stations/jacks installed at strategic locations throughout the protected facility. The firefighter's handset located at the FCC is connected to the telephone riser by pressing the connect phone switch on the paging control card (P/N 10-2741). Taking a remote telephone off-hook or plugging a portable handset into a remote jack generates a visible and audible incoming call signal at the FCC. The individual originating the call hears a tone until the incoming call is manually connected to the telephone riser by the system operator. Up to five (5) remote telephones may be connected to the telephone riser simultaneously. The system operator at the FCC can also connect the telephone riser to the paging system, allowing paging via the telephone system.

Application Note: MNS operation requires that a status LED be provided to indicate when the MNS system is active and when a 'Trouble' event has occurred on the system. Both the FCC and LOC paging control cards provide an MNS/ECS active LED; however, indication of MNS 'Trouble' events require that either a 20-zone annunciator card (P/N 10-2660 or 10-2667) or 20-zone input/output card (P/N 10-2659) be installed with an LED configured to provide continuous indication of an MNS system trouble event.

3.1.9.1 VOICE SYSTEM PRIORITIES

Activation of Fike's emergency communication system can be initiated automatically by the CyberCat panel for Alarm, Test Alarm, Supervisory and Process states or manually via activation of an input switch configured for Voice or MNS operation (as stated above). In order to resolve which panel event or input switch should have operational control priority over another, Fike's voice system allows you to assign a control priority level to the panel events and switches that initiate voice operations. Each event or switch can be assigned a priority level from 0 to 254 using the panel's configuration software (C-Linx), with 1 being the highest priority and 254 being the lowest priority. A setting of 0 disables the control priorities and must be used on all systems where priority schemes are not utilized.

Activation of a panel event or switch with a lower priority setting cannot override a panel event or switch with a higher priority. A panel event or switch can override another panel event or switch with the same priority setting or a lower priority setting.

Note: Assigning a priority to panel events does not affect the normal operation of the panel where an Alarm event always has priority over a Supervisory event. It simply assigns a priority level to the audio messages that will be played by the voice system amplifiers in response to a switch press or panel event.

3.2 PANEL MENU STRUCTURE

The CyberCat control panel is equipped with an extensive menu structure. Refer to Appendix A for a complete breakdown of the system menu structure. Access to certain panel menus and functions (Configuration Menus) are password protected and require the operator to log onto the system in order to view them or gain access to make changes. Refer to Section 2.2.1 for details on how to log onto the system.

Access to system menus such as History, Diagnostics and Maintenance are not password protected. This allows responding personnel to easily review system events as they occur by accessing the History Menu and diagnose potential problems occurring on the system via the Diagnostics Menus. The Maintenance Menu provides several functions that are designed to assist service personnel in maintaining the system. A detailed description of these panel menus and available functions is provided in the following Sections 4.0, 5.0 and 6.0 for reference purposes.

3.3 PANEL OPERATION BY EVENT

The operation of the control panel varies depending upon the event present on the system. This section provides a description of the information that will be presented on display for each panel event, along with instructions on how to respond to the event.

3.3.1 POWER-UP RESET

The system will perform a power-up reset (long reset) when power (AC or DC) is first applied to the CyberCat controller or when a **RESET** command is initiated either from the main controller display, peripheral device, or a remote input module configured for reset. Prior to performing the system reset, the panel will display the following screen for 4 seconds.

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		R	E	C	O	R	D		N	E	W		D	E	V	I	C	E		
B	M	E	S	S	A	G	E	S		F	R	O	M		R	E	S	E	T	?
C										N	O									
D																				

Exhibit 3-1: Record New Device Display

This screen provides you the opportunity to select whether to record new device messages during the system reset process. By default, this feature is set to "NO", which allows the panel to reset and return to Normal State without recording new device messages. Press the **ACKNOWLEDGE** button once to change the "NO" on Row C to "YES". This will cause all devices connected to the SLC loop to transmit a new device message that will be displayed and recorded in the controller history. Press the **ACKNOWLEDGE** button a second time to change the "NO" to "YES WITH LEARN NEW". This will cause only new devices connected to the SLC loop to transmit a new device message. If the loop wiring or devices are changed on the system, you must select "YES" to record new device messages; otherwise the panel will reset and return to Normal State without recording the changes made to the loop.

Upon completion of the 4 second delay, the system reset process will continue and the control panel will do the following:

1. Clears All (latched) active inputs
2. Interrupts resettable power
3. Drops power to SLC loops
4. Sends "System Reset" message to history buffer, printers, PC graphics and remote displays
5. Sends BROADCAST ADDRESS message to SLC devices and requests their response (selectable)
6. Displays the following screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A				P	O	W	E	R	-	U	P		R	E	S	E	T			
B	C	U	S	T	O	M		M	S	G		P	A	N	E	L		0	0	1
C	H	H	:	M	M	:	S	S	A		M	M	/	D	D	/	Y	Y	Y	Y
D	E	V	E	N	T		X	X	X	X		O	F		Y	Y	Y	Y		

Exhibit 3-2: Power-Up Reset Display

- Row A – Indicates activation of the panel's power-up reset process.
- Row B – Display a 20 character custom message that can be changed to suit your project requirements.
- Row C – Displays the current system time and date.
- Row D – Display the total number of system events present on the system.

Note: Upon completion of the power-up/reset process, the panel will display the System Normal screen. If any alarm or trouble event exists after a system reset, all NACs, control outputs, and panel audio and visual indicators will reactivate.

3.3.2 NORMAL STATE

The system operates in Normal State when no alarm or troubles exists. In Normal State, the control panel does the following:

1. Green AC POWER LED illuminates.
2. Supervises loop devices (requests device status every 8 seconds). If device fails to report, panel will indicate DEVICE MISSING trouble within 1 minute. Likewise, if a new device is present on the system and not in the panel configuration, a DEVICE NOT IN CONFIG trouble will be reported.
3. LED on SLC devices will blink every 5 seconds.
4. SLC devices communicate their status directly to other devices (peer-to-peer).
5. Supervises panel NAC and auxiliary power circuits.
6. Supervises AC/DC power.
7. Supervises devices connected to peripheral bus.
8. Displays a system normal message as follows:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A			C	Y	B	E	R		C	A	T			v	7	.	X	X		
B			F	I	K	E		C	O	R	P	O	R	A	T	I	O	N		
C	H	H	:	M	M	:	S	S	A		M	M	/	D	D	/	Y	Y	Y	Y
D	A	L	:	0	0	0		S	U	:	0	0	0		T	R	:	0	0	0

Exhibit 3-3: System Normal Display

- Row A – Displays a standard system message including panel name and firmware operating version.
- Row B – Displays a 20 character custom message that can be changed to suit your project requirements.
- Row C – Displays the current system time and date.
- Row D – Displays the number of Alarm (AL), Supervisory (SU), and Trouble (TR) events present on the system.

3.3.3 ALARM / WATERFLOW STATE

When an initiating device (detector, manual pull and input configured for detection or waterflow) activates, the control panel does the following:

1. ALARM LED flashes.
2. Panel sounder pulses.
3. LED on active device will turn on (RED) to indicate its activated status. It will light its remote LED as programmed, if connected.
4. System Alarm relay (P2) activates.
5. Associated system outputs (notification and control) activate if programmed for specific Zone and State of activated device.
6. Sends Alarm message to remote displays, history buffer, printers, and PC monitoring stations, DACT
7. Displays Alarm event on the LCD display as follows:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	A	L	A	R	M	:		D	E	V	I	C	E		T	Y	P	E		
B	C	U	S	T	O	M		M	E	S	S	A	G	E		L	-	A	D	R
C	H	H	:	M	M	:	S	S	A		M	M	/	D	D	/	Y	Y	Y	Y
D		E	V	E	N	T		X	X	X	X		O	F		Y	Y	Y	Y	

Exhibit 3-4: Alarm Display

- Row A – Displays the device type associated with the Alarm event (i.e. photo, photo/heat, photo duct, ionization, pull station, monitor module, mini monitor module, dual monitor module, conventional zone module)
- Row B – Displays the 20 character custom message for the device
- Row C – Displays the Time and Date of Event
- Row D – Displays the event number (XXXX) and the total number of current events (YYYY)

How to respond to an Alarm / Waterflow Event:

1. Press the **ACKNOWLEDGE** button to silence the panel sounder only. The panel ALARM LED will change from flashing to steady. The control panel will send an acknowledge message to remote displays, history buffer, printers, PC monitoring stations, and DACT.
2. Press the **F1** button to toggle Rows A and B on display to show the Panel-Loop-Address of active device.
3. Press the **F2** button to toggle Rows C and D on display to show the extra 40 characters of the devices custom message.
4. Investigate the cause of the Alarm and if a fire is present, follow the buildings emergency evacuation procedures. **Proceed to next step only if it is determined that the event is a false Alarm.**
5. Press the **SILENCE** button to silence the panel sounder and any activated outputs that are programmed as silenceable. The panel ALARM LED will change from flashing to steady. The control panel will send a silence message to remote displays, history buffer, printers, PC monitoring stations, and DACT.
6. Correct the condition causing the false Alarm; then press the system **RESET** button to clear the event and return the panel to the Normal State. The control panel will send a SYSTEM NORMAL message to remote displays, history buffer, printers, PC monitoring stations, and DACT.

Note: By default, the panel will record the first 999 Alarm events after the 1st alarm (to save the first alarms). Once an alarm is recorded on an address, further pre-alarms are not logged in history until the panel is reset. The 999 Alarm event limitation can be turned off in panels equipped with firmware V6.50 or higher.

Note: Waterflow events will initiate a 2 second alarm verification time delay in order to prevent activation of the module in the case of water pressure surges.

3.3.4 ALARM VERIFICATION

Refer to Section 3.4.1 for a complete description of the Alarm Verification feature.

When a detector or input module configured for alarm verification activates, the control panel initiates an alarm verification time delay (0-60 seconds for detectors and 2 seconds for waterflow input) and does the following:

1. LED on active device will turn on (RED) to indicate its activated status.
2. Sends Alarm Verification message to network panels, remote displays, history buffer, printers, and PC monitoring stations.
3. Associated system outputs (notification and control) will activate if programmed for specific Zone and State of activated device (defaulted off).
4. Displays Alarm Verification event on the LCD display as follows:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A			A	L	A	R	M		V	E	R	I	F	Y		O	N			
B	C	U	S	T	O	M		M	E	S	S	A	G	E		L	-	A	D	R
C	H	H	:	M	M	:	S	S	A		M	M	/	D	D	/	Y	Y	Y	Y
D		E	V	E	N	T		X	X	X	X		O	F		Y	Y	Y	Y	

Exhibit 3-5: Alarm Verification Display

- Row A – Displays activation of Alarm Verification time delay
- Row B – Displays the 20 character custom message for the device
- Row C – Displays the Time and Date of Event
- Row D – Displays the event number (XXXX) and the total number of current events (YYYY)

How to respond to an Alarm Verification Event:

1. Press the **F1** button to toggle Rows A and B on display to show the Panel-Loop-Address of active device.
2. Press the **F2** button to toggle Rows C and D on display to show the extra 40 characters of the devices custom message.
3. Investigate the cause of the Alarm and if a fire is present, follow the buildings emergency evacuation procedures. **Proceed to next step only if it is determined that the event is a false Alarm.**
4. Correct the condition causing the Alarm Verification; then, press the system **RESET** button to clear the event and return the panel to the Normal State.
5. If Alarm Verification delay expires and device is still in alarm, the device will enter the Alarm State as described in 3.3.3.

Note: Alarm Verification events are non-latching and will clear when delay expires and device clears.

Note: Alarm Verification is limited to local panel operation only and will not operate across the panel network.

3.3.5 SUMMING ALARM STATE (NON-LISTED)

Refer to Section 3.4.7 for a complete description of the Summing Alarm state.

Summing is a method for up to eight “like type” smoke detectors (e.g., photoelectric, ionization, photo/heat & photo duct) to be grouped together to generate a fast alarm response to dispersed smoke. When a detector is active with a summing alarm, the control panel does the following:

1. ALARM LED flashes.
2. Panel sounder pulses.
3. LED on active device will turn on (RED) to indicate its activated status. It will light its remote LED as programmed, if connected.
4. System Alarm relay (P2) activates.
5. Associated system outputs (notification and control) will activate if programmed for specific Zone and State of activated device.
6. Sends Summing Alarm message to remote displays, history buffer, printers, PC monitoring stations, and DACT.
7. Displays Summing Alarm event on the LCD display as follows:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	S	U	M	A	L	:		D	E	V	I	C	E		T	Y	P	E		
B	C	U	S	T	O	M		M	E	S	S	A	G	E		L	-	A	D	R
C	H	H	:	M	M	:	S	S	A		M	M	/	D	D	/	Y	Y	Y	Y
D		E	V	E	N	T		X	X	X	X		O	F		Y	Y	Y	Y	

Exhibit 3-6: Summing Alarm Display

- Row A – Displays the device type associated with the Summing Alarm event
- Row B – Displays the 20 character custom message for the device
- Row C – Displays the Time and Date of Event
- Row D – Displays the event number (XXXX) and the total number of current events (YYYY)

How to respond to a Summing Alarm Event:

1. Press the **ACKNOWLEDGE** button to silence the panel sounder only. The panel ALARM LED will change from flashing to steady. The control panel will send an acknowledge message to remote displays, history buffer, printers, and PC monitoring stations.
2. Press the **F1** button to toggle Rows A and B on display to show the Panel-Loop-Address of active device.
3. Press the **F2** button to toggle Rows C and D on display to show the extra 40 characters of the devices custom message.
4. Investigate the cause of the Alarm and if a fire is present, follow the buildings emergency evacuation procedures. **Proceed to next step only if it is determined that the event is a false Alarm.**
5. Press the **SILENCE** button to silence the panel sounder and any activated outputs that are programmed as silenceable. The panel ALARM LED will change from flashing to steady. The control panel will send a silence message to remote displays, history buffer, printers, PC monitoring stations, and DACT.
6. Correct the condition causing the false Alarm; then press the system **RESET** button to clear the event and return the panel to the Normal State. The control panel will send a SYSTEM NORMAL message to remote displays, history buffer, printers, PC monitoring stations, and DACT.

3.3.6 TROUBLE STATE

The Trouble State may be caused by a system, circuit or device supervision trouble. It can also be activated by an input module programmed for Trouble, a PreAlarm input(s), or Walk-Test activation. Upon entering the Trouble State the control panel does the following:

1. TROUBLE LED flashes.
2. Panel sounder activates steady.
3. LED on device in Trouble will blink (Yellow) to indicate its trouble status. It will light its remote LED as programmed, if connected.
4. System Trouble relay (P2) activates. This relay is normally energized and will de-energize.
5. Associated system outputs (notification and control) will activate if programmed for specific Zone and State of activated device.
6. Sends Trouble message to remote displays, history buffer, printers, PC monitoring stations, and DACT.
7. Displays Trouble event on the LCD display for 100 seconds as follows; then switches to the System Status Display if all events are restored and no buttons are pressed:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A			G	E	N	E	R	A	L		T	R	O	U	B	L	E			
B	C	U	S	T	O	M		M	E	S	S	A	G	E		L	-	A	D	R
C	H	H	:	M	M	:	S	S	A		M	M	/	D	D	/	Y	Y	Y	Y
D	E	V	E	N	T		X	X	X	X		O	F		Y	Y	Y	Y		

Exhibit 3-7: Trouble Display

- Row A – Displays the device type associated with the Trouble event
- Row B – Displays the 20 character custom message for the device
- Row C – Displays the Time and Date of Event
- Row D – Displays the event number (XXXX) and the total number of current events (YYYY)

How to respond to a Trouble Event:

1. Press the **ACKNOWLEDGE** button to silence the panel sounder only. The panel TROUBLE LED will change from flashing to steady. The control panel will send an acknowledge message to remote displays, history buffer, printers, PC monitoring stations, and DACT.
2. Press the **F1** button to toggle Rows A and B on display to show the Panel-Loop-Address of active device.
3. Press the **F2** button to toggle Rows C and D on display to show the extra 40 characters of the devices custom message.
4. Press the **SILENCE** button to silence the panel sounder and any activated outputs that are programmed as silenceable. The panel TROUBLE LED will change from flashing to steady. The control panel will send a silence message to remote displays, history buffer, printers, PC monitoring stations, and DACT.
5. Investigate the cause of the Trouble event. Contact Fike for a complete listing of system event messages and suggested corrective actions.
6. Correct the condition causing the Trouble event; the panel will return to normal if no other events are present (non-latching events).
7. For latching troubles, press the system **RESET** button to clear the event and return the panel to the Normal State.

Note: The Trouble state is generally non-latching, excluding 'LOOP CLASS A OPEN', 'LOOP SHORT', and 'DRIFT TROUBLE' troubles which are latching. The latching troubles noted require reset of the panel to clear the fault once it is corrected.

3.3.7 SUPERVISORY STATE

The Supervisory State may be activated by any input configured for Supervisory. These inputs are typically connected to Sprinkler system Tamper or Low Air Pressure input contacts. Upon entering the Supervisory State the control panel does the following:

1. SUPERVISORY LED flashes.
2. Panel sounder activates on & off (warbles).
3. LED on active device will turn on (Red) to indicate its active status. It will light its remote LED as programmed, if connected.
4. System Supervisory relay (P2) activates.
5. Associated system outputs (notification and control) will activate if programmed for specific Zone and State of activated device.
6. Sends Supervisory message to remote displays, history buffer, printers, PC monitoring stations, and DACT.
7. Displays Supervisory event on the LCD display for 100 seconds as follows; then switches to the System Status Display if all events are restored and no buttons are pressed:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		S	U	P	E	R	V	I	S	O	R	Y		I	N	P	U	T		
B	C	U	S	T	O	M		M	E	S	S	A	G	E		L	-	A	D	R
C	H	H	:	M	M	:	S	S	A		M	M	/	D	D	/	Y	Y	Y	Y
D		E	V	E	N	T		X	X	X	X		O	F		Y	Y	Y	Y	

Exhibit 3-8: Supervisory Display

- Row A – Displays the device type associated with the Supervisory event
- Row B – Displays the 20 character custom message for the device
- Row C – Displays the Time and Date of Event
- Row D – Displays the event number (XXXX) and the total number of current events (YYYY)

How to respond to a Supervisory Event:

1. Press the **ACKNOWLEDGE** button to silence the panel sounder only. The panel SUPERVISORY LED will change from flashing to steady. The control panel will send an acknowledge message to remote displays, history buffer, printers, PC monitoring stations, and DACT.
2. Press the **F1** button to toggle Rows A and B on display to show the Panel-Loop-Address of active device.
3. Press the **F2** button to toggle Rows C and D on display to show the extra 40 characters of the devices custom message.
4. Press the **SILENCE** button to silence the panel sounder and any activated outputs that are programmed as silenceable. The panel SUPERVISORY LED will change from flashing to steady. The control panel will send a silence message to remote displays, history buffer, printers, PC monitoring stations, and DACT.
5. Investigate the cause of the Supervisory event. Contact Fike for a complete listing of system event messages and suggested corrective actions.
6. Correct the condition causing the Supervisory event; the panel will require reset to restore the system to Normal (non-latching events).
7. For latching events, press the system **RESET** button to clear the event and return the panel to Normal.

Note: Supervisory inputs may be configured for latching or non-latching. Latching troubles require reset of the panel to clear the fault.

Note: When a Zone Disable is active, it also automatically creates a Supervisory in the disabled zone.

3.3.8 PRE-ALARM STATE

Refer to Section 3.4.2 for a complete description of the Pre-Alarm state.

System detectors can be configured to initiate two levels of Pre-Alarms (Pre-Alarm 1 and Pre-Alarm 2). As the smoke obscuration or temperature level in a detector exceeds the programmed Pre-Alarm levels, the control panel does the following:

1. PRE-ALARM LED flashes (PRE-ALARM 1 or PRE-ALARM 2).
2. TROUBLE LED flashes (panel trouble relay does not activate).
3. Panel sounder activates steady.
4. LED on active device will slow blink (Red) to indicate a Pre-Alarm 1 status. It will change to a fast blink for Pre-Alarm 2.
5. Associated system outputs (notification and control) will activate if programmed for specific Zone and State of activated device.
6. Sends Pre-Alarm message to remote displays, history buffer, printers, and PC monitoring stations.
7. Displays Pre-Alarm event on the LCD display for 100 seconds as follows; then switches to the System Status Display if all events are restored and no buttons are pressed:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A					P	R	E	-	A	L	A	R	M		#	1				
B	C	U	S	T	O	M		M	E	S	S	A	G	E		L	-	A	D	R
C	H	H	:	M	M	:	S	S	A		M	M	/	D	D	/	Y	Y	Y	Y
D	E	V	E	N	T		X	X	X	X		O	F		Y	Y	Y	Y		

Exhibit 3-9: Pre-Alarm Display

- Row A – Displays the device type associated with the Pre-Alarm event
- Row B – Displays the 20 character custom message for the device
- Row C – Displays the Time and Date of Event
- Row D – Displays the event number (XXXX) and the total number of current events (YYYY)

How to respond to a Pre-Alarm Event:

1. Press the **ACKNOWLEDGE** button to silence the panel sounder only. The panel PRE-ALARM LED will change from flashing to steady. The control panel will send an acknowledge message to remote displays, history buffer, printers, and PC monitoring stations.
2. Press the **F1** button to toggle Rows A and B on display to show the Panel-Loop-Address of active device.
3. Press the **F2** button to toggle Rows C and D on display to show the extra 40 characters of the devices custom message.
4. Investigate the cause of the Pre-Alarm event. Contact Fike for a complete listing of system event messages and suggested corrective actions.
5. Press the **SILENCE** button to silence the panel sounder and any activated outputs that are programmed as silenceable. The panel PRE-ALARM LED will change from flashing to steady. The control panel will send a silence message to remote displays, history buffer, printers, and PC monitoring stations.
6. Correct the condition causing the Pre-Alarm event.

Note: Pre-Alarms are non-latching. Once the obscuration level lowers below the pre-alarm level, the panel will return to normal if no other events are present.

Note: There is NO Pre-Alarm communication with the DACT.

3.3.9 PROCESS STATE

The Process State may be activated by any input (switch card or monitor module) configured for Process. These inputs are typically connected to non-alarm system contacts used for process management functions. When a Process event occurs the control panel does the following:

1. LED on active device will turn on (Red) to indicate its active status.
2. Associated system outputs (notification and control) will activate if programmed for specific Zone and State of activated device.
3. Sends Process message to remote displays, history buffer, printers, and PC monitoring stations.
4. Displays Process event on the LCD display for 100 seconds as follows; then switches to the System Status Display if all events are restored and no buttons are pressed:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A				P	R	O	C	E	S	S		I	N	P	U	T				
B	C	U	S	T	O	M		M	E	S	S	A	G	E		L	-	A	D	R
C	H	H	:	M	M	:	S	S	A		M	M	/	D	D	/	Y	Y	Y	Y
D		E	V	E	N	T		X	X	X	X		O	F		Y	Y	Y	Y	

Exhibit 3-10: Process Display

- Row A – Displays the device type associated with the Process event
- Row B – Displays the 20 character custom message for the device
- Row C – Displays the Time and Date of Event
- Row D – Displays the event number (XXXX) and the total number of current events (YYYY)

How to respond to a Process Event:

1. Press the **F1** button to toggle Rows A and B on display to show the Panel-Loop-Address of active device.
2. Press the **F2** button to toggle Rows C and D on display to show the extra 40 characters of the devices custom message.
3. Check the Process message for the type of event and location.
4. Correct the condition causing the Process event.

Note: Process events are non-latching. Once the Process contact is restored, the panel will return to normal if no other events are present.

Note: Process inputs must be activated and deactivated from the same switch (panel or remote). Switch activation at different locations for the same Process function will not toggle (deactivate) other active switches programmed for the same Process function. All Process input switches serving the same zone must be deactivated before the process input will clear at the panel.

3.3.10 ZONE DISABLE STATE

The Zone Disable State may be activated by any input configured for Zone Disable. When a Zone is disabled, outputs in the disabled zone will not operate unless activated from a different zone that is not disabled. Disabling a zone from the C-Linx Software or by the main panel menu's will cause the control panel to operate in the following manner:

1. Panel enters Trouble and Supervisory states.
2. Supervisory LED flashes.
3. TROUBLE LED flashes.
4. DISABLED LED flashes.
5. System Trouble relay (P2) activates.
6. Panel sounder pulses.
7. Sends Zone Disable message to remote displays, history buffer, printers, PC monitoring stations, and DACT.
8. Displays Zone Disable event on the LCD display for 100 seconds as follows; then switches to the System Status Display if all events are restored and no buttons are pressed:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		Z	O	N	E		D	I	S	A	B	L	E	D	:			0	0	1
B	C	U	S	T	O	M		M	E	S	S		Z	O	N	E		0	0	1
C	H	H	:	M	M	:	S	S	A		M	M	/	D	D	/	Y	Y	Y	Y
D		E	V	E	N	T		X	X	X	X		O	F		Y	Y	Y	Y	

Exhibit 3-11: Zone Disable Display

- Row A – Displays the Zone disabled state with Zone #
- Row B – Displays the 20 character custom message for the Zone
- Row C – Displays the Time and Date of Event
- Row D – Displays the event number (XXXX) and the total number of current events (YYYY)

How to respond to a Zone Disable Event:

1. Press the **ACKNOWLEDGE** button to silence the panel sounder only. The panel DISABLED LED will change from flashing to steady. The control panel will send an acknowledge message to remote displays, history buffer, printers, and PC monitoring stations.
2. Press the **SILENCE** button to silence the panel sounder and any activated outputs that are programmed as silenceable. The panel DISABLED LED will change from flashing to steady. The control panel will send a silence message to remote displays, history buffer, printers, and PC monitoring stations.
3. Check the Zone Disable message for the type of event and location.
4. Correct the condition causing the Zone Disable event.

Note: Zone Disable events are non-latching. Once the Zone Disable contact is restored or the zone is re-enabled, the panel will return to normal if no other events are present.

Note: A zone disable input assigned to multiple zones will activate both the 'Trouble' and 'Supervisory' states in all the zones assigned to the module.

Note: Zone 254 is an "All Zone" disable input.

Note: Activation and deactivation of a Zone Disable input must be accomplished from the same switch (panel or remote). Switch activation at different locations for the same Zone Disable function will not toggle (deactivate) other active switches programmed for the same zone Disable function. All Zone Disable input switches serving the same zone must be deactivated before the disable input clears at the panel.

3.3.11 DRILL STATE

Fire Alarm Drill inputs are frequently needed to perform a practice fire alarm drill/building evacuation test or for the Fire Department to evacuate a building. The Drill State can be activated from the main panel Drill button, an addressable input Monitor Module configured for Drill, or the Remote Display. When a Drill event occurs, the control panel does the following:

1. Panel sounder pulses.
2. LED on active (Drill) device will turn on (Red) to indicate its active status.
3. Associated system outputs (notification and control) will activate if programmed for specific zone and state of activated device.
4. Sends Drill message to remote displays, history buffer, printers, and PC monitoring stations.
5. Displays Drill event on the LCD display for 100 seconds as follows; then switches to the System Status Display if all events are restored and no buttons are pressed:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	I	N	P	U	T		A	C	T	I	V	E	:		D	R	I	L	L	
B	C	U	S	T	O	M		M	E	S	S	A	G	E		L	-	A	D	R
C	H	H	:	M	M	:	S	S	A		M	M	/	D	D	/	Y	Y	Y	Y
D		E	V	E	N	T		X	X	X	X		O	F		Y	Y	Y	Y	

Exhibit 3-12: Drill Display

- Row A – Displays the Drill active event
- Row B – Displays the 20 character custom message for the active device
- Row C – Displays the Time and Date of Event
- Row D – Displays the event number (XXXX) and the total number of current events (YYYY)

The following devices and panel circuits can be configured to participate in system drills:

Addressable Supervised Control Module: drill enabled by default

Addressable Relay Module: drill disabled by default

Main board NAC 1 & 2: drill disabled by default

Main board relays: drill disabled by default

CRM4 relays: drill disabled by default

How to respond to a Drill Event:

1. Press the **ACKNOWLEDGE** button to silence the panel sounder only. The control panel will send an acknowledge message to remote displays, history buffer, printers, and PC monitoring stations.
2. Press the **SILENCE** button to silence the panel sounder and any activated outputs that are programmed as silenceable. The control panel will send a silence message to remote displays, history buffer, printers, and PC monitoring stations.
3. Drill events are latching. The control panel must be reset to return the system to Normal status.

Note: The control panel's NAC and relay circuits can be configured to participate in a system Drill. In addition, the intelligent addressable control and relay modules can be configured to participate in system Drills as well.

3.3.12 WALK-TEST OPERATION

Walk-Test provides a means to manually verify the proper operation of the system without unneeded disturbance to building occupants. Walk-test operation can be initiated by the CyberCat controller or directly at each input device using Fike's IR tool (P/N 55-051). When executed from the CyberCat panel, walk-test functions as a toggle mode, it is either ON or OFF. All SLC loop devices are taken off-line and will NOT initiate normal system events. While walk-test is active, the control panel operates as follows:

1. Panel sounder pulses (can be programmed to not participate in walk-test).
2. TROUBLE LED flashes.
3. LED on active (walk-test) device blinks Green then Red when tested to indicate it is in the TEST ALARM status. LEDs will flash green every 5 seconds when alarm level clears.
4. System outputs (notification and control) will activate continuous (4 second duration) if programmed for specific Zone and State (walk-test) of activated device.
5. Sends walk-test message to remote displays, history buffer, printers, and PC monitoring stations.
6. Displays walk-test event on the LCD display for 100 seconds as follows; then switches to the System Status Display if all events are restored and no buttons are pressed:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A				W	A	L	K	T	E	S	T		A	L	A	R	M			
B	C	U	S	T	O	M		M	E	S	S	A	G	E		L	-	A	D	R
C	H	H	:	M	M	:	S	S	A		M	M	/	D	D	/	Y	Y	Y	Y
D	E	V	E	N	T		X	X	X	X	O	F		Y	Y	Y	Y			

Exhibit 3-13: Walk-Test Display

- Row A – Displays the Walk-Test active event
- Row B – Displays the 20 character custom message for the active device
- Row C – Displays the Time and Date of Event
- Row D – Displays the event number (XXXX) and the total number of current events (YYYY)

How to respond to a Walk-Test Event:

1. Press the **ACKNOWLEDGE** button to silence the panel sounder only. The control panel will send an acknowledge message to remote displays, history buffer, printers, and PC monitoring stations.
2. Press the **SILENCE** button to silence the panel sounder and any activated outputs that are programmed as silenceable. The control panel will send a silence message to remote displays, history buffer, printers, and PC monitoring stations.
3. Walk-Test events are non-latching. The panel will exit the walk-test mode after 60 minutes of inactivity and will reset itself back to normal operation. The timer restarts upon any event or press of a button.

Note: The default Walk-Test timeout is 1 hour but can be set for a maximum of 4 hours. This timer restarts upon any event or press of button. If no events or buttons are pressed for the set timeout period, the system will automatically reset itself back to normal operation.

Refer to Section 6.4.1.4 for further details.

3.3.13 FAN RESTART OPERATION

Fan Restart operation provides a means to sequence the restart of AHU fan motors after they have been shut down in response to a fire alarm event. Fan restart operation can be accomplished using the panel mounted CRM4 relay cards (P/N 10-2204) and/or addressable relay modules connected to the panel's SLC loop programmed for 'AHU Shutdown Relay' operation.

Fan restart operation varies depending upon which component is used to perform the AHU shutdown (i.e., CRM4 or addressable relay). The following subsections describe how each component operates during the fan restart sequence.

❗ Critical Note: Fan restart shall NOT be used for smoke control operation.

❗ Critical Note: Fan restart over a panel network can only be accomplished using a monitor module programmed for "Fan Restart". Initiation of the fan restart sequence from the panel or peripheral device will not transmit over the network.

3.3.13.1 CRM4 FAN RESTART OPERATION

Each CRM4 relay can be designated for fan restart operation by configuring it with a restart delay (40 – 250 seconds). Once the relay has been designated for fan restart operation, it automatically defaults to a normally energized relay and will activate for any ALARM event in any of its zones. CRM4 fan restart can be configured for manual or automatic operation using the control panel's 'FAN RESTART MODE' function that can be found in Configuration Menu 4 > F5-Relays > F4-Fan Restart Mode.

Automatic Restart

Upon activation of an ALARM event, the CRM4 relays will activate and remain active even after the control panel is reset. After reset, the fan restart sequence begins automatically and relays will deactivate according to their programmed time delay allowing the startup of the AHU fan motors to be staggered. As each relay is deactivated, the corresponding designation on Rows B and C of this display will go blank. Once all fan restart relays have deactivated, the panel will return to the 'System Normal' screen.

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	A	U	T	O	M	A	T	I	C		F	A	N		S	T	A	R	T	
B		1	2	A				1	2	B			1	2	C			1	2	D
C		1	3	A				1	3	B			1	3	C			1	3	D
D	A	L	:	0	0	0		S	U	:	0	0	0		T	R	:	0	0	0

Exhibit 3-14: Automatic Fan Restart Display

- Row A – Displays "AUTOMATIC FAN START", indicating the fan restart sequence is running.
- Row B – Displays the CRM4 fan restart relays that have yet to deactivate (P12).
- Row C – Displays the CRM4 fan restart relays that have yet to deactivate (P13).
- Row D – Displays the number of alarm (AL), supervisory (SU), and trouble (TR) events present on the system.

❗ Note: If all relays are deactivated prior to panel reset (because no alarm was present), then this display is not shown.

Manual Restart

Upon activation of an ALARM event, the CRM4 relays will activate and remain active even after the control panel is reset. After reset, the fan restart sequence must be initiated manually using any of the following sources: 1) press the control panel's "ENTER" key, 2) peripheral device (i.e., remote display or input/output card) switch configured for Fan Restart, 3) control panel's "AHU ON" function that can be found in MAINTENANCE MENU 2. Once initiated, the panel will start the automatic fan restart sequence and the AHU Shutdown relays will deactivate according to their programmed time delay allowing the startup of the AHU fan motors to be staggered. Once all relays are deactivated, the panel will return to the 'System Normal' screen.

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0		
A	F	O	R		F	A	N		S	T	A	R	T	-	>	E	N	T	E	R		
B		1	2	A				1	2	B				1	2	C			1	2	D	
C			1	3	A				1	3	B				1	3	C			1	3	D
D	A	L	:	0	0	0		S	U	:	0	0	0		T	R	:	0	0	0		

Exhibit 3-15: Manual Fan Restart Display

- Row A – Displays "FOR FAN RESTART->ENTER", indicating that the panel is waiting for the operator to press a fan restart switch. Once a restart switch is pressed, the Automatic Restart screen (Exhibit 3-14) will be displayed and the restart delay timers will activate.

Note: CRM4 relay(s) will remain in the activated state through a system reset and will only energize after the programmed time delay has expired.

3.3.13.2 ADDRESSABLE RELAY FAN RESTART OPERATION

Each addressable relay module connected to the panel's SLC loop can be designated for fan restart operation by configuring it for 'AHU Shutdown Relay' operation. Once the relay has been designated for AHU Shutdown operation, it automatically defaults to a normally energized relay and will activate for any ALARM event in any of its zones. Like the CRM4 relays, each addressable relay can be configured with a restart delay (0 – 255 seconds).

Upon activation of an ALARM event, each AHU Shutdown relay will activate and remain active even after the control panel is reset. After reset, the fan restart sequence must be initiated manually using any of the following sources: 1) control panel's "AHU ON" function that can be found in MAINTENANCE MENU 2, 2) addressable input module configured for "Fan Restart", 3) peripheral device (i.e., remote display or input/output card) switch configured for Fan Restart. Once initiated, the panel will start the automatic fan restart sequence and the AHU Shutdown relays will deactivate according to their programmed time delay allowing the startup of the AHU fan motors to be staggered.

Note: Addressable input module or peripheral device (i.e., remote display or input/output card) switches configured for "Fan Restart" will initiate the fan restart sequence for both panel CRM4 and addressable relay restart operation.

3.3.13.2.1 AHU FIRE KEY

Activation of the addressable relays for Fan Restart can be further restricted by requiring the activation of an input module configured for 'AHU FIRE KEY' operation before a Fan Restart switch can be acted on by the panel. This is a system variable that is either enabled or disabled via the panel's CONFIGURATION MENU 7 > F1-AHUKEY. When enabled, an "AHU FIRE KEY" must be active prior to activation of a Fan Restart switch in order for the control panel to act upon it. Activation of a Fan Restart switch prior to activation of the 'AHU FIRE KEY' will not start the fan restart sequence. The panel will only indicate the activation of the Fan Restart switch on its display and the event will be recorded in the panel's history buffer.

Note: If fire key operation is used, the switch (key or button operation) must be installed with limited access and must be UL 864 listed for Fire Protective Signaling System use.

3.4 INTELLIGENT DETECTOR FEATURES

The CyberCat's intelligent detectors offer a wide range of configurable features that can be used to provide optimum system performance. A brief description of each feature is provided in this Section for reference purposes. The following table shows the available features for each detector:

Detector	Alarm Verification	Pre-Alarm 1	Pre-Alarm 2	Acclimate	Day/Night Sensitivity	Drift Compensation	Walk-test	Device Summing	Flame Enhance	Smolder
Photoelectric	X	X	X	X	X	X	X	X		
Photo/Heat	X	X	X	X	X	X	X	X	X	
Photo Duct	X	X	X	X	X	X	X	X		
Ionization	X	X	X	X	X	X	X	X		X
Heat (FT/RR)	X	X	X				X			
FAAST	X	X	X	X	X		X			

Exhibit 3-16: Detector Programming Features

3.4.1 ALARM VERIFICATION

Alarm verification is used to delay the detectors automatic response to an alarm while the system/device verifies the alarm situation. If a detector programmed for alarm verification exceeds its alarm threshold, it broadcasts the Alarm Verification state and starts a timer (0-60 seconds). Output devices programmed for Alarm Verification in that same zone will turn ON until silenced (if programmed as Silenceable) in reaction to the Alarm Verification event. If the detector is still above the alarm threshold at the end of the verification period, the Alarm condition will be broadcast. Alarm Verification state will then be OFF. The control panel LED's and piezo do not operate during the Alarm Verification state. An Alarm Verification event is recorded in the event history buffer. Alarm verification is limited to the local panel only and does not transmit across the network; therefore, there is no history event recorded in the networked panels for this event nor do the relay modules or control modules connected to the network panels activate from this event.

3.4.2 PRE-ALARM

Pre-Alarms are used for performing an early warning of a fire alarm. There are two levels of Pre-Alarms that may be configured, **Pre-Alarm #1** and **Pre-Alarm #2** for each detector. Pre-Alarms may be independently enabled/disabled in the configuration of each detector. If Pre-Alarms are enabled in a detector and the Pre-Alarm level is exceeded, the panel will log the Pre-Alarm 1 or 2 state and any output circuit/module programmed for the respective Pre-Alarm State and Zone will turn ON until silenced (if programmed as Silenceable). The respective Pre-Alarm and Trouble LED's flash on the control panel until acknowledged or silenced, but the trouble outputs/states are not activated. There is also no Pre-Alarm communication with the DACT.

Example:

As smoke increases in a hazard, the obscuration of the photo-electric detector rises. Zero %/ft obscuration is a completely clean environment. As the smoke amount rises, the obscuration percentage rises, up to 4%/ft (UL smoke box test maximum alarm level recognized). Pre-Alarm #1 should be set for the lowest level of obscuration percentage desired for notification. Pre-Alarm #2 should be set slightly higher as the obscuration rises. The alarm level is then set at the 3rd level up in the obscuration percentage. The C-Linx Software forces these separated levels and does not allow them to overlap.

3.4.3 ACCLIMATE

The Acclimate feature allows the detector to observe its operating environment over a one-hour period. The detector then adjusts its alarm level between the user programmable Alarm Levels. This feature is enabled by default on all photo and ion detectors. It is internal to these devices and allows them to become accustomed to their operating environment.

3.4.4 DRIFT COMPENSATION

All CyberCat intelligent detectors automatically perform a drift compensation routine. Drift compensation is a feature that allows the detector to become accustomed to its operating environment. This helps to ensure that as dust and dirt build-up in the detector chamber, it does not cause a false alarm on the detector by gradually adjusting for this increase. Drift compensation is performed on a long-term basis, where the Acclimate feature is performed on a short term basis.

3.4.5 DAY/NIGHT/HOLIDAY SETTINGS

If smoke detectors are located in a hazard area that is much more active during typical operation hours, and quiet during off hours, it may be optimum to utilize the Day/Night/Holiday Schedule. This option provides the ability to have two separate alarm thresholds; one less sensitive alarm threshold during operational hours, one more sensitive alarm threshold during non-operational hours. Each input detector has two alarm sensitivity thresholds. Night Alarm Level is always used on all detectors. Day Alarm Level is only used if Day/Night /Holiday Schedule are selected.

If Day/Night/Holiday is selected as active, the On and Off times must be configured and the holidays need also be configured. The panel can be configured for twenty holiday dates which must be updated each calendar year. On non-holiday dates, a start time (hour AM/PM and minute) and stop time are configured for alarm sensitivity changes. Detectors enabled for this will change to Night Alarm Level when the start time is reached and revert back to Day Alarm Level when the stop time is exceeded. On holidays, the system will remain at Night Alarm Level.

Note: The Acclimate feature is not used when day/night thresholds are used.

3.4.6 FLAME ENHANCE (NON LISTED)

The Photo/Heat detector provides a flame enhance operation that will provide a faster response than a conventional photo/heat device. If the device senses an increase in obscuration AND an increase in temperature, it will speed up its alarm response calculations. Also, if the temperature rise is greater than 3° C (37.4°F) AND there is greater than 1%/ft obscuration detected, it will also speed up the alarm response calculations for the photo detector.

3.4.7 SUMMING (NON-LISTED)

The CyberCat photo, photo/heat, photo/duct and ion detectors are capable of providing an accumulating percentage for groups of up to eight devices. This accumulating percentage can activate an alarm from the **same types** of devices where there may not possibly be enough obscuration to cause an individual detector to initiate an alarm condition. This operation can be very beneficial to detect a fire early. As a fire builds, the smoke will rise and typically accumulate in several detectors. It typically takes longer for an individual detector to reach the alarm level. If several detectors are rising in obscuration detected, the alarm can be detected faster and notification can be accomplished in a prompt manner.

SUMMING EXAMPLE:

Photo Detector SUMMER, Loop 1 - address 5. This device is configured to Sum the following devices which are physically located near one another in the hazard: Loop 1, addresses 10,11,12,13,14,15,16, and 17. It is programmed for a Summing threshold of 4%/ft. Each Summee (addresses noted previous) is configured for the obscuration to be transmitted to the Summer at 0.5%/ft, 0.6%/ft, 0.7%/ft (up to 8 levels). When the Summer obtains a SUM of the obscurations that are $\geq 4\%/ft$ it reports the event to the system.

Note: As the obscuration level of the summee rises and falls, it will broadcast an "Analog Value" event message in relation to the summing functionality. The Summer will look at the most current values sent from the Summee to calculate the SUM for the SUMMING ALARM.

To set up this operation, a single detector is selected as a SUMMER. The Summer can look at information from 8 photo (or ion, **same type** as summer and **same loop** as summer - can include the summer) detectors called the SUMMEE(s). The Summer will total the obscuration percentages received from each summee defined. The Summer can be set to alarm from 1-10%/ft (programmable in 0.5%/ft. increments). Each Summee has configuration settings for defining the level of obscuration to be transmitted to the summer (0.5 – 4%/ft in 0.1%/ft increments). Summing groups can overlap and there is no limitation on the number of Summers. The Summer can be configured to report as any one of the following system event types when activated: Alarm, Summing Alarm, Supervisory Latching, Supervisory Non-Latching, Pre-Alarm1, and Pre-Alarm 2.

3.4.8 SMOLDER (NON LISTED)

The Ionization detector provides a smolder enhancement feature that allows the sensitivity of the detector to be increased where there is a slow buildup of smoke. If the device senses an increase in obscuration of approximately 30% of alarm, it will speed up its alarm response calculations.

3.4.9 WALK-TEST

Walk-testing allows for the system detectors (i.e., photo, photo/heat, photo/duct and ion) to be tested for proper operation without unneeded disturbance to building occupants. By default, all detectors are configured to participate in a system walk-test using smoke. Detector configuration can be changed using the panel's programming software C-Linx to allow walk-testing using Fike's IR tool. The IR tool or optional Remote Test Station must be used for duct detector walk-testing. Detectors may only be activated once during the walk-test mode. Refer to Section 6.4.1.4 for further details.

Reserved for future use.

4.1 OVERVIEW

The CyberCat panel maintains a 3,200 event history buffer of all alarm, trouble, supervisory, and other system events, each with a time/date stamp. With no alarm events present on the system, events are added to the history buffer as they occur in the first available memory slot until all 3,200 history slots are filled. Once all 3,200 slots are filled, new events are added to the history buffer by overwriting the last 100 history events over and over (roll-over buffer). All history events will be transmitted onto the network and peripheral bus without limit. Resetting the control panel will restart the event history buffer allowing new events to be recorded over existing events until the 3,200 event limit is reached.

Note: It is strongly recommended that the control panel be reset to restart the event history buffer after performing system testing, service or maintenance to ensure that the entire 3,200 event history buffer is available for storing system events.

Upon initiation of an alarm event, the panel changes the way it records system events into the history buffer. It will record the initial alarm event and then the next 999 events for a total of 1,000 events. Once the 1,000 event limit is reached, new events will be added to the history buffer by overwriting the last 100 history events over and over (roll-over buffer). All history events will be transmitted onto the network and peripheral bus without limit. This operation ensures that the events that occur after the first alarm event are preserved in the history buffer for fire investigation purposes and are not overwritten as additional events occur at the local and network panels. The 1,000 alarm event limit can be disabled using the panel's "History Transmit" feature found in the panel's CONFIG MENU 5 > F5 NETWORK > F4 HIST TR. Disabling the alarm history limit feature requires a "System Administrator" level password. Turning off the alarm history limit allows the panel's entire 3,200 event history buffer to be used to record events after the first alarm event. Resetting the control panel will restart the event history buffer allowing new events to be recorded over existing events until the event limit (1,000 or 3,200) is reached.

The panel's event history buffer is battery backed by a lithium coin cell battery located on the main circuit board behind the keypad/display. If primary (AC) and secondary (DC) power is removed from the system, the battery will prevent the history buffer from being lost.

Refer to Fike document 06-639, "Event/History Messages" for a complete listing of system event messages and suggested corrective actions.

4.2 VIEWING HISTORY

As current system events occur, the display will toggle to show the current system event. Current events are those that have taken place since the last Reset of the panel. With the panel door closed, you must use the **STEP** buttons to cycle through current events on the display:

STEP ALARM – Press to step through the current Alarm events on the display

STEP SUPER – Press to step through the current Supervisory events on the display.

STEP TROUBLE – Press to step through the current Trouble events on the display.

STEP ALL – Press to step through ALL current events on the display.

Note: To access the Alarm, Supervisory and Trouble history buffers, a like type event must be active. For example: Before you can view the Alarm history buffer, an active alarm must be present on the system.

With the panel door open, the **+/-** buttons on the display can also be used to increment or decrement through the current system events.

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		A	D	D	R		L	O	O	P		O	N		L	I	N	E		
B							L	O	O	P		1								
C	H	H	:	M	M	:	S	S	P		M	M	/	D	D	/	Y	Y	Y	Y
D	E	V	E	N	T		X	X	X	X		O	F		Y	Y	Y	Y		

Exhibit 4-1: Current Events Screen

To view the entire 3,200 event history buffer, including those prior to the reset, press the **F5** button while viewing a current event to toggle between CURRENT and OLD history. Notice that Row D changes to indicate that you are viewing the Old Events history buffer (3200 events).

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		A	D	D	R		L	O	O	P		O	N		L	I	N	E		
B							L	O	O	P		1								
C	H	H	:	M	M	:	S	S	P		M	M	/	D	D	/	Y	Y	Y	Y
D	R	E	C	O	R	D		0	6	6	9		O	F		3	2	0	0	

Exhibit 4-2: Old Events Screen

History can also be viewed by accessing the History Menu. Press the **ESCAPE** button until the Top Level menu is displayed as shown below:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A				T	O	P		L	E	V	E	L		M	E	N	U			
B	F	1	-	C	O	N	F	I	G		F	4	-	P	A	S	S	W	R	D
C	F	2	-	H	I	S	T	R	Y		F	5	-	M	A	I	N	T		
D	F	3	-	D	I	A	G				F	6	-	I	R		C	O	M	M

Exhibit 4-3: Top Level Menu

From the Top Level Menu, press the **F2** button to display the History Menu:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A				H	I	S	T	O	R	Y		M	E	N	U					
B	F	1	-	A	L	A	R	M			F	4	-	E	V	E	N	T	S	
C	F	2	-	S	U	P	E	R	V		F	5	-	Z	O	N	E			
D	F	3	-	T	R	O	U	B	L		F	6	-	E	R	A	S	E		

Exhibit 4-4: History Menu

The CyberCat has 5 history screens that are accessible without having to enter a password. Each screen allows you to view the history buffer by event type: Alarm, Supervisory, Trouble, All Events, and by Zone. This is the same function as pressing the STEP buttons on the CyberCat display.

Press the corresponding function button to display the selected history screen:

- F1** = Alarm History
- F2** = Supervisory History
- F3** = Trouble History
- F4** = All System Events History
- F5** = History Events by Zone
- F6** = Erase System History Buffer

Note: Events are displayed **ONLY** if there are current event states present. For example: If no ALARM events are present on the system, pressing the **F1** button will have no effect as there are no alarm events to display.

4.2.1 ALARM HISTORY

The ALARM History screen allows you to view the current alarm events (1,600 total) present on the system since the last reset of the panel. From the History Menu, press the **F1** button to display the Alarm History screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	A	L	A	R	M	:		D	E	V	I	C	E	T	Y	P	E			
B	C	U	S	T	O	M		M	E	S	S	A	G	E		X	-	X	X	X
C	H	H	:	M	M	:	S	S	P		M	M	/	D	D	/	Y	Y	Y	Y
D	A	L	M		E	V		X	X	X	X		O	F		Y	Y	Y	Y	

Exhibit 4-5: Alarm History Screen

- Row A - Displays the type of device in Alarm.
- Row B - Displays the custom message of the device in Alarm. Press the **F1** button to further locate event.
- Row C - Displays the time and date that the Alarm event was initiated.
- Row D - Displays the Alarm event number in the order received and the total number of current Alarm events present on the system.

Use the **+/-** buttons on the display to scroll through all Alarm events in the history buffer.

4.2.2 SUPERVISORY HISTORY

The SUPERVISORY History screen allows you to view the current supervisory events (800 total) present on the system since the last Reset of the panel. From the History Menu, press the **F2** button to display the Supervisory History screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	S	U	P	E	R	V	I	S	O	R	Y	I	N	P	U	T				
B	C	U	S	T	O	M		M	E	S	S	A	G	E		X	-	X	X	X
C	H	H	:	M	M	:	S	S	P		M	M	/	D	D	/	Y	Y	Y	Y
D	S	U	P	V	R		X	X	X	X		O	F		Y	Y	Y	Y		

Exhibit 4-6: Supervisory History Screen

- Row A - Displays a description of the Supervisory event.
- Row B - Displays the custom message of the Supervisory event.
- Row C - Displays the time and date that the Supervisory event was initiated.
- Row D - Displays the Supervisory event number in the order received and the total number of current Supervisory events present on the system.

Use the **+/-** buttons on the display to scroll through all Supervisory events in the history buffer.

4.2.3 TROUBLE HISTORY

The TROUBLE History screen allows you to view the current trouble events present on the system since the last reset of the panel. From the History Menu, press the **F3** button to display the Trouble History screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A			G	E	N	E	R	A	L		T	R	O	U	B	L	E			
B	C	U	S	T	O	M		M	E	S	S	A	G	E		X	-	X	X	X
C	H	H	:	M	M	:	S	S	P		M	M	/	D	D	/	Y	Y	Y	Y
D	T	R	O	U	B	L		X	X	X	X		O	F		Y	Y	Y	Y	

Exhibit 4-7: Trouble History Screen

- Row A - Displays a description of the Trouble event.
- Row B - Displays the custom message of the Trouble event. Press the **F1** button to further locate event.
- Row C - Displays the time and date that the Trouble event was initiated.
- Row D - Displays the Trouble event number in the order received and the total number of current Trouble events present on the system.

Use the **+/-** buttons on the display to scroll through all Trouble events in the history buffer.

4.2.4 EVENTS HISTORY

The EVENTS History screen allows you to view all of the current system events present on the system since the last Reset of the panel. From the History Menu, press the **F4** button to display the Events History screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A				P	O	W	E	R	-	U	P		R	E	S	E	T			
B	C	U	S	T	O	M		M	S	G		P	A	N	E	L		0	0	1
C	H	H	:	M	M	:	S	S	P		M	M	/	D	D	/	Y	Y	Y	Y
D	E	V	E	N	T		X	X	X	X		O	F		Y	Y	Y	Y		

Exhibit 4-8: Events History Screen

- Row A - Displays a description of the event.
- Row B - Displays the custom message of the event.
- Row C - Displays the time and date that the event was initiated.
- Row D - Displays the event number in the order received and the total number of current events present on the system.

Use the **+/-** buttons on the display to scroll through all Trouble events in the history buffer.

From this screen, you can view the entire 3,200 event history buffer by pressing the **F5** button:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A				P	O	W	E	R	-	U	P		R	E	S	E	T			
B	C	U	S	T	O	M		M	S	G		P	A	N	E	L		0	0	1
C	H	H	:	M	M	:	S	S	P		M	M	/	D	D	/	Y	Y	Y	Y
D	R	E	C	O	R	D		X	X	X	X		O	F		Y	Y	Y	Y	

Exhibit 4-9: 3,200 Event History Screen

4.2.5 ZONE HISTORY

The ZONE History screen allows you to view the current system events (i.e., Alarm, Trouble, Supervisory, Alert, Evacuate and Page) present on the system by zone, since the last reset of the panel. From the History Menu, press the **F5** button to display the Zone History screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	T	R	O	U	B	L	E		A	C	T		Z	O	N	E		0	0	1
B	C	U	S	T	O	M		M	E	S	S	A	G	E		X	-	X	X	X
C	H	H	:	M	M	:	S	S	P		M	M	/	D	D	/	Y	Y	Y	Y
D	Z	O	N	E		E	V		X	X	X	X		O	F		Y	Y	Y	Y

Exhibit 4-10: Zone History Screen

- Row A - Displays the type of the event (i.e., Alarm, Trouble, Supervisory, Process, Alert, Evacuate, Page, etc.) and the associated zone number.
- Row B - Displays the custom message of the Zone.
- Row C - Displays the time and date that the event was initiated.
- Row D - Displays the Zone event number in the order received and the total number of Zone events present on the system.

Use the **+/-** buttons on the display to scroll through all Zone events in the history buffer.

4.2.6 ERASE HISTORY

The ERASE History screen allows you to erase the CyberCat's 3,200 event history buffer. This feature requires prior entry of a successful Level 3 (Administrator) password. From the History Menu, press the **F6** button to display the Erase History screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A																				
B						P	R	E	S	S		E	N	T	E	R				
C			T	O		E	R	A	S	E		H	I	S	T	O	R	Y		
D																				

Exhibit 4-11: Erase History Screen

Press the **Enter** button on the display to erase the current history as well as All History for the panel. The following screen will appear indicating the history erase status:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A																				
B					*	*	E	R	A	S	I	N	G	*	*					
C					*	*	H	I	S	T	O	R	Y	*	*					
D																				

Exhibit 4-12: Erase History Status

Once the history erase is complete, the panel will automatically reset. Events stored in the panel's history buffer will remain present in the history buffer but will be marked as an "ERASED EVENT". The panel will also record a "HISTORY ERASED" event in the history buffer.

4.2.7 VIEWING ADDITIONAL EVENT INFORMATION

You can display additional event information from any of the History screens by pressing either the **F1** or **F2** button while viewing an event. The availability of additional information is tied to the type of system event being viewed.

Press the **F1** button to display the Panel, Loop, and Address information of the event on Row A of the display:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	P	N	L	0	0	1		L	O	O	P	1		A	D	D	R	0	0	1
B	C	U	S	T	O	M		M	E	S	S	A	G	E		1	-	0	0	1
C	H	H	:	M	M	:	S	S	P		M	M	/	D	D	/	Y	Y	Y	Y
D	E	V	E	N	T		X	X	X	X		O	F		Y	Y	Y	Y		

Exhibit 4-13: Additional Information Screen

Press the **F2** button to display all three lines of the custom message associated with the event displayed:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A			G	E	N	E	R	A	L		T	R	O	U	B	L	E			
B	C	U	S	T	O	M		M	E	S	S	A	G	E		L	I	N	E	1
C	C	U	S	T	O	M		M	E	S	S	A	G	E		L	I	N	E	2
D	C	U	S	T	O	M		M	E	S	S	A	G	E		L	I	N	E	3

Exhibit 4-14: Custom Message Screen

Press the **F1** button or the **F2** button to toggle back to previous display.

5.1 OVERVIEW

Problems with the CyberCat system can generally be classified into two categories: programming problems and hardware problems. Normally hardware problems are annunciated on the CyberCat system display. Programming problems are typically identified when the system operates unsuitably in response to a system event than intended.

The CyberCat's Diagnostics Menus are designed to assist the service technician in isolating and correcting hardware faults with the system. The service of the CyberCat system shall be performed solely by factory certified and qualified technicians that possess a complete understanding of the system hardware and functions.

5.2 DIAGNOSING PROBLEMS

Hardware problems with the system can be isolated to the panel or field devices by removing all field wiring and installing the circuit end-of-line resistor directly on the control board or module. Once you have isolated the cause of the problem (main board or field device), you can use the diagnostic menu features to further identify the problem. The CyberCat system controller utilizes surface mount technology (SMT) for easy installation and maintenance. SMT prohibits component-level field repairs.

5.3 REMOVING OR REPLACING PANEL COMPONENTS OR FIELD DEVICES

If it is determined that a panel component is defective and needs to be replaced:

1. Use the system programming software to download the current system configuration from the panel.
2. Disconnect the system batteries then remove AC power.

⚠ Caution:

Removing or replacing system components when power is applied will damage the equipment.

3. Disconnect field wiring from component(s). The majority of the CyberCat system components have removable terminals to facilitate connection of field wiring.
4. Remove and replace the defective system component(s) following the installation instructions supplied with the component(s).

⚠ Caution:

The CyberCat components and field devices contain static sensitive components. Handle the electronics by the edges only and avoid touching the integrated components. Keep all electronics in the protective anti-static bag it was shipped in until time for installation. Always ground yourself with a proper wrist strap before handling the module(s). If the installer is properly grounded at all times, damage due to static discharge will not occur. If the module requires repair or return to Fike, it must be shipped in an anti-static bag.

5. Reapply power to the system by reconnecting AC power then connecting system batteries.
6. Resend configuration (if applicable) to replaced component(s).
7. Verify proper operation of replaced component(s) before connecting field wiring.
8. Reconnect all field wiring.
9. Functionally test the operation of the system to verify proper operation.

5.4 DIAGNOSTIC MENU 1

The CyberCat has 5 diagnostic menus available as tools for troubleshooting the system. From the Top Level Menu screen, press the **F3** button to display the Diagnostic Menu 1:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		D	I	A	G	N	O	S	T	I	C		M	E	N	U		1		
B	F	1	-	D	E	V	I	C	E		F	4	-	L	E	D		T	S	T
C	F	2	-	V	A	L	U		1		F	5	-	C	R	C				
D	F	3	-	V	A	L	U		2		F	6	-	M	E	N	U		2	

Exhibit 5-1: Diagnostic Menu 1

Press the corresponding function button to display the selected diagnostic screen:

F1 = Addressable Device Diagnostic

F2 = Panel Diagnostics – Ground Fault

F3 = Panel Diagnostics

F4 = LED Test

F5 = Main Board Processor Communications

F6 = Diagnostics Menu 2

5.4.1 DEVICE DIAGNOSTIC

The Device Diagnostic menu allows you to diagnose problems with the addressable devices connected to the panel's signaling line circuits (SLCs). From the Diagnostic Menu 1, press the **F1** button to display the Device Diagnostic menu:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		D	E	V	I	C	E		D	I	A	G	N	O	S	T	I	C	S	
B	F	1	-	T	Y	P	E		L	O	C		&		L	E	D			
C	F	2	-	S	E	R	I	A	L		N	U	M	B	E	R	S			
D																				

Exhibit 5-2: Device Diagnostic Menu

Press the corresponding function button to display the selected diagnostic screen:

F1 = Device Type, Location and LED diagnostics

F2 = Device Serial Number diagnostics

5.4.1.1 DEVICE TYPE, LOCATION AND LED DIAGNOSTICS

The Device Type Diagnostic screen allows you to compare the type of addressable device held in the panel's configuration at a specific address to the type of device present/found on the signaling line circuit (SLC). From the Device Diagnostic Menu, press the **F1** button to display the Device Loc & LED Diagnostic screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	L	O	O	P	:	N		A	D	R	:	0	0	1	-	0	2	0		D
B	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
C	C	O	N	F	I	G	U	R	E	D		D	E	V		T	Y	P	E	
D	P	R	E	S	E	N	T		D	E	V	I	C	E		T	Y	P	E	

Exhibit 5-3: Device Type Diagnostic Screen

- Row A (LOOP) - Allows you to select the loop number, represented by 'N'. Use the ◀▶ buttons to position the cursor under the field; then press the +/- buttons to change to desired loop (1-4).
- Row A (ADR) - Allows you to select the address range to display in groups of 20. Use the ◀▶ buttons to position the cursor under the first digits (001 in this case); then press the +/- buttons to increment/decrement the group selection.
- Row A (D) - Allows you to select the data type that will be displayed on Row D. Use the ◀▶ buttons to position the cursor under the field; then press the +/- buttons to increment/decrement the selection.
- D - Displays the device type present/found connected on the addressable loop at the specific address. Same device types as shown in Row C description below. Press the **F1** button to view the device missing counter for the device at the cursor position. Press the **F1** button again to return to previous screen.

L – Allows you to light the LED for the device (red/green flash). To light the device LED, use the ◀▶ buttons to position the cursor under the desired address on Row D. Toggle the LED status by pressing the +/- button at the specific address location. An "L" will be displayed to indicate that the device LED is lit. Press the +/- button again to turn off the LED.

R – Displays an "R" under each device address that has had its memory map read into the panel memory.

d – Displays a "d" under each device address that has been disabled.

- Row B - These numbers act as placeholders for the range of addresses selected in Row A.
- Row C - Displays the type of device programmed in the configuration for the specific address displayed:

P = Photo	H = Heat	F = FAAST
D = DUCT	M = Monitor, 4"	- = Unknown
Y = Relay	m = Mini Monitor	A = Relay (AHU shutdown)
U = Photo/Heat	I = Ion	
T = Pull Station	2 = Dual Monitor	
C = Control	Z = Conventional Zone	

Note: The panel loads this screen upon reset and does not provide live updates as loop changes are made. Therefore, the panel must be reset in order to update this screen if wiring or SLC status is modified.

- Row D - Information displayed in this row is determined by the "Data Type" selection made on the far right of Row A.

5.4.1.2 DEVICE SERIAL NUMBER DIAGNOSTIC

The Device Serial Number Diagnostic screen allows you to compare the serial number stored in the panel for the specific address to the serial number of the actual device present/found on the signaling line circuit (SLC). From the Device Diagnostic Menu, press the **F2** button to display the Device Serial Number Diagnostic screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		L	O	O	P	:	N		A	D	D	R	E	S	S	:	0	0	1	
B	T	T	E	:		T	T	E		O	F		D	E	V	I	C	E		
C	S	E	R	I	A	L		#		S	T	O	R	E	D	P	A	N	E	L
D	S	E	R	I	A	L		#		D	E	V	I	C	E		L	O	O	P

Exhibit 5-4: Device S/N Diagnostic Screen

- Row A (LOOP) - allows you to select the loop number, represented by 'N'. Use the ◀▶ buttons to position the cursor under the field; then press the +/- buttons to change to desired loop (1-4).
- Row A (ADDRESS) - Allows you to select the address of the device to display. Use the ◀▶ buttons to position the cursor under the field; then press the +/- buttons to increment/decrement the address selection.
- Row B - Displays the type of device connected to the panel for the loop and address in Row A.
- Row C- Displays the serial number of the device held by the panel for supervision of the loop and address displayed in Row A.
- Row D - Displays the serial number of the device physically connected to the loop and address displayed in Row A.

Note: Row C and D should match or a multiple device trouble will be reported.

5.4.2 VALUE 1 DIAGNOSTIC

The Value 1 Diagnostic screen allows you to view several of the CyberCat's main board monitoring points, which are supervised continuously. From the Diagnostic Menu 1, press the **[F2]** button to display the Value 1 Diagnostic screen (displayed in an analog-to-digital reference level):

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	G	F	:	1	1	1	<	A	1	:	2	3	4		L	1	:	0	4	0
B	2	4	:	2	3	1		A	2	:	2	3	5		L	2	:	0	4	0
C	B	1	:	2	4	7		A	3	:	2	3	4		N	1	:	0	8	9
D	B	2	:	2	5	5		A	4	:	2	3	4		N	2	:	0	8	8

Exhibit 5-5: Value 1 Diagnostic Screen

- Row A (GF) = Ground Fault
 - < = Level 1 ground fault is active (2.17V nominal, GF high detection)
 - = ground fault level is transitioning hardware (V6.50 and lower only)
 - > = Level 2 Ground fault is active (5V nominal, GF low detection)

For all circuits except RS485 circuits, use the following guides:

Low = 60K ohm or less between power ground and chassis ground
 High = 1M ohm or less between Main power (27.6V) and chassis

	<u>V6.50 and lower</u>	<u>V7.00 and higher</u>
Level 1<:	Low = 0 – 84 Normal = 85 - 120 High = 121 – 255	Level 1<: Normal = 0 – 130 High = 131 – 255 120 restoral
Level 2>:	Low = 0 – 189 Normal = 190 – 255	Level 2>: Low = 0 – 189 Normal = 190 – 255 210 restoral

- Row A (A1) = Voltage Regulator on main for AC power: 120VAC = 200-255, 240VAC = 206-255
- Row A (L1) = Loop 1 short circuit detect; Normal = 10-255. For all RS485 circuits, the value is 0 ohms.
- Row B (24V) = Main panel 24VDC power; 140-255
- Row B (A2) = Voltage Regulator on main for AC power: 120VAC = 200-255, 240VAC = 206-255
- Row B (L2) = Loop 2 short circuit detect: Normal = 10-255 [CyberCat 1016 ONLY]
- Row C (B1) = Battery circuit on Main controller: Normal = 31-255
- Row C (A3) = Voltage Regulator on SPS for AC power: 120VAC = 200-255, 240VAC = 206-255 [CyberCat 1016 ONLY]
- Row C (N1) = Notification output #1: Open = 171-255, Short = 49-0
- Row D (B2) = Supplemental Power Supply Battery Circuit: Normal = 31-255
- Row D (A4) = Voltage Regulator on SPS for AC power: 120VAC = 200-255, 240VAC = 206-255 [CyberCat 1016 ONLY]
- Row D (N2) = Notification output #2: Open = 171-255, Short = 49-0

ⓘ Note: While trouble shooting a ground fault on panels with firmware Versions 3.0 or later, go into the Diagnostic screen and the levels are alternating between level 1 (<) and level 2 (>). Find the Level that is causing the ground and press the **[ENTER]** button to lock the level where you are getting the ground fault. The < or > will flash while it is locked in that level. Press the **[ENTER]** button again and the < or > will stay on steady and begin ground fault detection at both levels again. Pressing **[RESET]** will also restore the CyberCat to auto detect from both levels.

5.4.3 VALUE 2 DIAGNOSTIC

The Value 2 Diagnostic screen allows you to view the panel's signaling line circuit (SLC) monitoring data (displayed in an analog-to-digital reference data). From the Diagnostic Menu 1, press the **F3** button to display the Loop Monitoring Data screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	C	1	+	2	2	5		C	1	-	0	0	3		L	3	:	0	4	1
B	C	2	+	2	2	5		C	2	-	0	0	1		L	4	:	0	4	1
C	C	3	+	1	9	9		C	3	-	0	0	0		F	A	N			
D	C	4	+	1	9	9		C	4	-	0	0	0		0	0	0	0		

Exhibit 5-6: Value 2 Diagnostic Screen

- Row A (C1+) = Loop 1 ++ supervision trouble < 100
- Row A (C1-) = Loop 1 – supervision trouble >100
- Row A (L3) = Loop 3 short circuit detect: Normal = 10-255
- Row B (C2+) = Loop 2 ++ supervision trouble < 100
- Row B (C2-) = Loop 2 – supervision trouble >100
- Row B (L4) = Loop 4 short circuit detect: Normal = 10-255 [CyberCat 1016 ONLY]
- Row C (C3+) = Loop 3 ++ supervision trouble < 100
- Row C (C3-) = Loop 3 – supervision trouble >100
- Row D (C4+) = Loop 4 ++ supervision trouble < 100
- Row D (C4-) = Loop 4 – supervision trouble >100

Note: Row C and D apply to the CyberCat 1016 panel only.

If the supplement power supply is installed, its integral fan is monitored by the CyberCat for functionality. Row D (FAN) provides a counter that will increment once a fan trouble is detected. The counter will increment to 1000 with the trouble threshold set at 500.

5.4.4 LED TEST

From the Diagnostic Menu 1, press the **F4** button to briefly illuminate all LEDs on the CyberCat display for approximately 10 seconds. The message “SENDING LED TEST” appears briefly to indicate the command has been sent. In addition, an LED test command is sent to all devices connected to the panel's peripheral bus causing them to briefly illuminate all device LEDs. During the LED test, all characters on the LCD display will go solid, as shown below.

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
B	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
C	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
D	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■

Exhibit 5-7: LED Test Screen

5.4.5 CRC (CYCLIC REDUNDANCY COUNT)

The CRC screen allows you to view the current firmware version of the CyberCat controllers main processor, main loop processor (loops 1 and 2), and auxiliary loop processor (loops 3 and 4). From the Diagnostic Menu 1, press the **F5** button to view the Cyclic Redundancy Count screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A			P	R	O	G	R	A	M		C	R	C	:	A	A	3	6		
B		M	A	I	N		P	I	C		V	E	R	:	5	.	0	0	B	
C		A	U	X	L		P	I	C		V	E	R	:	-	.	-	-		
D		P	R	E	S	S		E	N	T	E	R		T	O		C	A	L	C

Exhibit 5-8: CRC Diagnostic Screen

- Row A - Displays the main system processor CRC value.
- Row B - Displays the main loop (SLC 1 & 2) processor firmware version.
- Row C - Displays the auxiliary loop (SLC 3 & 4) processor firmware version.
- Row D - Press **ENTER** button to calc. The newly calculated CRC will be displayed on Row A.

5.5 DIAGNOSTIC MENU 2

From the Diagnostic Menu 1 screen, press the **F6** button to view the Diagnostic Menu 2 screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		D	I	A	G	N	O	S	T	I	C		M	E	N	U		2		
B		F	1	-	K	E	Y	P	A	D			F	4	-	P	E	R	I	P
C		F	2	-	V	E	S	D	A		1		F	5	-	V	E		C	O
D		F	3	-	V	E	S	D	A		2		F	6	-	M	E	N	U	3

Exhibit 5-9: Diagnostic Menu 2

Press the corresponding function button to display the selected diagnostic screen:

- F1** = Keypad Diagnostics
- F2** = VESDA 1 Diagnostics
- F3** = VESDA 2 Diagnostics
- F4** = Peripheral Diagnostics
- F5** = VESDAnet Communications
- F6** = Diagnostics Menu 3

5.5.1 KEYPAD DIAGNOSTICS

The Keypad Diagnostics screen allows you to test the operation of the keypad, including LEDs. From Diagnostic Menu 2 screen, press the **F1** button to view the Keypad Diagnostic screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		K	E	Y	P	A	D		D	I	A	G	N	O	S	T	I	C		
B					K	E	Y		P	R	E	S	S	E	D	:				
C														C	O	U	N	T	:	
D																				

Exhibit 5-10: Keypad Diagnostics Screen

- Row C - Displays the button currently pressed and how many times it has been pressed.
To test the front panel LEDs, press the right arrow ► button to turn on each LED one at a time. Keep pressing the right arrow button ► to cycle through all LEDs.
To exit the Keypad Diagnostic screen, press the **ESCAPE** button three times.

5.5.2 VESDA 1 DIAGNOSTICS

The VESDA 1 Diagnostics screen allows you to view the current status of the selected VESDA detector. From Diagnostic Menu 2 screen, press the **F2** button to view the VESDA 1 Diagnostic screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	V	E	S	D	A		Z	O	N	E		N	U	M	:	0	0	1		
B	S	T	A	T	U	S	:	-	-	-	-	-	-	-	-	-	-	-	-	-
C	C	U	R	R	E	N	T	:	0	.	0	0	0	0	0	%	/	F	T	
D	A	L	A	R	M		L	E	V	E	L	:	0	0	0	%			S	

Exhibit 5-11: VESDA 1 Diagnostics Screen

- Row A - Allows you to select the VESDA zone number to read. Use the ◀▶ arrow buttons to position the cursor in ones, tens, or hundreds field; then press the +/- buttons to change the value at cursor. Press **ENTER** button to read the detector.
- Row B (STATUS) - Displays all “-” if no VESDA is present at the VESDA zone number selected in Row A or if the detector has not be read by pressing the **ENTER** button. After detector is read, the “-” will be replaced with the following detector information:
 - The first “-” indicates the enabled or disabled state of the detector. “E” = enabled and “D” = disabled. “D” occurs when the user presses the ISOLATE switch on the VESDA detector itself.
 - The next “-” will display “UF” if an urgent fault is present on the detector.
 - The next “-” will display “mF” if a minor fault is present on the detectors.
 - The next “- - - -” will display the current activation level for the detector: “NORML” or “ALERT” or “ACTON” or “FIRE1” or “FIRE2”.
- Row C (AL) - Displays the current Alert setting (in obscuration %/ft.) for the detector selected in Row A.
- Row C – Displays the current obscuration level being seen by the VESDA detector selected in Row A. This updates upon each press of **ENTER** button (noted in %/ft value).
- Row D – Displays the current percentage of alarm level for the detector selected in Row A.
- Row D (S) – Displays an “S” if the VESDA detector (VLS, VFT-15, VEA) is in scanning mode. Blank otherwise.

5.5.3 VESDA 2 DIAGNOSTICS

The VESDA 2 Diagnostics screen allows you to view the current fault list for the selected VESDA unit. From Diagnostic Menu 2 screen, press the **F3** button to view the VESDA 2 Diagnostic screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	V	E	S	D	A		Z	O	N	E		N	U	M	:		0	0	1	
B	T	Y	P	E	:	-	-	-	-	-	-	/	-	-	-	-	-	-	-	-
C	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
D	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

Exhibit 5-12: VESDA 2 Diagnostics Screen

- Row A - Allows you to select the VESDA zone number to view. Use the ◀▶ arrow buttons to position the cursor in ones, tens, or hundreds field; then press the +/- buttons to change the value at cursor. Press **ENTER** button to read the detector.
 - Row B (TYPE) - Dashes on the left display the VESDA detector type (i.e., VLC, VLP, VLS, VLF, VLI, VFT-15, VEP, VEP-1, VEP-2, VEU and VEA-40) for the zone number selected in Row A. Dashes on the right display the VESDA detector type read from the HLI.
- Note:** When the HLI zone number is selected (zone 247), the word “SYSTEM” will appear on the left side. Press the **ENTER** button will display system level fault codes in Rows C & D. The type dashes on the right remain unchanged.
- Rows C & D - Displays the active faults transmitted by the VESDA HLI. Refer to VESDA product documentation and programming software (VSC & VSC-E) for a detailed description of VESDA faults and resolutions. Fault codes displayed by the Cheetah Xi and CyberCat panels for VESDA E-series detectors do not reflect the actual faults occurring at the VESDA detector. The VESDA VSC software must be used to identify the actual detector fault codes and potential resolutions.

5.5.4 PERIPHERAL DIAGNOSTICS

The Peripheral Diagnostics screen allows you to view the status of the communication between the CyberCat controller and the devices connected to its peripheral bus. From the Diagnostic Menu 2 screen, press the **F4** button to view the Peripheral Diagnostic screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	A	D	R	:	0	2		S	U	P	:	0	0		M	A	X	:	0	0
B	T	Y	P	E	:			B	O	S	C	H		D	A	C	T			
C	C	O	M	M	A	N	D	S		S	E	N	T	:		0	0	0	0	0
D	C	O	M	M	A	N	D	S		R	C	V	D	:		0	0	0	0	0

Exhibit 5-13: Peripheral Diagnostics Screen

- Row A (ADR) - Allows you to select the peripheral address to view. Use the +/- buttons to select the Peripheral ID to diagnose.
- Row A (SUP) - Displays the number of times the panel sent a supervision message without a response.
- Row A (MAX) - Counts the number of times a supervision message was sent without response from peripheral. After a count of 12 times without a response, a peripheral trouble will occur.
- Row B - Displays the TYPE of peripheral device configured at the selected peripheral address shown in Row A (See device list below).
- Row C - Displays the number of supervision commands sent to the peripheral device selected.
- Row D - Displays the number of supervision commands received from the peripheral device selected.

Available Peripheral Devices:

Rem Disp 14Key	Print+Gateway (MIM)*	Switch 20-Zone	Digital Paging
256 LED Graphic	Gateway Only (MIM)*	Annunc 20-Zone	Relay Control
Zone Graphic	Ethernet Port	Computer	Class A Module
Print Serial (MIM)	Rem Disp 10Key	Amplifier	Remote MIC
Bosch DACT	Rem Disp 2 Key	Fire-Phone Int ¹	
Print Parallel (MIM)	Smoke Control	6Z Voice EVAC	

¹Press F1 to access advanced diagnostics

Press the **F4** button to display the firmware version of the selected peripheral device on Rows C & D.

* Gateway Only and Print+Gateway is not available in Panel Firmware V7.00 and higher.

5.5.4.1 FIRE-PHONE DIAGNOSTICS

If the peripheral type is set to “Fire-Phone Int”, additional diagnostic screens become available that allows you to view the status of the System Sensor Loop (Series 500), as well as the supplemental fire-phone cards (4 total). From the Peripheral Diagnostics screen, press the +/- buttons to select the peripheral address for the fire-phone interface:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	A	D	R	:	0	3		S	U	P	:	0	0		M	A	X	:	0	0
B	T	Y	P	E	:			F	I	R	E	-	P	H	O	N	E		I	N
C	C	O	M	M	A	N	D	S		S	E	N	T	:		0	0	0	0	0
D	C	O	M	M	A	N	D	S		R	C	V	D	:		0	0	0	0	0

Exhibit 5-14: Fire-Phone Diagnostics Screen

With the address selected, press the **F1** button to display the System Sensor loop diagnostics screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	F	I	R	E	-	P	H	O	N	E		I	N	T	E	R	F		0	3
B	A	+	:	2	1	5		A	-	:	0	0	0		S	H	:	2	1	8
C	M	O	D	U	L	E	:	0	1		S	U	P		V	A	L	:	4	4
D	C	O	N	D	I	T	I	O	N	:	O	N	T	O		R	I	S	E	R

Exhibit 5-15: System Sensor Loop Diagnostics Screen

- Row A – Displays “FIRE-PHONE INTERF” and the address of the peripheral device.
- Row B (A+) - Displays the analog to digital conversion values from the supervision of the series 500 loop, positive terminal. If the wire is attached correctly, the value shown should be above 200. A value below 90 indicates an open condition.
- Row B (A-) - Displays the analog to digital conversion values from the supervision of the series 500 loop, negative terminal. If the wire is attached correctly, the value shown should be below 20. A value above 090 indicates an open condition.
- Row B (SH) - Displays the short circuit detection value for the series 500 loop. A normal value is above 160. A value below 90 indicates a short condition. At this point the interface shuts down the series 500 loop.
- Row C (MODULE) – Allows selection of any of the fire-phone module addresses connected to the series 500 loop (1-99).
- Row C (SUP VAL) – Displays the supervision value recorded from the fire-phone module. This value is used by the CyberCat to determine the condition of the module.
- Row D - Displays the condition of the selected fire-phone module based on the supervision value shown in Row C.
 - “MISSING” – module is not present on the loop (SUP VAL below 3). CyberCat panel will record a trouble event.
 - “NORMAL” – module is reporting its phone terminals as normal (SUP VAL 3 – 7)
 - “PHONE TRBL” – module is reporting an open or shorted condition on its phone terminals (SUP VAL 8 – 12). CyberCat panel will record a trouble event.
 - “OFF HOOK” – module is reporting that the phone has been attached to its phone terminals (SUP VAL 13 – 18).
 - “ONTO RISER” – module has been connected to the phone riser (SUP VAL 44).
 - “NOT POLLED” – module is not being polled.
 - “BAD DEVICE” –module is reporting a SUP VAL other than what is described above (SUP VAL 19 – 43).

With the address selected, press the **F2** button to display the Auxiliary Switch Cards diagnostics screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	F	I	R	E	-	P	H	O	N	E		I	N	T	E	R	F		0	3
B		A	U	X	I	L	I	A	R	Y		S	W		C	A	R	D	S	
C	C	A	R	D	1	:	Y	E	S			C	A	R	D	2	:	N	O	
D	C	A	R	D	3	:	N	O				C	A	R	D	4	:	N	O	

Exhibit 5-16: Auxiliary Switch Cards Diagnostics Screen

- Row A – Displays “Fire-Phone Interf” and the address of the peripheral device.
- Row C & D (CARDn) – Displays whether the auxiliary switch card is present (YES) or not present (NO). Upper case “YES” or “NO” means the card is being supervised by the associated fire-phone switch card. Lower case “yes” or “no” means the card is not being supervised.

5.5.5 VESDANET COMMUNICATIONS

The VESDAnet Communications screen allows you to view the communication status between the CyberCat controller and the VESDA high level interface (HLI). From the Diagnostic Menu 2 screen, press the **F5** button to view the VESDAnet Communications screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	V	E	S	D	A		Z	O	N	E		N	U	M	:		0	0	1	
B	P	O	L	L		T	X	:	0	0	0	0		R	X	:	0	0	0	0
C	N	E	T	W		T	X	:	0	0	0	0		R	X	:	0	0	0	0
D	C	O	M	M		I	N	T	E	R	V	A	L	:	1	0	0	0	M	S

Exhibit 5-17: VESDAnet Communication Screen

- Row A – Allows you to select the VESDA zone (device) number to display.
- Row B (Poll TX) – Displays the number of polling transmissions sent to the VESDA zone selected on Row A.
- Row B (Poll RX) – Displays the number of polling receptions received from the VESDA zone selected in Row A.
- Row C (Netw TX) – Displays the number of network alarm requests sent from the panel to the HLI.
- Row C (Netw RX) – Displays the number of network alarms sent from the HLI to the panel.
- Row D (COMM INTERVAL) - Allows you to adjust the communication rate between the CyberCat and the VESDA HLI. Configurable from 250msec (fastest) to 2000msec (slowest). Default value is 1000msec (1 second). A Level 4 (Factory) password is required to change this setting. Use the +/- buttons to increment or decrement the field value.

Pressing the **ENTER** button while in this screen will clear the TX and RX counters.

Pressing the **F1** key while in this screen will prompt you to “PRESS ENTER TO REFRESH HLI”. This will reset the HLI without having to reset the control panel.

5.6 DIAGNOSTIC MENU 3

From the Diagnostic Menu 2 screen, press the **F6** button to view the Diagnostic Menu 3 screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		D	I	A	G	N	O	S	T	I	C		M	E	N	U		3		
B	F	1	-	N	E	T	W		1		F	4	-	H	I	S	T	O	R	Y
C	F	2	-	N	E	T	W		2		F	5	-	B	R	D		C	O	M
D	F	3	-	N	E	T	W		3		F	6	-	M	E	N	U		4	

Exhibit 5-18: Diagnostic Menu 3

Press the corresponding function button to display the selected diagnostic screen:

F1 = Network 1

F2 = Network 2

F3 = Network 3

F4 = History

F5 = Board Communication

F6 = Diagnostic Menu 4

Note: Network Diagnostic menus F1, F2 and F3 are system administrator (Level 3) password protected.

5.6.1 NETWORK DIAGNOSTICS 1

The Network Diagnostics 1 screen allows you to view the status of the network communication between the CyberCat controller and networked panels being monitored by this panel. From the Diagnostic Menu 3 screen, press the **F1** button to view the Network Diagnostic 1 screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	P	A	N	E	L		I	D	:	0	0	1		N	O	N	E			
B	N	E	T		I	D	'	S	:	0	0	1	-	0	2	0		T	X	0
C	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
D																				

Exhibit 5-19: Network Diagnostics 1 Screen

- Row A - Displays the network Panel ID (1 – 128) and the location of the panel with respect to other panels on the network (None, First, Middle or Last).
- Row B (NET ID) - Allows you to select the address range to display in groups of 20. Use the +/- buttons to increment or decrement the address range.
- Row B (TX) – Displays the number of supervision requests transmitted by the panel.
- Row C - These numbers act as placeholders for the range of addresses selected in Row B.
- Row D - Displays the number of supervision commands received from the networked panel being supervised. The field will increment from 0 to F when data is being received from that panel. If no commands are being received, the field will be blank.

5.6.2 NETWORK DIAGNOSTICS 2

The Network Diagnostics 2 screen allows you to view the status of communication between the CyberCat controller and installed network module, as well as network wiring troubles between panels. From the Diagnostic Menu 3 screen, press the **F2** button to view the Network Diagnostic 2 screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	N	O		R	E	S	P	O	N	S	E	:		0	0	0	/	1	2	0
B	W	I	R	E		T	R	O	U	B	L	:		0	0	0	/	0	0	9
C	C	L	A	S	S	-	A		T	R	B	:		0	0	0	/	0	1	0
D	I	S	O	L	A	T		R	D	Y	:	Y		T	:	0	0	0	0	

Exhibit 5-20: Network Diagnostics 2 Screen

- Row A – Displays the number of trouble events recorded when the installed network module fails to respond to commands from the panel. The numbers **000/120** show a counter on the left which increments each time a command is sent to the network module and is cleared when the module sends back a response. The number on the right is a configurable threshold for trouble initiation. The factory default is 120.
- Row B – Displays the number of trouble events recorded for network wire troubles. Network modules are configured as First, Middle, or Last. If the network module reports a different position or “isolated”; then the counter on the left side of “**000/009**” increments. The number on the right is the configurable threshold for trouble initiation. The factory default is 9.
- Row C – Displays the number of trouble events recorded for Class-A network wiring troubles. This only applies to network modules configured as First. When the module reports an open Class-A wire trouble, the counter on the left of “**000/010**” increments. The number on the right is the configurable threshold for trouble initiation. The factory default is 10.
- Row D (Isolat Rdy) – Displays the current network module position: “**ISOLAT**” for isolated, “**FIRST**”, “**MIDDLE**” or “**LAST**” on the left side of the display. The **RDY:** field indicates if the network module is ready for a panel command: **Y** = ready and **N** = not ready.
- Row D (T) – Displays the number of test events that have been sent onto the network or have been received from the network. Press **ENTER** to start the network test. A “*” will appear to the right of the test count to indicate that the panel is sending the test event onto the network. Panels receiving the test event will be blank at this position. Once started, the test will transmit a history event every 10 seconds. A “Network Test” event will be stored in panel history. By comparing test counts between panels, the reliability of the network can be determined.

5.6.3 NETWORK DIAGNOSTICS 3

The Network Diagnostics 3 screen allows you to set the communication interval between the panel and the network module. To utilize any of the features on this screen, you must enter a Factory Level password. From the Diagnostic Menu 3 screen, press the **F3** button to view the Network Diagnostic 3 screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	N	E	T		I	N	T	E	R	V	A	L	:	0	1	0	0	0	m	S
B	P	A	N	E	L		M	I	S	S	I	N	G		C	N	T	:	0	3
C	N	E	T	W		S	U	P	V		I	:	1	0	/	0	0	0	9	S
D	N	E	T	W		T	X		T	O		R	X	:	1		O	F		2

Exhibit 5-21: Network Diagnostics 3 Screen

- Row A – Allows you to adjust the communication interval between the panel and the network module in increments of 1ms. The factory default is 980ms to 1200ms. On reset, if the interval is less than 100ms or greater than 10,000ms, the value is automatically set to 980ms. Use the ◀▶ arrow buttons to position the cursor over the field; then press the +/- buttons to change the value at cursor.
- Row B – Displays the number of consecutive “panel missing” responses (2 – 6) from the Network PIC that must be reached before a trouble condition is annunciated. The default value is 3. All panel id’s that are supervised have their own counters for this variable. Use the ◀▶ arrow buttons to position the cursor over the field; then press the +/- buttons to change the value at cursor.
- Row C – Allows you to adjust the number of normal network supervision commands containing history data (10 – 50) that must be sent to the Network PIC before the next panel missing command can be verified. The factory default is 10. Use the ◀▶ arrow buttons to position the cursor over the field; then press the +/- buttons to change the value at cursor.
- Row D – Allows you to change the ratio of network history transmission/reception commands to history reception only commands to the network module. The value of the field on the far right of Row D can be adjusted from 1 – 9, with a factory default of 2. A value of 2 indicates there is one history transmit/receive command from the XA for every two commands sent to the network module.

Note: To make changes to any of the settings on this screen, you must enter a Level 3 user password.

5.6.4 NETWORK RESET

The Network Reset screen allows you to reset the system network module(s) in order to provide a means to help the network repair itself when wiring faults have been detected and/or repaired. The panel itself will not reset. From any of the Network Diagnostic screens, press the **F1** button to view the Network Reset screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	P	R	E	S		E	N	T	E	R		T	O		R	E	S	E	T	
B				N	E	T	W	O	R	K		M	O	D	U	L	E			
C	X	M	I	T		T	O		N	E	T	W	O	R	K	:	N	O		
D						*	*	R	E	S	E	T	*	*						

Exhibit 5-22: Network Reset Screen

From this screen, press the **ENTER** button to send a reset pulse to the panel's network module. Row D will briefly show “**RESET**”.

- Row C – Allows you to select to send the network module reset pulse to all networked panels. Panels that receive the pulse will reset their network module. Use the ◀▶ arrow buttons to position the cursor over the field; then press the +/- buttons to change the value at cursor to ‘YES’.

5.6.5 HISTORY DIAGNOSTICS

The History Diagnostics screen allows you to transmit history messages onto the peripheral bus for test purposes only. To utilize any of the features on this screen, you must enter a Level 3 password. From the Diagnostic Menu 3 screen, press the **F4** button to view the History Diagnostic screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A			T	R	A	N	S	M	I	T		H	I	S	T	O	R	Y		
B			T	E	S	T		M	E	S	S	A	G	E	S	:	O	F	F	
C			C	U	R	R	E	N	T		E	V	E	N	T	:	0	3	3	
D			0	0		0	0		0	0	0		0	1	0	0				

Exhibit 5-23: History Diagnostics Screen

- Row B – Allows you to turn **ON/OFF** automatic transmission of pre-set history messages for testing purposes, starting with the event number shown on Row C. When “ON”, the panel will transmit an event every 10 seconds. Use the +/- buttons to change the value at cursor. The default value is OFF. The event number shown on Row C will increment after each transmission.
- Row C – Allow you to select a specific event number (e.g., **CURRENT EVENT:033**). If automatic transmission is OFF, pressing **ENTER** will transmit the selected event onto the peripheral bus. The message “**SENDIN**” will show briefly to confirm the event transmission. Use the ◀▶ arrow buttons to position the cursor over the field; then press the +/- buttons to change the value at cursor.
- Row D – Allows selection of the history transmission variables when **ENTER** is pressed for a specific event. Consult with Fike Product Support for further details. Use the ◀▶ arrow buttons to position the cursor over the field; then press the +/- buttons to change the value at cursor.

5.6.6 BOARD COMMUNICATION DIAGNOSTICS

The Board Communication Diagnostic screen allows you to view the status of the CyberCat's microprocessor. This information is used can be used by Fike to diagnose potential problems with the control board itself. From the Diagnostic Menu 3, press the **F5** button to view the Board Communication Diagnostic screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	M	A	I	N		P	I	C			A	U	X		P	I	C			
B	R	X	D	:		2	5				R	X	D	:		0	0			
C	E	R	R	:		0	0				E	R	R	:		0	0			
D	T	X	D	:		0	0	0	0	0		E	R	R	:	0	0	0	0	0

Exhibit 5-24: Board Comm Diagnostic Screen

MAIN PIC

(Microprocessor that Controls loop 1 & 2)

- Row B **RXD** = total data received by the main processor from the Main PIC
- Row C **ERR** = # of checksum errors noted by system processor from the Main PIC
- Row D **TXD** = # of commands received by system processor from Main and Aux pics since last reset (will rollover).

AUX PIC

(Microprocessor that Controls loop 3 & 4 – CyberCat 1016 ONLY)

- RXD** = total data received by the main processor from the Aux PIC
- ERR** = # of checksum errors noted by system processor from the Aux PIC
- ERR** = # of TXD checksum errors

Note: Press the **ENTER** button while this menu is displayed to clear the counters and restart at 0. This provides a starting point to monitor the communications. The purpose of this window is to detect for electrical noise or interference (EMI, Radio, etc.) that could be interfering with the on-board communications.

5.7 DIAGNOSTIC MENU 4

From the Diagnostic Menu 3 screen, press the **F6** button to view the Diagnostic Menu 4 screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		D	I	A	G	N	O	S	T	I	C		M	E	N	U		4		
B	F	1	-	A	M	P		S	T	A		F	4	-	P	E	R		F	V
C	F	2	-	P	E	R		D	A	T		F	5	-						
D	F	3	-	V	O	I	C	E		Z		F	6	-	M	E	N	U		5

Exhibit 5-25: Diagnostic Menu 4

Press the corresponding function button to display the selected diagnostic screen:

- F1** = Amplifier Status (operation)
- F2** = Peripheral Data (supervision)
- F3** = Voice Zones (status)
- F4** = Peripheral FV (firmware version)
- F5** = Not Used
- F6** = Menu 5

5.7.1 AMPLIFIER STATUS

The Amplifier Status screen allows you to view the status of the communication between the CyberCat controller and all amplifiers being monitored by this panel. From the Diagnostic Menu 4 screen, press the **F1** button to view the Amplifier Status screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	A	M	P	L	I	F	I	E	R		A	T		A	D	D	R	:	0	2
B	S	T	A	T	U	S	:		A	U	T	O	M	A	T	I	C			
C	A	U	T	O		S	T	A	T	E	:		N	O	N	E				
D	M	S	G	:	0	0	0	/	0	0	0		S	P	K	:	-	-	-	-

Exhibit 5-26: Amplifier Operation Status Screen

- Row A - Allows you to select the peripheral address of the amplifier to display its operational status. Use the +/- buttons to increment or decrement the address. Rows B, C & D will display the status of the selected amplifier. If selected peripheral address is not an amplifier, screen will display "NOT AN AMP".
- Row B – Displays the operational status of the selected amplifier. The possible conditions are:
 - "STATUS: AUTOMATIC" – The status of the CyberCat panel combined with the amp configuration is controlling which message (if any) is being played.
 - "STATUS: DRILL" – A DRILL switch on the CyberCat system has been pressed.
 - "STATUS: ALERT" – An ALERT switch on a voice evacuation card has been pressed for a zone assigned to this amp.
 - "STATUS: EVACUATE" – An EVACUATE switch on a voice evacuation card has been pressed for a zone assigned to this amp.
 - "STATUS: PAGE" – A PAGE switch on a voice evacuation card has been pressed for a zone assigned to this amp.
 - "STATUS: PAGE W RR" – A PAGE WITH RECORD AND REPEAT switch on a voice evacuation card has been pressed for a zone assigned to this amp.
 - "STATUS: FIRE MESSAGE" – A PLAY FIRE MESSAGE switch is active.
 - "STATUS: MNS MESSAGE" – A PLAY MNS MESSAGE switch is active.
 - "STATUS: MNS PAGE" – An MNS PAGE switch is active.
 - "STATUS: MNS PAGE RR" – A MNS PAGE with RECORD AND REPEAT switch is active.
- Row C – Displays the highest "automatic" state for the amplifier. This is determined from the configuration of zone assignments to the amp as compared to which zones of the same state are active in the panel. The possible automatic states, displayed in order of lower priority to higher priority are:
 - "AUTO STATE: NONE" – no automatic state is active for this amp.
 - "AUTO STATE: PROCESS" – Amp will send the process message numbers (if status is Automatic).
 - "AUTO STATE: SUPERVI" – Amp will send the supervisory message numbers (if status is Automatic).
 - "AUTO STATE: TEST ALM" – Amp will send the test alarm message numbers (these come during walk-test).
 - "AUTO STATE: ALARM" – Amp will send the alarm message numbers (if status is Automatic).
 - "AUTO STATE: ALERT" – Amp will send the alert message numbers (status is either Alert or Auto).
 - "AUTO STATE: EVACUATE" – Amp will send the evacuation message numbers (status EVAC or Auto).
- Row D – Displays the message numbers being sent to the amp as "MSG: aa/bb" and the speaker circuits being commanded to play these messages as "SPKRS: 1 - 3" (This is an example of speaker circuits 1 and 3).

5.7.2 PERIPHERAL SUPERVISION DATA

The Peripheral Supervision Data screen allows you to view the analog-to-digital conversion values for the peripheral device selected on Row A. From the Diagnostic Menu 4 screen, press the **F2** button to view the Peripheral Supervision Data screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	A	M	P		A	T	:	0	2		G	#	#		K	#	#		O	#
B	A	#	#	#		D	#	#	#		H	#	#		L	#	#		P	#
C	B	#	#	#		E	#	#	#		I	#	#		M	#	#		Q	#
D	C	#	#	#		F	#	#	#		J	#	#		N	#	#		R	#

Exhibit 5-27: Peripheral Supervision Data Screen

Note: At present, only the amplifier card (AMP), digital paging module (DPM) and remote paging card (MIC) will display supervision data on this screen.

- Row A (1 through 9) - Displays the device type and peripheral address of the selected device.
- Rows A-D (A through R) - Displays the current supervision data of the selected peripheral device. If there is not a device configured for the selected peripheral address or if the device is not an amplifier, digital paging module or remote paging card, the screen will display "NO DATA". A description of each data field for each peripheral device type is provided below:

1. Amplifier Card Values

- **A###** - Message ID1 (Fire message = 1-16, MNS message = 101-116, MNS Page = 251, MNS R&R = 252, Fire Page = 253, Fire R&R = 254)
- **B###** - Message ID2 (Fire message = 1-16, MNS message = 101-116, MNS Page = 251, MNS R&R = 252, Fire Page = 253, Fire R&R = 254)
- **C###** - Active speaker circuit and audio source (See table below for description of values).
- **D###** - Audio bus troubleshooting (Increments periodically if the amplifier does not receive any valid packets on the audio bus. Once the counter reaches max value of 255, it stays at 255 until the fault clears. Once the amp starts receiving valid packets, the counter is decremented periodically).
- **E###** - A-D value (0 – 255) for power-limited supervision on speaker circuit. Threshold for short on a 25 V amp ≥ 216 (~2.79 V), threshold for short on a 70 V amp ≥ 120 (~1.55 V).
- **F###** - Amplifier input voltage configuration (120 V = 0, 240 V = 1)
- **G##** - Amplifier output voltage configuration (25 V = 25, 70 V = 70)
- **H##** - Manual activation state (Automatic Operation = 0, Drill = 1, Alert = 2, Evac = 3, Page = 4)
- **I##** - Automatic activation state (Normal = 0, Process = 1, Supervisory = 2, Test Alarm = 3, Alarm = 4, Alert = 5, Evac = 6)
- **J##** - City Code (Standard = 0, Boston Alarm Active = 1, Chicago = 2, NYC Evac = 3, NYC Inquiry = 4, NYC Alarm Acknowledge = 5)
- **K##** - NAC circuit active or not active (Not active = 0, Active = 1)
- **L##** - NAC protocol configuration (Constant ON = 0, Gentex = 1, System Sensor = 2, Wheelock = 3)
- **M##** - Contact monitor circuit state (No Active = 0, Active = 1)
- **N##** - Contact monitor configuration (Disabled = 0, Enabled = 1)
- **O#** - Battery charging configuration (Disabled = 0, Enabled = 1)
- **P#** - Local page configuration (Disabled = 0, Enabled = 1)
- **Q#** - Dual-channel mode configuration (Disabled = 0, Enabled = 1)
- **R#** - Audio bus configuration (Disabled = 0, Enabled = 1)

Speaker circuit and audio source information (C###):

Value	Active Speaker Circuits	Audio Source Selected	Value	Active Speaker Circuits	Audio Source Selected	Value	Active Speaker Circuits	Audio Source Selected	Value	Active Speaker Circuits	Audio Source Selected
0	None	-	32	2	External	96	2 3	External External	192	3 4	External External
1	1	Internal	33	1 2	Internal External	97	1 2 3	Internal External External	193	1 3 4	Internal External External
2	2	Internal	36	2 3	External Internal	104	2 3 4	External External Internal	194	2 3 4	Internal External External
3	1 2	Internal Internal	37	1 2 3	Internal External Internal	105	1 2 3 4	Internal External External Internal	195	1 2 3 4	Internal Internal External External
4	3	Internal	40	2 4	External Internal	112	1 2 3	External External External	208	1 3 4	External External External
5	1 3	Internal Internal	41	1 2 4	Internal External Internal	120	1 2 3 4	External External External Internal	210	1 2 3 4	External Internal External External
6	2 3	Internal Internal	44	2 3 4	External Internal Internal	128	4	External	224	2 3 4	External External External
7	1 2 3	Internal Internal Internal	45	1 2 3 4	Internal External Internal Internal	129	1 4	Internal External	225	1 2 3 4	Internal External External External
8	4	Internal	48	1 2	External External	130	2 4	Internal External	240	1 2 3 4	External External External External
9	1 4	Internal Internal	52	1 2 3	External External Internal	131	1 2 4	Internal Internal External			
10	2 4	Internal Internal	56	1 2 4	External External Internal	132	3 4	Internal External			
11	1 2 4	Internal Internal Internal	60	1 2 3 4	External External Internal Internal	133	1 3 4	Internal Internal External			
12	3 4	Internal Internal	64	3	External	134	2 3 4	Internal Internal External			
13	1 3 4	Internal Internal Internal	65	1 3	Internal External	135	1 2 3 4	Internal Internal Internal External			
14	2 3 4	Internal Internal Internal	66	2 3	Internal External	144	1 4	External External			
15	1 2 3 4	Internal Internal Internal Internal	67	1 2 3	Internal Internal External	146	1 2 4	External Internal External			
16	1	External	72	3 4	External Internal	148	1 3 4	External Internal External			
18	1 2	External Internal	73	1 3 4	Internal External Internal	150	1 2 3 4	External Internal Internal External			
20	1 3	External Internal	74	2 3 4	Internal External Internal	160	2 4	External External			
22	1 2 3	External Internal Internal	75	1 2 3 4	Internal Internal External Internal	161	1 2 4	Internal External External			
24	1 4	External Internal	80	1 3	External External	164	2 3 4	External Internal External			
26	1 2 4	External Internal Internal	82	1 2 3	External Internal External	165	1 2 3 4	Internal External Internal External			
28	1 3 4	External Internal Internal	88	1 3 4	External External Internal	176	1 2 4	External External External			
30	1 2 3 4	External Internal Internal Internal	90	1 2 3 4	External Internal External Internal	180	1 2 3 4	External External Internal External			

2. Digital Paging Card Values

- A### - A-D value (0 – 255) for contact monitor supervision (Short range = 180 – 255, Open range = 0 – 50, Normal range = 51 – 179)
- B### - A-D value (0 – 255) for local/master fire-phone trouble supervision when not used for paging or party line (Short range = 155 – 255, Open range = 0 – 78, Normal range = 79 – 154)
- C### - A-D value (0 – 255) for local/master fire-phone off hook supervision (Off hook range = 176 – 255, Open range = 0 – 100, On hook range = 101 – 175)
- D### - Audio bus troubleshooting (Increments periodically if the amplifier does not receive any valid packets on the audio bus. Once the counter reaches max value of 255, it stays at 255 until the fault clears. Once the amp starts receiving valid packets, the counter is decremented periodically.
- E### - A-D value (0 – 255) for fire-phone riser trouble supervision when not used for paging or party line (Short range = 193 – 255, Open range = 0 – 7, Normal range = 8 – 192)
- E### - A-D value (0 – 255) for fire-phone riser trouble supervision when used for paging or party line (Short range = 193 – 255, Open range = 0 – 89, Normal range = 90 – 192)
- F## through J## – NOT USED
- K## - Audio bus master or slave (Slave = 0, Master = 1)
- L## - Contact monitor (Not active = 0, Active = 1)
- M## - Paging control card switch priority level (0 = highest, 8 = lowest)
- N## - Contact monitor priority level (0 = highest, 8 = lowest)
- O# - Microphone trouble
 - No trouble = 0
 - Not connected = 1 (check pin #3 on P8)
 - Wiring trouble 1 = 2 (check pin #2 & 8 on P8)
 - Wiring trouble 2 = 4 (check pin #1 & 7 on P8)
 - Wiring trouble 3 = 6 (check pin #1, 2, 7 & 8 on P8)
- P# - Fire-phone Class-A configuration (Disabled = 0, Enabled = 1)
- Q# - Contact monitor latching/non-latching configuration (Non-latching = 0, Latching = 1)
- R# - Contact monitor normally open/closed configuration (Normally open = 0, Normally closed = 1)

3. Remote Paging Card Values

- A##, B##, C## – NOT USED
- D### - Audio bus troubleshooting (Increments periodically if the amplifier does not receive any valid packets on the audio bus. Once the counter reaches max value of 255, it stays at 255 until the fault clears. Once the amp starts receiving valid packets, the counter is decremented periodically.
- E## through J## – NOT USED
- K## - Audio bus master or slave (Slave = 0, Master = 1)
- L## - NOT USED
- M## - Paging control card switch priority level (0 = highest, 8 = lowest)
- N## - NOT USED
- O# - Microphone trouble
 - No trouble = 0
 - Not connected = 1 (check pin #3 on P8)
 - Wiring trouble 1 = 2 (check pin #2 & 8 on P8)
 - Wiring trouble 2 = 4 (check pin #1 & 7 on P8)
 - Wiring trouble 3 = 6 (check pin #1, 2, 7 & 8 on P8)
- P# through R# - NOT USED

5.7.3 VOICE ZONES

The Voice Zones screen allows you to view the status of system zones with respect to voice conditions. From the Diagnostic Menu 4 screen, press the **F3** button to view the Voice Zones screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	Z	O	N	E		R	A	N	G	E	:		0	0	1	-	0	2	0	
B	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
C	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
D	Z	:	0	0	1		S	T	A	T	:	A	U	T	0	-	N	O	N	E

Exhibit 5-28: Voice Zones Screen

- Row A - Allows you to select the range of zones in groups of 20 that will be displayed in Row C. Use the +/- buttons to increment or decrement the zone range.
- Row B - These numbers act as placeholders for the range of zones selected in Row A.
- Row C - Displays a single letter description of the voice condition for the zone that aligns with the zone number on Row B.

- = No voice condition is active

C = Zone is in "Automatic" operation and Process is the highest voice priority state in that zone.

S = Zone is in "Automatic" operation and Supervisory is the highest voice priority state in that zone.

T = Zone is in "Automatic" operation and Test Alarm (walk-test mode) is active in that zone.

L = Zone is in "Automatic" operation and Alarm is the highest voice priority state in that zone.

A = Zone is in "Alert" condition. Use line 4 to determine if this is from "Automatic" or a manual switch.

E = Zone is in "Evacuate" condition. Use line 4 to determine if this is from "Automatic" or a manual switch.

D = Zone is in "Drill" condition. The drill switch has been pressed.

P = Zone is in "Page" condition. A page switch for this zone has been pressed.

R = Zone is in "Page with Record and Repeat" condition. A page with record and repeat switch for this zone has been pressed.

F = Zone is in "Play Fire Message" condition. A play fire message switch for this zone has been pressed.

M = Zone is in "Play Mass Notify Message" condition. A play MNS message switch for this zone has been pressed.

G = Zone is in "Page" condition. A page switch for this zone has been pressed.

O = Zone is in "Page with R&R" condition. A page with R&R switch for this zone has been pressed.

Use the ◀▶ arrow keys to scroll through the 254 available zones.

- Row D (Z:) - Displays the zone number at the cursor position.
- Row D (STAT:) - Displays the status of the zone as:
 - "AUTO-NONE" - No voice condition is active in this zone.
 - "AUTO-PROC" - Zone is in "Automatic" operation with Process state active.
 - "AUTO-SUPV" - Zone is in "Automatic" operation with Supervisory state active.
 - "AUTO-TEST" - Zone is in "Automatic" operation with Test Alarm state active.
 - "AUTO-ALRM" - Zone is in "Automatic" operation with Alarm state active.
 - "AUTO-ALRT" - Zone is in "Automatic" operation with Alert condition active.
 - "AUTO-EVAC" - Zone is in "Automatic" operation with Evacuate condition active.
 - "DRILL" - Zone is in Drill condition.
 - "ALERT" - Zone is in Alert condition via a manual switch.
 - "EVACUATE" - Zone is in Evacuate condition via a manual switch.
 - "PAGE" - Zone is in Page condition.
 - "PAGE W RR" - Zone is in Page with record and repeat condition.
 - "FIRE MSG" - Zone is in Play Fire Message condition.
 - "MNS MESSG" - Zone is in Play MNS Message condition.
 - "MNS PAGE" - Zone is in MNS PAGE condition.
 - "MNS W R&R" - Zone is in MNS PAGE WITH RECORD AND REPEAT condition.

5.7.3.1 VOICE ZONES STATUS

The Voice Zones Status screen allows you to view the enabled/disabled status of individual voice zones. From the Voice Zones screen, press the **F1** button to view the Voice Zones Status screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	A	L	E	R	T	:		D					Z	O	N	E	:	0	0	1
B	E	V	A	C	:		D				A	L	L		P	A	G	E	:	E
C	F		P	A	G	E	:	D			M	N	S		P	A	G	E	:	D
D	F		M	S	G	:	D				M	N	S		M	S	G	:	D	

Exhibit 5-29: Voice Zones Status Screen

- Row A (Zone:) - Allows you to select the zone that will be displayed. Use the ◀▶ arrow keys to position the cursor under the appropriate field; then use the +/- buttons to increment or decrement the field value.
- Rows A-D – Displays the Enabled/Disabled status of the selected zone's output messages for each of the following states:
 - "ALERT"
 - "EVACUATE"
 - "FIRE PAGE" (includes Page with Record and Repeat)
 - "FIRE MESSAGE" (per zone)
 - "ALL PAGE" (Page to Alert, Page to EVAC, Page All, and Page All with Record and Repeat)
 - "MNS PAGE" (per zone)
 - "MNS MESSAGE" (per zone)

5.7.3.2 VOICE ZONES PRIORITIES

The Voice Zones Priorities screen allows you to view the current priority and status of the selected zone number. From the Voice Zones screen, press the **F2** button to view the Voice Zones Priorities screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	
A	Z	O	N	E	:	0	0	1			C	U	R	E	N	T	/	P	R	E	V
B	P	R	I	O	R	I	T	Y	:	0	0	0	/	0	0	0					
C	S	T	A	T	U	S	:			0	/	0									
D		A	U	T	O	-	N	O	N	E	/	A	U	T	O	-	N	O	N	E	

Exhibit 5-30: Voice Zones Priorities Screen

- Row A (Zone) - Allows you to select the zone that will be displayed. Use the ◀▶ arrow keys to position the cursor under the appropriate field; then use the +/- buttons to increment or decrement the field value.
- Row B (Priority) – Displays the current/previous priority levels for the zone selected in Row A.
- Row C (Status) – Displays the zone status numbers for the current/previous conditions of the zone selected in Row A.

- Row D – Displays a description of the status numbers indicated in Row C. The numbers align with the following voice status conditions:

- 0 = Panel automatic conditions are active (see below).
 - “**AUTO-NONE**” (no automatic voice condition is active)
 - “**AUTO-PROC**” (automatic process condition is active)
 - “**AUTO-SUPV**” (automatic supervisory condition is active)
 - “**AUTO-TEST**” (walk-test condition is active)
 - “**AUTO-ALRM**” (automatic alarm condition is active)
 - “**AUTO-ALRT**” (automatic alert condition is active)
 - “**AUTO-EVAC**” (automatic evacuate condition is active)
- 2 = “**DRILL**” (drill condition is active)
- 3 = “**ALERT**” (alert condition is active)
- 4 = “**EVACUATE**” (evacuate condition is active)
- 5 = “**PAGE**” (page condition is active)
- 6 = “**PAGE W RR**” (page with record and repeat condition is active)
- 7 = “**FIRE MSG**” (fire alarm messaging condition is active)
- 8 = “**MNS PAGE**” (mass notify paging condition is active)
- 9 = “**MNS W RR**” (mass notify paging with record and repeat condition is active)
- 10 = “**MNS MESSG**” (mass notify messaging condition is active)

Note: Previous is the level that was active in the zone before the current level became active. When the current level clears, the previous level will be returned as the current priority level.

5.7.4 PERIPHERAL FIRMWARE VERSION

The Peripheral Firmware Version screen allows you to view the firmware version of the selected peripheral bus device. From the Diagnostic Menu 4 screen, press the **F4** button to view the Firmware Version screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	P	E	R	I	P	H	E	R	A	L		A	D	D	R	:		0	2	
B	T	Y	P	E	:		D	I	G	I	T	A	L		P	A	G	I	N	G
C				F	I	R	M	W	A	R	E		V	E	R	S	I	O	N	
D							X	X	.	X	X									

Exhibit 5-31: Firmware Version Screen

- Row A - Allows you to select the address of the peripheral device (1 – 32) that will be displayed in Rows C and D. Use the +/- buttons to increment or decrement the peripheral address.
- Row B – Displays the type of peripheral device currently configured at the peripheral address selected in Row A.

Available Peripheral Devices:

Rem Disp 14Key	Print+Gateway (MIM)*	Switch 20-Zone	Digital Paging
256 LED Graphic	Gateway Only (MIM)*	Annunc 20-Zone	Relay Control
Zone Graphic	Ethernet Port	Computer	Class A Module
Print Serial (MIM)	Rem Disp 10Key	Amplifier	Remote MIC
Bosch DACT	Rem Disp 2 Key	Fire-Phone Int	
Print Parallel (MIM)	Smoke Control	6Z Voice EVAC	

- Row C – Displays “FIRMWARE VERSION” unless the selected device is an amplifier card; then this row will display “DS PIC” and its firmware version.
- Row D – Displays “FIRMWARE VERSION” unless the selected device is an amplifier card; then this row will display “NAC PIC” and its firmware version.

* Gateway Only and Print+Gateway is not available in V7.00 firmware and higher.

5.8 DIAGNOSTIC MENU 5

From the Diagnostic Menu 4 screen, press the **F6** button to view the Diagnostic Menu 5 screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		D	I	A	G	N	O	S	T	I	C		M	E	N	U		5		
B	F	1	-	P	A	G	E		S			F	4	-	F	A	A	S	T	
C	F	2	-	A	U	D		P	R	I		F	5	-						
D	F	3	-	M	S	G		I	D			F	6	-	M	E	N	U		1

Exhibit 5-32: Diagnostic Menu 5

Press the corresponding function button to display the selected diagnostic screen:

F1 = Page Status

F2 = Audio Priority Status

F3 = Play Message ID Status

F4 = FFAST Detector Status

F5 = Not Used

F6 = Menu 1

5.8.1 PAGE STATUS

The Page Status screen allows you to view the general “paging” status of the panel. There are no selectable items on this screen. From the Diagnostic Menu 5 screen, press the **F1** button to view the Page Status screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		A	L	E	R	T		T	O		P	A	G	E	:		O	F	F	
B		E	V	A	C		T	O		P	A	G	E	:			O	F	F	
C																				
D																				

Exhibit 5-33: Page Status Screen

- Row A – When a Page-to-Alert switch is pressed and zones that were in Alert are now in page mode, this line shows “ALERT TO PAGE: ON”; otherwise, “ALERT TO PAGE: OFF” is displayed.
- Row B – When a Page-to-Evac switch is pressed and zones that were in EVAC are now in page mode, this line shows “EVAC TO PAGE: ON”; otherwise, “EVAC TO PAGE: OFF” is displayed.

5.8.2 AUDIO PRIORITY STATUS

The Audio Priority Status screen allows you to view which paging microphone has the “master” status in the voice system and the priority status of the active voice switch. There are no selectable items on this screen. From the Diagnostic Menu 5 screen, press the **F2** button to view the Audio Priority Status screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	A	U	D		P	R	I	O	R	I	T	Y		A	T	:		n	n	n
B	A	C	T	I	V	E		S	W		a	a	a	-	b	b	-	c	c	c
C	P	A	G	E		M	A	S	T	E	R		A	T	:					
D	P	N	L	a	a	a		A	D	R	b	b		c	c	c	c	c	c	c

Exhibit 5-34: Audio Priority Status Screen

Note: Each switch card and input module configured for voice operation on the voice system is configured with a priority level. These priority levels are used to resolve which switch has control priority over another switch that is programmed for the same operation. A switch with a lower priority setting cannot override a switch with a higher priority. Switch with the same priority setting can override another switch with the same priority setting or a lower priority setting.

- Row A (nnn) – Displays the current priority level active (0 – 254) at the panel. “000” indicates that no priority is active. The control panel will accept switch activations from switches with higher or equal priority.
- Row B (aaa-bb-ccc) – Displays the most recent switch input that was accepted by the panel.
 - “aaa” = panel ID or panel address of the switch
 - “bb” = peripheral bus address or loop number of the switch
 - “ccc” = switch number or device address
- Row D (aaa-bb-ccc) – Displays the location of the device that has control of the audio bus (i.e., digital paging card or remote paging card) for paging purposes.
 - “aaa” = panel ID
 - “bb” = peripheral bus address (2 - 32)
 - “ccc” = displays “DPM” if digital paging module is in control or “REM MIC” if remote paging card is in control.

5.8.3 PLAY MESSAGE ID STATUS

The Play Message ID Status screen allows you to view the voice message numbers being transmitted by the panel to the amplifiers. From the Diagnostic Menu 5 screen, press the **F3** button to view the Play Message ID Status screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	
A		A	C	T	I	V	E		M	E	S	S	A	G	E		I	D			
B	Z	O	N	E	:	0	0	0		P	:	n	n	n		S	:	x	x	x	
C	S	I	L	E	N	C	E	:	O	F	F					C	I	T	Y	:	x
D	M	N	S		R	E	S	E	T	:	n	n	n	D	I	S	A	B	L	E	

Exhibit 5-35: Play Message ID Status Screen

- Row B (Zone) – Allows you to select the zone number (1 – 253) that will be displayed in Row B. Use the +/- buttons to increment or decrement the zone number. The primary and secondary message numbers for the selected zone will be shown as **P:nnn S:xxx**; where “nnn” and “xxx” indicates the primary and secondary message numbers being played (Fire message = 1-16, MNS message = 101-116).
- Row C (Silence) – Indicates the silence status of the emergency communication system (**ON/OFF**).
- Row C (City) – Indicates the active city code being used by the voice system (if applicable). Valid city code must be set in the panel's configuration menus for this option to be visible.
- Row D (MNS Reset) – Displays the MNS RESET countdown time.
- Row D (Disable) – Displays the ENABLE or DISABLE status of the MNS RESET feature.

5.8.4 FAAST DETECTOR STATUS

The FAAST Detector Status screen allows you to view the current status levels transmitted by the detector to the panel. From the Diagnostic Menu 5 screen, press the **F4** button to view the FAAST Detector Selection screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	1	-	0	0	1	:	F	A	A	S	T		D	E	T	E	C	T	O	R
B	P	R	E	S	S		E	N	T	E	R		T	O		V	I	E	W	
C					F	A	A	S	T		S	T	A	T	U	S				
D					*	*	R	E	A	D	I	N	G	*	*					

Exhibit 5-36: FAAST Detector Selection Screen

- Row A – Allows you to select the loop (1 – 4) and address number (1 – 253) of the FAAST detector that will be displayed. Use the ◀▶ arrow buttons to position the cursor over the field; then press the +/- buttons to change the value at cursor. Rows B, C, and D will be blank until a valid FAAST detector loop and address is selected in Row A; then Rows B and C will indicate “PRESS ENTER TO VIEW FAAST STATUS”. Press the **ENTER** button to initiate the device read. Row D will indicate “**READING**” to confirm initiation of the device read operation. Once the device read is complete, the FAAST detector status screen will be displayed.

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	L	-	A	D	D		S	F	:	*	L	V	:		T	I	M	:		
B	C	F	G	:		A	S	P	:		F	D	:		L	E	D	:	0	
C	D	I	S	:		D	I	R	:	*	F	U	:		A	:	0	0	0	%
D	C	O	M	:		D	B	L	:		F	M	:		0	.	0	0	0	0

Exhibit 5-37: FAAST Detector Status Screen

- Row A (L-ADD) – Displays the loop (1 – 4) and address number (1 – 253) of the FAAST device being displayed.
- An asterisk (*) will be displayed in each status field when the applicable fault is active:
 - SF (Sensor Fault) – Sensor fault has occurred.
 - LV (Low Voltage) – Voltage supplied to detector has dropped to minimum operating range.
 - TIM (Time) – Detectors internal time has not been set.
 - CFG (Configuration Fault) – Detector has not been configured.
 - ASP (Aspirator Fault) – Detector aspirator has stopped functioning.
 - FD (Filter Door Open) – Filter door has been removed and not replaced.
 - LED (N/A LED is on or off) – Press F1 to toggle this LED on (1) or off (0).
 - DIS (Disable) – Detector has been disabled.
 - DIR (Drift Fault – IR Laser) – The IR sensor has reached its allowable drift limit.
 - FU (Filter Urgent) – Detector filter has been clogged for more than 72 hours.
 - A – Detectors airflow percentage.
 - COM (Communication) – Peripheral communication has failed and device is not functioning properly.
 - DBL (Drift Fault – Blue LED) – The LED sensor has reached its allowable drift limit.
 - FM (Filter Minor) – Detector filter is clogged and needs to be changed.
 - OBSCRUATION LEVEL – Current detector obscuration level (%/ft.).

5.9 VOLTAGES

The main control board has two primary test points that are used when making voltage measurements on the board:

TP1 = COM

This test point should be used when making DC voltage measurements on the control board. Connect the voltmeter ground lead to this terminal; then touch the positive lead to the point under test.

TP2 = 24V

This test point is the + side for the main controller 24VDC power bus (connect the voltmeter ground to TP1). Check this point if AC power is applied, but the system does not seem to operate properly.

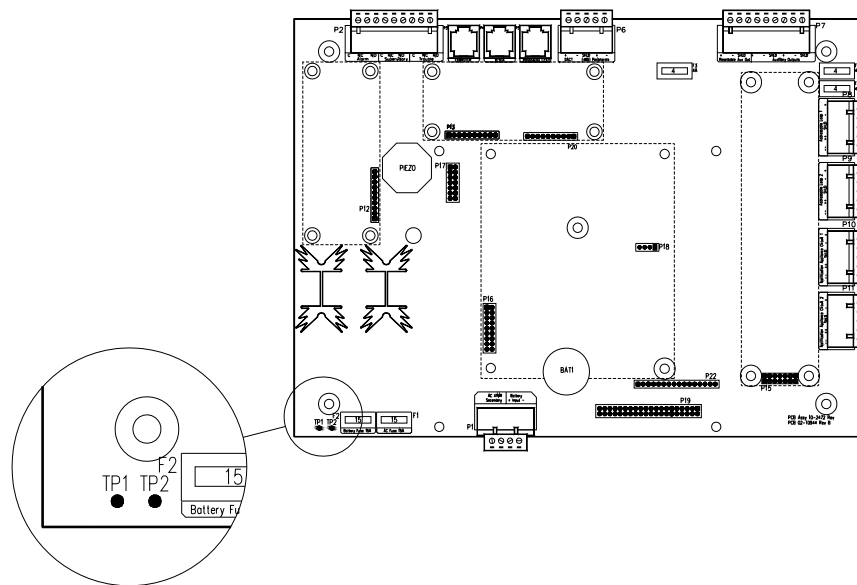


Exhibit 5-38: Control Board Test Points

LOOP VOLTAGE

Nominally 24 VDC, with a data communication pulse that drops down to a level between 0 - 5 VDC. During normal operation, a meter should measure anywhere from 0 - 24 VDC. It should never measure a constant 0 VDC.

GROUND FAULT, TP1 to Chassis

With a normal panel and no ground fault, this voltage is 2.17 VDC nominal (<) or 5.0 VDC nominal (>). If a ground fault is present, this voltage will sway in either direction. Use the Diagnostic screen to troubleshoot the ground fault. Ground fault detection impedances are 60K ohm between power ground and chassis ground or 1M ohm between main power and chassis ground.

Reserved for future use.

6.1 OVERVIEW

To ensure operational integrity, the CyberCat system should be properly tested and inspected at prescribed intervals as required by NFPA 72, National Fire Alarm and Signaling Code and the local Authority Having Jurisdiction (AHJ). The property or building owner is responsible for testing and maintaining the system. The owner can designate a representative (often the building manager) to be responsible for ensuring that the system is properly tested and maintained.

If the owner or designated representative does not choose to perform the testing and maintenance of the system or is not allowed to due to licensing laws or certification requirements, the owner shall contract with a qualified contractor to perform these services. Qualified personnel can include those persons that are:

- A. Factory Trained and Certified
- B. Certified by a nationally recognized certification organization acceptable to the authority having jurisdiction.
- C. Registered, licensed, or certified by State or Local Authority
- D. Trained, qualified and employed by an organization listed by a national testing laboratory

Records of all testing and maintenance shall be kept on the protected premises for a period of at least five (5) years. System defects and malfunctions shall be corrected. If a defect or malfunction is not corrected at the conclusion of system inspection, testing, or maintenance, the system owner or owner's designated representative shall be informed of the impairment in writing.

6.2 ROUTINE MAINTENANCE

Certain components of the CyberCat require replacement at regular intervals, even though no obvious sign of failure is present.

- Batteries (Lead Acid) - Replace every 3 years according to date of manufacture
- Battery (Lithium Coin cell) - Replace every 5 years with Fike battery P/N 02-4040 only. Use of another battery may present a risk of fire or explosion.

The lithium battery is located on the front of the CyberCat control board (bottom-center). To replace the lithium battery, use the following procedure:

1. Connect to the CyberCat panel using C-Linx software and download the system configuration before attempting to replace the lithium battery. Failure to do so will result in loss of system configuration.
2. Remove power from panel (AC and batteries) and wait 60 seconds before proceeding.
3. Remove the lithium battery by using thumb and forefinger to slide the coin cell from the battery holder on the system controller.
4. Insert new battery (P/N 02-4040) making sure to observe polarity marking on the battery holder.
5. Dispose of used battery promptly. Keep away from children. Do not disassemble and do not dispose of in fire.
6. Reapply power to the panel (AC and batteries).
7. Connect to the CyberCat panel using C-Linx software and upload the system configuration into the control board.
8. Verify proper operation of system.

6.3 FUSE REPLACEMENT

The CyberCat controller has five replaceable fuses (standard automotive) as shown in Exhibit 6-1. These fuses provide over current protection for the controller and are rated as followed:

- F1 – Primary AC Power input, 15 Amp (P/N 02-4174)
- F2 – Battery Power input, 15 Amp (P/N 02-4174)
- F3 – Auxiliary Power circuit #1, 4 Amp (P/N 02-11412)
- F4 – Auxiliary Power circuit #2, 4 Amp (P/N 02-11412)
- F5 – Auxiliary Power circuit #3, 4 Amp (P/N 02-11412)

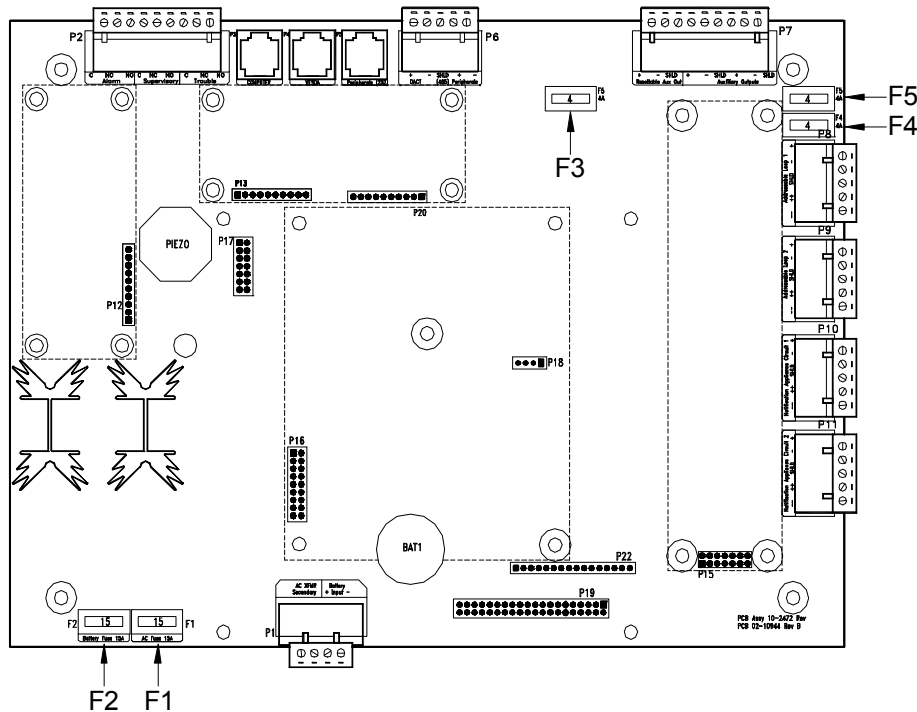


Exhibit 6-1: Controller Fuse Locations

If the Supplemental Power Supply is installed, it is equipped with five replaceable fuses (standard automotive) as shown in Exhibit 6-2. These fuses provide over current protection for the controller and are rated as follows:

- F1 – Primary AC Power input, 15 Amp (P/N 02-4174)
- F2 – Battery Power input, 15 Amp (P/N 02-4174)
- F3 – Auxiliary Power circuit #1, 4 Amp (P/N 02-11412)
- F4 – Auxiliary Power circuit #2, 4 Amp (P/N 02-11412)
- F5 – Auxiliary Power circuit #3, 4 Amp (P/N 02-11412)

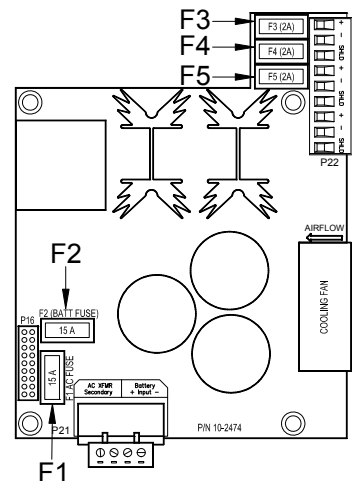


Exhibit 6-2: SPS Fuse Locations

6.4 PANEL MAINTENANCE MENUS

The CyberCat's Maintenance Menu provides several features that can be used by service personnel to maintain and test the addressable devices connected to the panel's SLC circuits. It is intended for those who are trained and authorized to service Fike systems. Certain functions of the maintenance menus are password protected to prevent unauthorized access. To gain access to the password protected functions, you must enter a valid Level 2 or 3 password. See Section 2.2.1 for instructions on how to log onto the system. Entering a Level 2 password restricts the maintenance menu options that you are able to use (as noted).

6.4.1 MAINTENANCE MENU 1

From the Top Level Menu, press the **F5** button to access the Maintenance menu:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A			M	A	I	N	T	E	N	A	N	C	E		M	E	N	U		
B	F	1	-	D	E	V		R	D			F	4	-	W	A	L	K	T	S
C	F	2	-	D	E	V		A	D	R		F	5	-	B	U	Z	Z	E	R
D	F	3	-	D	E	V		R	P	L		F	6	-	M	E	N	U		2

Exhibit 6-3: Maintenance Menu

Press the corresponding function button to display the selected maintenance screen:

- F1** = Read device loop/address
- F2** = Assign loop/address to device
- F3** = Replace device sequence
- F4** = Select Walktest mode
- F5** = Disable on-board buzzer
- F6** = Maintenance Menu 2

6.4.1.1 DEVICE READ

The Device Read screen allows you to see the address and device type of the most recent device attached to the loop. From the Maintenance Menu, press the **F1** button to access the Device Read screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		M	O	S	T		R	E	C	E	N	T		D	E	V	I	C	E	
B		A	T	T	A	C	H	E	D		T	O		P	A	N	E	L		
C		L	O	O	P	:	1		A	D	D	R	E	S	S	:	N	N	N	
D		T	Y	P	E	:	D	E	V	I	C	E		T	Y	P	E			

Exhibit 6-4: Device Read Screen

- Row C - Displays the ADDRESS of the most recent device attached to the loop. To read a device address, either add it to the loop while this screen is displayed, or temporarily remove and replace the device for panel to read the address.
- Row D - Displays the device type of the most recently identified address in Row C.

Note: Pressing the **ENTER** button will clear the loop and address to zeroes and the type message to blanks.

Note: If at any time during a DEVICE READ there is a communication error between the panel and the device the panel will display "DEVICE COMM ISSUES" then a re-read of the device MUST be performed.

6.4.1.2 DEVICE ADDRESS

The Device Address screen allows you to automatically assign an address to a new device or change the address of an existing device connected to the panel. From the Maintenance Menu, press the **F2** button to access the Device Address screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	
A				S	E	L	E	C	T		A	D	D	R	E	S	S				
B		L	O	O	P	:	1				A	D	D	R	E	S	S	:	0	0	1
C																					
D	P	R	E	S	S		E	N	T	E	R		T	O		S	T	A	R	T	

Exhibit 6-5: Device Address Screen

- Row B - Allows you to set the desired new address number to be used. Use the ◀▶ arrow buttons to move the cursor under the Loop and Address fields; then use the +/- buttons to increment/decrement the fields.
- Row D - Press the **ENTER** button to start the automatic address function. See Exhibit 6-6.

Note: Once **ENTER** is pressed, the panel needs to see a NEW DEVICE record for the device. Either add the new device to the loop at this time or remove and replace the single device. This menu does not alter the configuration or the panel supervision. Those functions will need to be completed for appropriate operation and supervision.

The screen will prompt you to connect a new device (or temporarily remove and replace the desire device to be addressed to the loop), then press **ENTER**:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		C	O	N	N	E	C	T			D	E	V	I	C	E		T	O	
B		A	D	D	R	E	S	S	A	B	L	E		L	O	O	P			
C		P	R	E	S	S		E	N	T	E	R		W	H	E	N			
D		C	O	M	P	L	E	T	E											

Exhibit 6-6: Device Address Process Screen

The panel will indicate that it has detected a new device and will record a new device message in the history buffer. Once the **ENTER** button is pressed, the panel will record the device with the new address (the panel will auto-increment the address number after each successful address write):

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		C	O	N	N	E	C	T		D	E	V	I	C	E		T	O		
B		A	D	D	R	E	S	S	A	B	L	E		L	O	O	P			
C					*	N	E	W		D	E	V	I	C	E	*				
D					*	D	E	T	E	C	T	E	D	*						

Exhibit 6-7: Device Address/New Device Screen

After each successful address write, the panel will indicate that the process has been completed and will prompt the user to press the **ENTER** button to address the next device. The panel will increment to the next device address automatically after the **ENTER** button has been pressed:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		L	O	O	P	:	1		A	D	D	R	E	S	S	:	N	N	N	
B		D	E	V	I	C	E		A	D	D	R		C	H	A	N	G	E	
C						C	O	M	P	L	E	T	E	D						
D		E	N	T	E	R		F	O	R		N	E	X	T		D	E	V	I

Exhibit 6-8: Device Address/Change Screen

Note: Row C will display “FAILED” if an error occurred during the write process.

6.4.1.3 DEVICE REPLACE

The Device Replace screen allows you to replace a sensor type device already connected to the panel with a new (like) device and write the configuration of the original device into the new device. A successful Level 2 or higher password is required to access this feature. From the Maintenance Menu, press the **F3** button to access the Device Replace screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A				S	E	L	E	C	T		A	D	D	R	E	S	S			
B		L	O	O	P	:	1		A	D	D	R	E	S	S	:	0	0	1	
C		T	Y	P	E	:		P	H	O	T	O		S	E	N	S	O	R	
D		P	R	E	S	S		E	N	T	E	R		T	O		S	T	A	R

Exhibit 6-9: Device Replace Menu

- Row B - Allows you to select the loop and address of the device to be replaced. Use the ◀▶ arrow buttons to move the cursor under the Loop and Address fields; then use the +/- buttons to increment/decrement the fields.
- Row C - Displays the type of device associated with the Loop and Address selected in Row B.
- Row D - Press the **ENTER** button to start the device replace function.

Note: The replacement device MUST be the same type of device as the device being replaced. Testing of the changed device is recommended after replacement.

Note: This process requires a device originally connected with a valid configuration. It is useful for fixing maintenance troubles, but not DEVICE MISSING or DEVICE ERROR: 2000 troubles. C-Linx should be used for sending configurations.

Once the source device loop/address has been selected and the **ENTER** button has been pressed, the panel will read the configuration from the selected device and store it in the panel. Retrieval of the configuration can take several seconds. Do not press any buttons or navigate away from this screen while the “Retrieving Config From Device” message is displayed. Doing so may cause loss of configuration data. If the device configuration is already stored in the panel, the screen shown in Exhibit 6-11 will be immediately displayed. The following screen will only be displayed if the panel memory does not already hold a configuration for the device:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		R	E	T	R	I	E	V	I	N	G		C	O	N	F	I	G		
B					F	R	O	M		D	E	V	I	C	E					
C					>	>	>	>	>	>	>	>	>	>	>	>	>	>	>	<
D					P	L	E	A	S	E		W	A	I	T					

Exhibit 6-10: Retrieving Configuration Screen

The panel will then prompt you to replace the device and press the **ENTER** button to proceed:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		R	E	P	L	A	C	E		D	E	V	I	C	E		O	N		
B		A	D	D	R	E	S	S	A	B	L	E		L	O	O	P			
C		P	R	E	S	S		E	N	T	E	R								
D		W	H	E	N		C	O	M	P	L	E	T	E						

Exhibit 6-11: Device Replace Screen

The panel will send the device configuration stored in the panel to the new device. The serial number stored in the panel for the replaced device will be replaced with the serial number from the new device. The following screen will be displayed to show that the process is proceeding:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A					C	O	N	F	I	G	U	R	I	N	G					
B					N	E	W		D	E	V	I	C	E						
C					>	>	>	>	>	>	>	>	>	>	>	>	>	>	>	<
D					P	L	E	A	S	E		W	A	I	T					

Exhibit 6-12: Device Configuration Screen

- Row D - Displays COMPLETED once the device has been configured.

The panel will record a DEVICE REPLACE OK (or FAIL, if there was a failure) event in the history buffer once the device replacement process is complete. The following screen will appear automatically to allow replacement of another device:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		R	E	P	L	A	C	E		S	U	C	C	E	E	D	E	D		
B		L	O	O	P	:	1		A	D	D	R	E	S	S	:	0	0	1	
C		T	Y	P	E	:		P	H	O	T	O		S	E	N	S	O	R	
D		E	N	T	E	R		F	O	R		N	E	X	T		D	E	V	I

Exhibit 6-13: Device Replace Success Screen

The panel will perform a reset and log a CONFIG CHANGE TIMEOUT record at the conclusion of the device replacement if there is no button entry within 100 seconds.

6.4.1.4 WALK-TEST

The Walk-Test screen allows you to place the panel into the walk-test mode by selecting the mode of operation to be used by the panel during the walk-test. A successful Level 3 or higher password is required to access this feature. From the Maintenance Menu, press the **F4** button to access the Walk-Test Mode screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	S	E	L	E	C	T		W	A	L	K	T	E	S	T		M	O	D	E
B								D	I	S	A	B	L	E	D					
C																				
D	T	I	M	E	O	U	T	:		1		H	O	U	R	(S)		

Exhibit 6-14: Walk-Test Mode Screen

- Row B – Displays DISABLED if the walk-test function has not been Enabled through the panel's Configuration Menu 3. Walk-test must be enabled before the features of this screen become available. Refer to Fike document 06-539, "CyberCat Programming Manual" for instructions on how to ENABLE walk-testing.

Once the walk-test feature is Enabled, the mode of operation for walk-testing can be selected:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	S	E	L	E	C	T		W	A	L	K	T	E	S	T		M	O	D	E
B								N	O	T		A	C	T	I	V	E			
C								E	N	T	E	R		T	O		S	E	L	E
D	T	I	M	E	O	U	T	:		1		H	O	U	R	(S)		

Exhibit 6-15: Walk-Test Mode Screen

- Row B - Allows you to select the walk-test mode to use. Will display "NOT ACTIVE" until the **ENTER** button is pressed to toggle between the two walk-test modes.

Mode 1 – Buzzer ON - the local piezo will also sound with the activation of the alarm events.

Mode 2 – Buzzer OFF - the local piezo will be silent with the activation of the alarm events.

Once the proper walk-test mode has been selected, the panel is locked into the walk-test mode and all normal panel operations are suspended. The panel will remain in the walk-test mode until it is reset or the time-out feature set in Row D expires.

- Row D - Allows you to select how many hours should pass with no events before walk-test mode times out (1-4 hrs.). Use the **◀▶** arrow buttons to move the cursor under the field; then use the **+/-** buttons to increment/decrement the field.

Note: Devices programmed for walk-test with IR will immediately issue a "TEST ALARM" status upon entry into this menu.

Input Devices:

By default, all input devices (i.e., detectors and monitor modules) will participate in a system walk-test. Detector devices (i.e., photo, photo/heat, photo/duct, ionization and heat detectors) can be configured using the panel's configuration software C-Linx to allow for walk-testing using canned smoke or Fike's IR tool. The IR tool must be used for duct detector walk-testing. Devices may only be activated once during the walk-test mode. Detectors indicate that they are in the walk-test mode by blinking their LEDs green then red when tested. Detector LEDs will return to normal operation (flash green every 5 seconds) when alarm condition clears.

Output Devices:

Each output device (i.e., control module, relay module and NAC) can be individually programmed to participate in a system walk-test. Outputs will activate continuous (4 second duration) if programmed for the specific Zone and State of the activated input device. This allows you to get an audible feedback from system output devices each time a device is tested. By default, here is how the output devices come configured:

Control Module (P/N 55-042/55-047): Configured to respond to walk-test

Relay Module (P/N 55-043/55-048): Configured NOT to respond to walk-test

NAC1 (P10) and NAC2 (P11): Configured to respond to walk-test

A. PANEL WALK-TEST

When walk-test is executed from control panel, all devices programmed for walk-test will enter the walk-test mode. Utilize the following procedure to perform the walk-test:

1. Enable walk-test operation from the control panel's Maintenance Menu, F5-Maint > F4-WALKTS. If the screen indicates walk-test DISABLED, utilize the panel's Configuration menu F1-CONFIG > F6-MENU 2 > F6-MENU 3 > F2-WALK to ENABLE walk-test operation for the panel. This requires an administrator level password to change.

Note: Detectors programmed for walk-test with IR will automatically issue a TEST ALARM message upon activation of the walk-test mode through the control panel. Detectors will indicate that they are in the walk-test mode by blinking their LEDs green then red continuously until the control panel is reset.

2. Proceed to the first device to be tested.
3. Activate the device using canned smoke (detectors), manual activation (monitor modules) or DUCT detector Remote Test Station (DUCT detectors). Verify alternating red and green LEDs on device.
4. Device broadcasts a TEST ALARM message. Message displays on the control panel LCD and remote displays (if applicable).
5. Audible devices programmed to respond to this device's activation turn on for 4 seconds (continuous).
6. When test smoke clears from a detector or after a monitor module is deactivated, device being tested will exit the test mode and the device LED returns to normal operation (flash green every 5 seconds).
7. After all devices are tested, download the panel history for testing records.
8. Reset the control panel to return it to normal operation. Panel will be reset automatically after a maximum of 4 hours.

B. IR TOOL WALK-TEST

When walk-test is executed using the IR tool, only the selected device will enter the walk-test mode excluding DUCT detectors with Remote Test Stations. All other devices will continue to operate normally. Utilize the following procedure to perform the walk-test:

1. Enable IR communication from the control panel's Top Level Menu, F6-IR COMM for addressable loop being tested.
2. Proceed to the first device to be tested.
3. IR select the device with the IR tool. Verify selection with flashing green LEDs.
4. Send test alarm command with the IR tool. Verify alternating red and green LEDs on device.
5. Device broadcasts a test alarm message. Message displays on control panel LCD and remote displays (if applicable).
6. Audible devices programmed to respond to this device's activation turn on for 4 seconds (continuous).
7. IR de-select the device or select next device to be tested (if IR single select is enabled). Device being tested exits the test mode and the device LED returns to normal operation (flash green every 5 seconds).
8. After all devices are tested, download the panel history for testing records.
9. Disable IR communication for respective addressable loop. Devices require significantly more power when their IR receivers are continually active.
10. Reset the control panel to return it to normal operation. Panel will be reset automatically after a maximum of 4 hours.

6.4.1.5 BUZZER

This menu allows the user to turn off the panel's on-board buzzer during service and testing. A successful Level 3 or higher password is required to access this feature. From the Maintenance Menu, press the **F5** button to access the Buzzer screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A																				
B			B	U	Z	Z	E	R		O	P	E	R	A	T	I	O	N	:	
C								N	O	R	M	A	L							
D																				

Exhibit 6-16: Buzzer Screen

- Row C - Use the ◀▶ arrow buttons to move the cursor under the field; then use the +/- buttons to toggle the field between NORMAL/DISABLED.

Note: The buzzer will remain disabled until the panel is reset, at which point it will return to normal operation.

6.4.2 MAINTENANCE MENU 2

From the Maintenance Menu 1 screen, press the **F6** button to access the Maintenance Menu 2 screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		M	A	I	N	T	E	N	A	N	C	E		M	E	N	U		2	
B	F	1	-	M	N	S		R	S	T		F	4	-	C	F	G		R	D
C	F	2	-	M	N	S		S	I	L		F	5	-	F	A	A	S	T	
D	F	3	-	S	W		T	I	M	E		F	6	-	A	H	U		O	N

Exhibit 6-17: Maintenance Menu 2

Press the corresponding function button to initiate the selected function or display the selected maintenance screen:

F1 = Mass Notification System Reset

F2 = Mass Notification System Silence

F3 = Switch Timeout (*blank unless panel is configured for City of Chicago Operation*)

F4 = Device Configuration Read

F5 = FFAST

F6 = AHU On

6.4.2.1 MASS NOTIFICATION SYSTEM RESET

When the voice system amplifiers are activated for mass notification (MNS), they cannot be reset using the standard control panel reset switches. The MNS Reset function provides a means for the system operator to reset the MNS system from the control panel (local or network). Resetting the MNS system does not impact the operation of any active Fire Alarm inputs or outputs.

From the Maintenance Menu 2 screen, press the **F1** button to reset the mass notification system.

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		M	A	I	N	T	E	N	A	N	C	E		M	E	N	U		2	
B	F	1	-	*	*	*	*	*	*	*		F	4	-	C	F	G		R	D
C	F	2	-	M	N	S		S	I	L		F	5	-	F	A	A	S	T	
D	F	3	-	S	W		T	I	M	E		F	6	-	A	H	U		O	N

Exhibit 6-18: MNS Reset Screen

- Row B - Once **F1** is pressed, the display will show "*****" for about one second. Any amplifiers activated for MNS operation and active MNS switches will return to normal operation. The MNS contact on the FCC digital paging card will deactivate unless configured for latching operation. A system administrator level password is required for this switch to function.

6.4.2.2 MASS NOTIFICATION SYSTEM SILENCE

When the voice system amplifiers are activated for mass notification (MNS), they cannot be silenced using the standard control panel silence switches. The MNS Silence function provides a means for the system operator to silence the MNS system from the control panel (local or network). Silencing the MNS system does not impact the operation of any active Fire Alarm inputs or outputs.

From the Maintenance Menu 2 screen, press the **F2** button to silence the mass notification system.

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A		M	A	I	N	T	E	N	A	N	C	E		M	E	N	U		2	
B	F	1	-	M	N	S		R	S	T		F	4	-	C	F	G		R	D
C	F	2	-	*	*	*	*	*	*	*		F	5	-	F	A	A	S	T	
D	F	3	-	S	W		T	I	M	E		F	6	-	A	H	U		O	N

Exhibit 6-19: MNS Silence Screen

- Row C – Once **F2** is pressed, the display will show “*****” for about one second. Any amplifiers activated for MNS operation will silence. A system administrator level password is required for this switch to function.

6.4.2.3 SWITCH OPERATION

When configured for City of Chicago operation, the CyberCat panel's DRILL and SILENCE switches on the main display are disabled in order to comply with local code requirements. The Switch Timeout screen allows the user to temporarily enable the DRILL and SILENCE switches for a period of 0 – 24 hours for inspection and testing purposes. This menu option only becomes visible if the panel is configured for COC operation and a successful factory level password is entered. From the Maintenance Menu 2, press the **F3** button to access the screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A	E	N	A	B	L	E		D	R	I	L	L	/	S	I	L	E	N	C	E
B				S	W	I	T	C	H	E	S		F	O	R	:				
C						0	0		H	O	U	R	S							
D																				

Exhibit 6-20: Switch Timeout Screen

- Row C - Use the ◀▶ arrow buttons to move the cursor under the field; then use the +/- buttons to increment or decrement the field between 0 and 24 hours. The panel must be reset for the switches to become operable. The switch will return to their normal, disabled state after the countdown timer expires or the panel is reset.

Note: Other system switches configured for Drill and Silence operation are not affected by this operation.

6.4.2.4 DEVICE CONFIGURATION READ

This menu provides a means to read the configuration of all addressable devices connected to the panel. From the Maintenance Menu 2, press the **F4** button to access the screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A			R	E	A	D		A	L	L		D	E	V	I	C	E	S		
B			O	N		L	O	O	P	S	:	1	2	3	4					
C	P	R	E	S			E	N	T	E	R		T	O		S	T	A	R	T
D	D	E	V	I	C	E	S		T	O		R	E	A	D	:	N	N	N	N

Exhibit 6-21: Configuration Read Screen

- Row B - Use the ◀▶ arrow buttons to move the cursor under the loop number; then use the +/- buttons to select or deselect the loop for reading. Press **ENTER** to start the "Reading" process.
- Row D - 'NNNN' shows the total number of devices the panel will read. This number will decrement each time a device has been read.

For systems with a large number of devices to be read, the screen will return to the 'System Normal' display after a few minutes of inactivity. The 'System Normal' display will indicate the current status of the configuration read until completed.

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
A			C	Y	B	E	R		C	A	T			V	7	.	2	X		
B		*	R	E	A	D	I	N	G		D	E	V	:	1	-	0	0	2	*
C		D	E	V		R	E	M	A	I	N	I	N	G	:	0	0	0	9	
D	A	L	:	0	0	0		S	U	:	0	0	0		T	R	:	0	0	0

Exhibit 6-22: System Normal Screen with Configuration Read Active

- Row B - Displays the loop and address of the device currently being read.
- Row C - Displays the number of devices remaining to be read.

Once all devices have been read, the 'System Normal' screen will be displayed.

6.4.2.5 FAAST

This menu provides a means to read the diagnostic condition of the FAAST detector connected to the panel, as well as isolate and disable the detector. The isolate condition allows the unit to continue to operate and annunciate alarms without affecting outputs. The disable condition turns off the detector fan and prevents the device from detecting alarms. The disable condition will be maintained through panel reset. From the Maintenance Menu 2, press the **F5** button to access the screen:

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	
A	L	O	O	P	:	1		A	D	R	:	0	0	1	-	0	2	0			
B	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	
C	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
D	F	1	-	R	D			F	2	-	I	S	O	L		F	3	-	D	I	S

Exhibit 6-23: FAAST Screen

- Row A - Use the ◀▶ arrow buttons to move the cursor under the loop number and address range fields; then use the +/- buttons to select the loop and address range.
- Row B – These numbers act as placeholders for the range of addresses selected in Row A.
- Row C – Shows the status letter for the FAAST detector that aligns with the address number on Row B. Only FAAST detectors are displayed. Non FAAST detectors are shown as “-”.
 - F** = indicates that the detector is not isolated or disabled.
 - I** = indicates that the detector is isolated.
 - D** = indicates that the detector is disabled.
- Row D – Displays the actions that are available for the FAAST detector selected in Row C.
 - F1-RD** = forces a read of the diagnostic condition of the FAAST detector.
 - F2-ISOL** = sends the isolate (if the letter is **F** in row C) or de-isolate (if the letter is **I** in row C) command to the FAAST detector.
 - F3-DIS** = sends the disable (if the letter is **F** in row C) or enable (if the letter is **D** in row C) command to the FAAST detector.

6.4.2.6 AHU ON

This menu provides a means to manually turn off all addressable relays configured for AHU shutdown. From the Maintenance Menu 2, press the **F6** button to initiate ‘AHU RESTART’.

	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	
A		M	A	I	N	T	E	N	A	N	C	E		M	E	N	U		2		
B	F	1	-	M	N	S		R	S	T		F	4	-	C	F	G		R	D	
C	F	2	-	M	N	S		S	I	L		F	5	-	F	A	A	S	T		
D	F	3	-	S	W			T	I	M	E		F	6	-	A	H	U		O	N


Exhibit 6-24: AHU ON Screen

- Row D – When F6 is pressed, the AHU ON is replaced with “*****” while the panel sends the “AHU Restart” command to the addressable relays.


Note: This switch function only becomes active with a ‘System Administrator’ level password.

Reserved for future use.

A.1 CYBERCAT MENU STRUCTURE (V7.20)

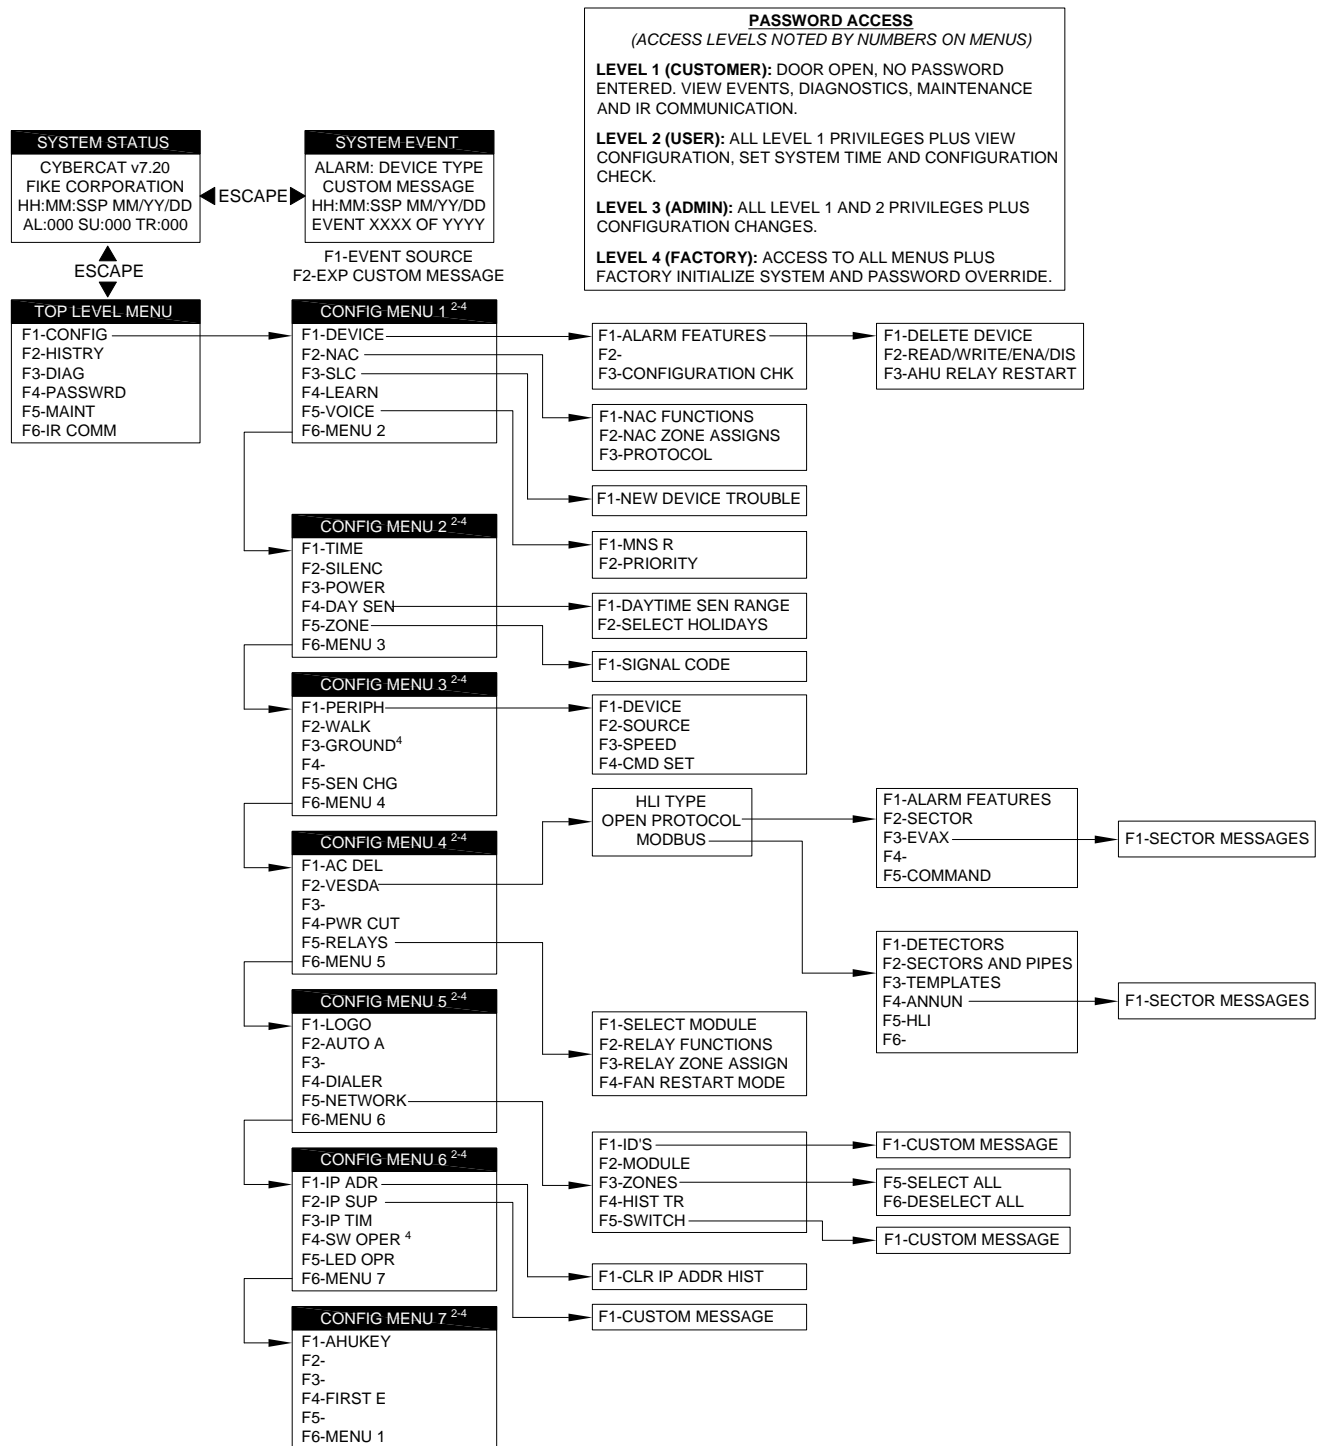

A.2 CYBERCAT MENU STRUCTURE (V7.20)

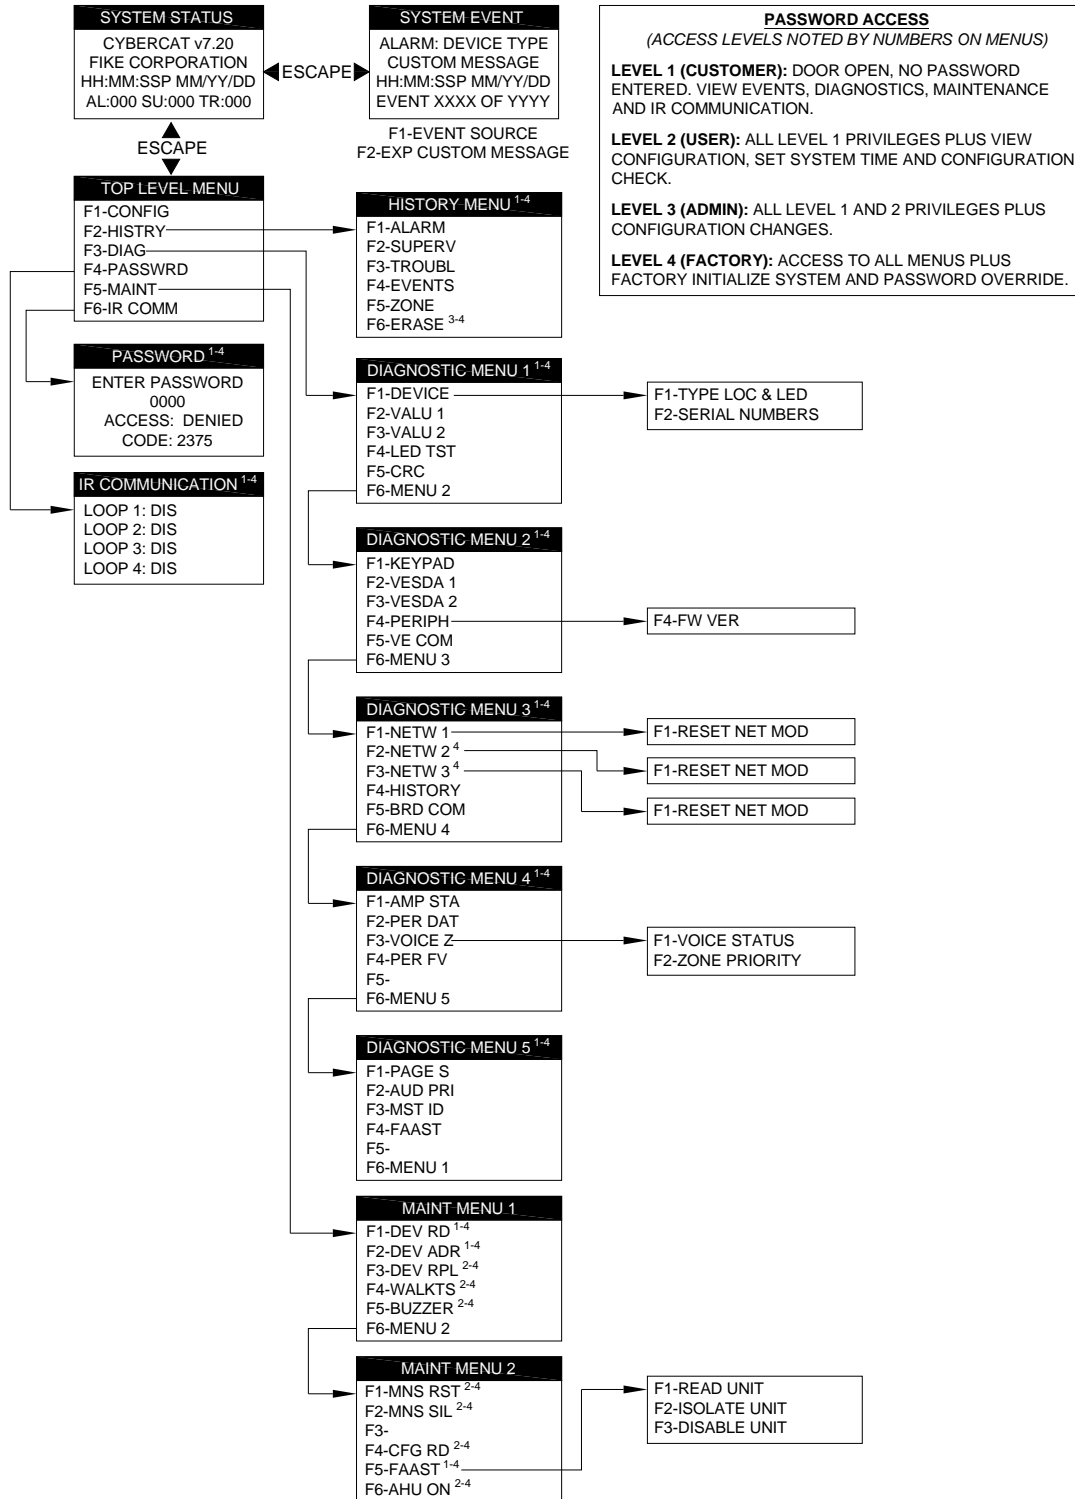



Fike®

CONTACT US

Fike World Headquarters

704 SW 10th Street

Blue Springs, Missouri 64015 USA

Tel: +001 816-229-3405

Toll Free (US Only): 1-800-YES-FIKE (1-800-937-3453)

www.Fike.com

For a list of contact information for Fike offices around the world, visit the **Global Locations** section of Fike.com